


Quick Start Guide

iX4P


iX4E

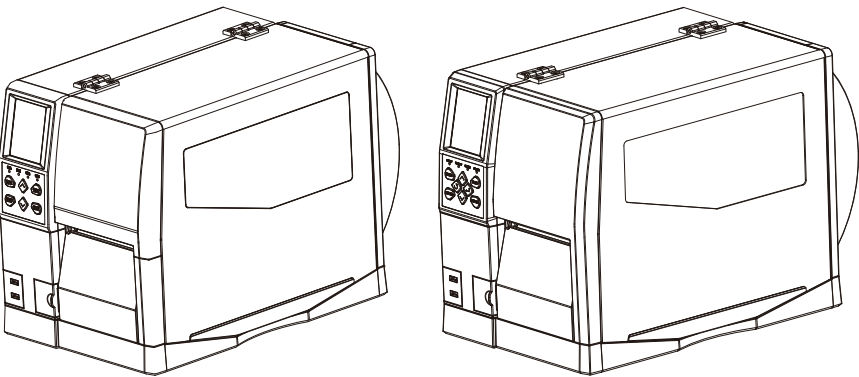


Caution:
In a domestic environment this product may cause radio interference in which the user may be required to take adequate measures.

Xiamen Hanin Co., Ltd.
ADD: No.96, Rongyuan Road, Tong'an District, Xiamen, Fujian, China 361100
WEB: www.idprt.com


Packing List

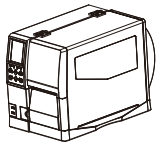

Printer

 

Power Cord

 

USB Cable




Quick Start Guide

Note: The packing items are actually based on the order.


Appearance and Components

Front View

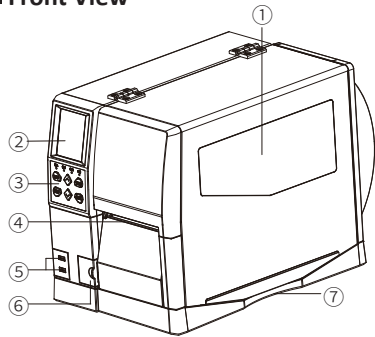


- 1 Cover Assembly
- 2 Display
- 3 Control Panel
- 4 Exit Slot
- 5 USB Host
- 6 Cover of Extend Ports
- 7 Cover Opening

Rear View

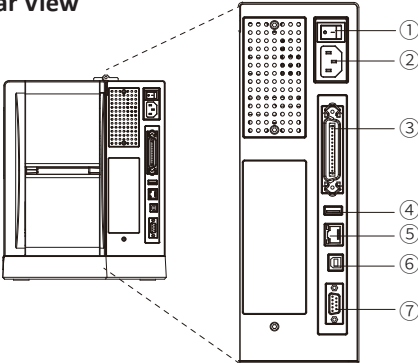


- 1 Power Switch
- 2 AC Power Port
- 3 Parallel Port
- 4 USB Host
- 5 Ethernet Port
- 6 USB B-type
- 7 Serial Port

iX4E Control Panel

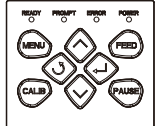


- | | |
|-------------|--|
| Menu | In standby, long press the menu operation function to enter the display |
| Calibration | In standby or the error light slow flash, long press the <i>Start Label Learning</i> |
| Feed | Much more detailed information please refer to the <i>iX4P/E User Manual</i> |
| Pause | In Printing: short press to pause print, long press to clear current print task |
| | Printing Pause: short press to keep printing, long press to clear current print task |
| Navigation | Only can be used with the display |

iX4P Control Panel

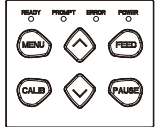



Appearance and Components

Inside View (Take iX4E for example)

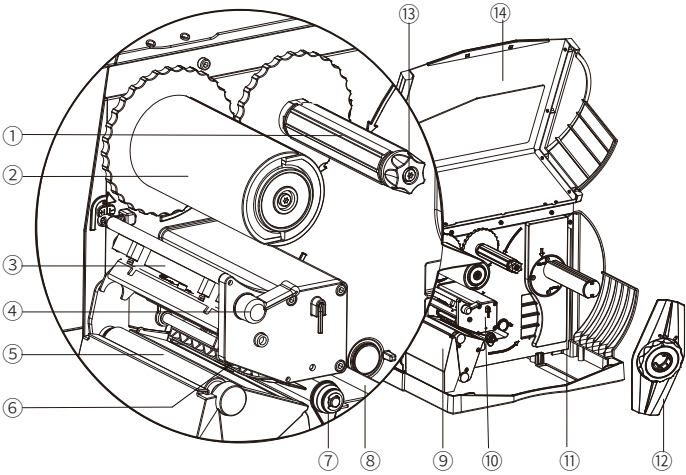


- 1 Ribbon Supply Spindle
- 2 Ribbon Take-up Spindle
- 3 Print Head Module
- 4 Print Head Lever
- 5 Platen Roller
- 6 Media Sensor
- 7 Paper Guide
- 8 External Media Guide
- 9 Filler Block
- 10 Print Mechanism
- 11 Media Supply Spindle
- 12 Media Supply Guide
- 13 Ribbon Latch
- 14 Side Cover


Print Mechanism

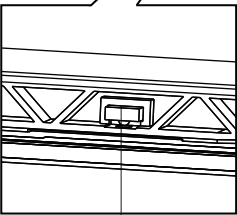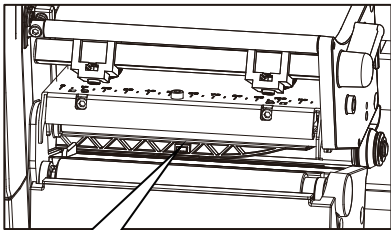


Media Sensor

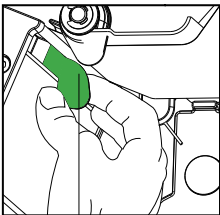

Media Adjusting Lever

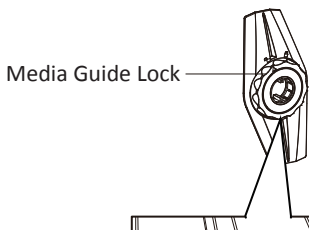

Media Guide Lock

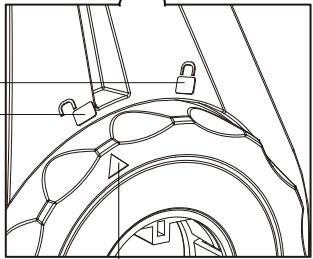

Arrow mark for Lock or Unlock

Note: The views above are for your reference. Ports vary by your choice.

FCC WARNING:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause unde sired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment isoperated in a commercial environment. This equipment generates, uses, and canradiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operationof this equipment in a residential area is likely to cause harmful interference in whichcase the user will be required to correct the interference at his own expense.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

Loading the Ribbon


1. Place the printer on the flat table, lift the cover from the bottom-right of printer by hands.

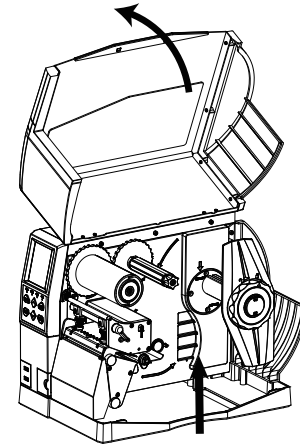


2. Load the out side ink ribbon into ribbon supply spindle, then anticlockwise tighten the ribbon latch to fix the ribbon.

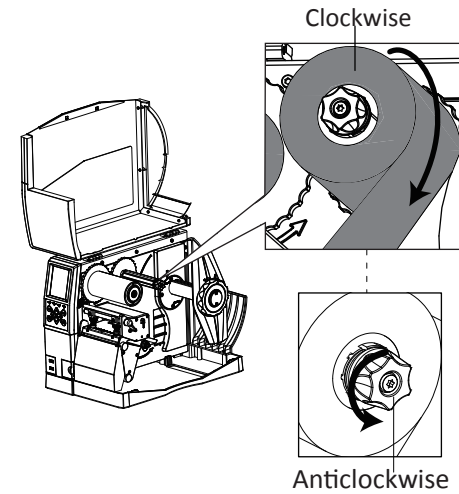

3. Pull a part of ribbon, then pass the ribbon between the print mechanism and the media sensor.

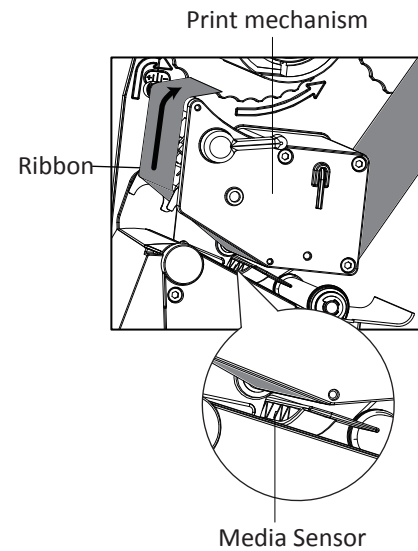


4. Pass the ribbon over the print mechanism and the ribbon take-up spindle, and then wrap it several turns around the ribbon take-up spindle.

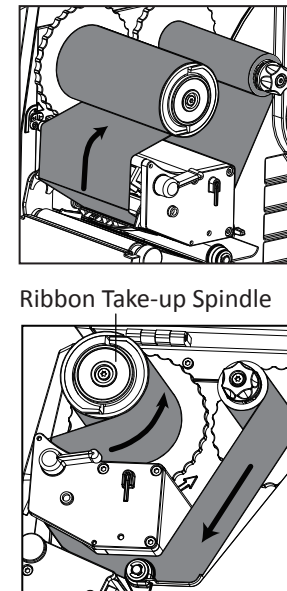


Loading the Paper


1. Rotate the arrow mark that locates in media guide lock of media spindle to unlocking position, then remove the media guide.

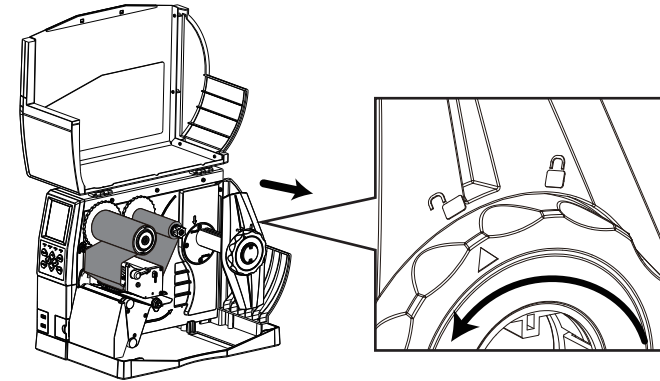

2. Mount a label roll onto the media spindle. Be sure to push the roll all the way aligned the inner wall of the printer. After the label roll be loaded, put the media guide back on the media spindle. Then rotate the arrow mark that locates in unlocking position to lock position so that it can be latched.

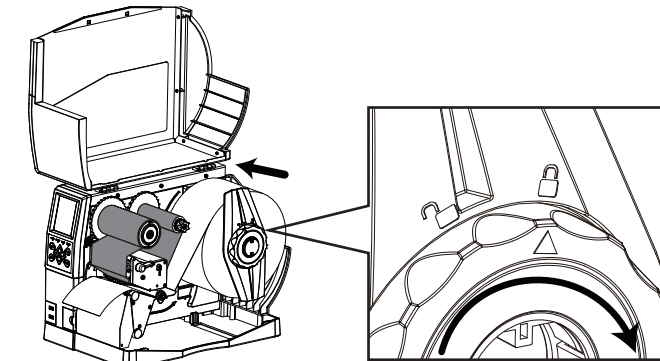


3. Pull out part of label and pass it under the external media guide and media sensor until it reaches the exit slot. Then slide the paper guide to adjust for the label width.

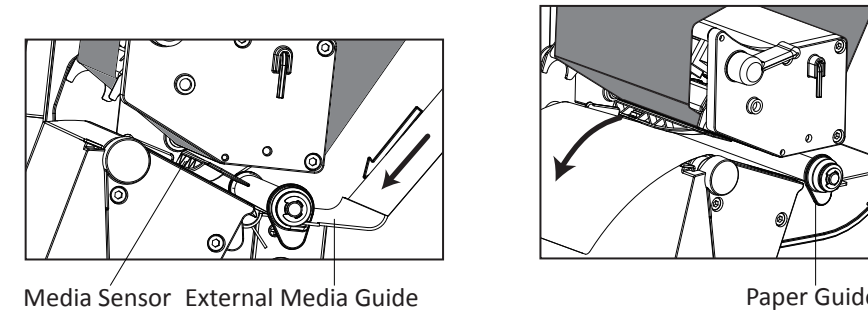


Loading the Paper

4. When using the gap label, black mark label or punch hole label, you can manually adjust the media sensor by the adjusting level to find the gap, black mark or punch hole for the start printing position.

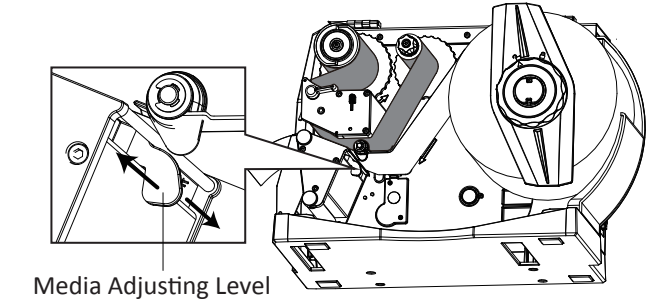


5. After finishing the label loading, turn down the print head lever to make ribbon and label fit snugly.

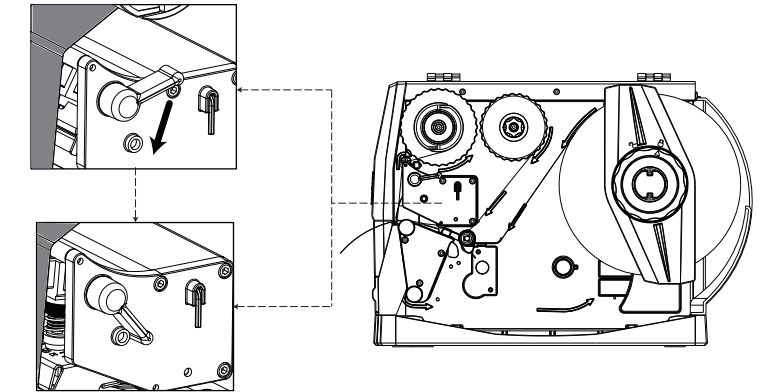

Connecting the Power

1. Connect the other end of power cord to the AC power port.
2. Connect the power plug to power receptacle.

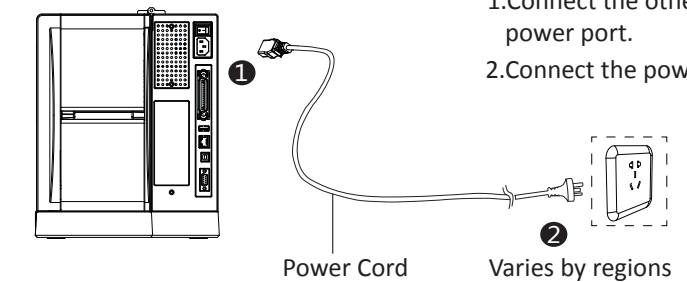

Note: Please refer to windows driver installation in *ix4P/ix4E User Manual*.