

# **Dolphin 60s**

---

with Windows<sup>®</sup> Embedded Handheld 6.5

## **User's Guide**

---

## ***Disclaimer***

Honeywell International Inc. ("HII") reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult HII to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of HII.

HII shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material. HII disclaims all responsibility for the selection and use of software and/or hardware to achieve intended results.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of HII.

Web Address: [www.honeywellaidc.com](http://www.honeywellaidc.com)

## ***Trademarks***

Dolphin is a trademark or registered trademark of Hand Held Products, Inc. in the United States and/or other countries.

Microsoft, Windows, Windows Mobile, Windows Phone, Windows Embedded Handheld, Windows CE, Windows 98 Second Edition, Windows NT, Windows 2000, Windows ME, Windows XP, Windows 7, Windows Vista, ActiveSync, Outlook, and the Windows logo are trademarks or registered trademarks of Microsoft Corporation.

The Bluetooth trademarks are owned by Bluetooth SIG, Inc., U.S.A. and licensed to Honeywell.

Other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are the property of their respective owners.

## ***Patents***

For patent information, please refer to [www.hsmpats.com](http://www.hsmpats.com).

©2013-2017 Honeywell International Inc. All rights reserved.

---



# Table of Contents

## Customer Support

Product Service and Repair .....	ix
Technical Assistance .....	ix
Warranty Disclaimer: Proper Use of a Touch Screen Mobile Device.....	ix
Limited Warranty .....	ix
Send Feedback.....	ix

## Chapter 1 - Getting Started

Out of the Box .....	1-1
Initial Setup for Dolphin 60s Terminals .....	1-1
Using the USB Charge/Communication Cable (Model USB-WALL-CHARGER-1) .....	1-2
The Home Screen .....	1-4
Title Bar .....	1-4
Icons in the Title Bar .....	1-4
Horizontal Scroll .....	1-7
Tile Bar .....	1-7
Optional Virtual Keyboard .....	1-7
The Start Menu .....	1-9
Navigating the Start Menu.....	1-9
Pop-Up Menus .....	1-9
File Explorer .....	1-10
File Provisioning on the Dolphin 60s.....	1-11
Search.....	1-11
Suspend Mode .....	1-12
Replacing the Main Battery .....	1-12
Resetting the Terminal.....	1-13
Soft Reset (Warm Boot).....	1-13
Hard Reset (Cold Boot).....	1-13

## Chapter 2 - Hardware Overview

Standard Configurations for the Dolphin 60s .....	2-1
Peripherals for the Dolphin 60s.....	2-2
Accessories for the Dolphin 60s .....	2-2
Features of the Dolphin 60s.....	2-4
Front Panel.....	2-4
Feature Descriptions: Front Panel .....	2-5
Back Panel .....	2-7
Feature Descriptions: Back Panel.....	2-8
The I/O Connector .....	2-10

---

Battery .....	2-10
Charging Options.....	2-10
Charging Time .....	2-11
Important Charging Guidelines .....	2-11
Battery Error Notification.....	2-12
Storing Batteries .....	2-13
Guidelines for Battery Pack Use and Disposal .....	2-13
Managing Battery Power .....	2-14
Checking Battery Power .....	2-14
System Resets .....	2-15
Hardware Maintenance .....	2-15
Installing a SIM Card and/or Memory Card .....	2-15

### **Chapter 3 - Using the Scan Image Engine**

Overview.....	3-1
Image Engine Specifications .....	3-1
Field of View .....	3-1
Depth of Field .....	3-1
Supported Bar Code Symbologies .....	3-2
Decoding 3	
Using the Scan Demo to Decode a Bar Code .....	3-3
The Aiming Beam .....	3-3
Capturing Images Using the Imaging Demo.....	3-4
Taking an Image.....	3-4
Uploading Images.....	3-5

### **Chapter 4 - Using the Color Camera**

Overview.....	4-1
Taking a picture using the Camera Demo tool .....	4-1
Taking a picture using the Windows Embedded Handheld 6.5 Camera tool .....	4-4
Recording Video using the Windows Embedded Handheld 6.5 Camera Tool .....	4-6
Uploading Pictures and Videos .....	4-6

### **Chapter 5 - Using the Keyboards**

Available Keyboards.....	5-1
Keyboard Combinations .....	5-1
Common Buttons.....	5-1
Using the Function Keys.....	5-2
Using the Modifier Keys .....	5-2
Using the Navigation Keys .....	5-3
30-Key Numeric Keyboard .....	5-4
30-Key Numeric Keyboard Combinations.....	5-4
46-Key QWERTY Keyboard.....	5-6
46-Key QWERTY Keyboard Combinations .....	5-6

---

## **Chapter 6 - System Settings**

Overview.....	6-1
Clock & Alarms .....	6-2
Lock .....	6-3
Personal Menu .....	6-4
Buttons.....	6-5
System Menu.....	6-8
About .....	6-9
Backlight .....	6-11
Battery .....	6-12
Certificates.....	6-14
Encryption.....	6-14
Error Reporting .....	6-15
HSM SystemInfo.....	6-15
SIP Config.....	6-15
Managed Programs .....	6-16
Memory.....	6-17
Power.....	6-18
Regional Settings.....	6-19
Remove Programs.....	6-20
RIL .....	6-20
Screen .....	6-21
Task Manager.....	6-22

## **Chapter 7 - Communication**

Connections Menu.....	7-1
Microsoft Connections Application .....	7-2
Dolphin Wireless Manager 5	
Dolphin Wireless Manager Window.....	7-5
Enabling the Radios.....	7-6
Accessing Radio Configuration Utilities .....	7-7
USB to PC .....	7-8
Network Cards.....	7-8
Connecting and Synchronizing the Terminal and Workstation.....	7-9
Installing Additional Software .....	7-11
Adding Programs Using ActiveSync or Windows Mobile Device Center.....	7-11
Connecting the Terminal to a Wireless Network.....	7-12
Adding Programs Using the Internet.....	7-12
Software Upgrades.....	7-13
Dolphin 60s COM Port Assignment Table.....	7-13

## **Chapter 8 - Working with Wireless Wide Area Networking (WWAN)**

Overview.....	8-1
Requirements .....	8-1
Antenna Band.....	8-1
Signal Strength .....	8-1
Voice and Data Communication .....	8-2

---

Enabling the WWAN Radio 3	
Audio Modes.....	8-4
Volume Control.....	8-4
Voice Communication.....	8-4
Accessing the Dialer Window.....	8-4
Accessing Voice Mail.....	8-5
Customizing the Phone.....	8-6
Data Communication.....	8-8
System Requirements.....	8-8
Establishing Data Communication.....	8-8
Manual Network Selection (GSM/UTMS).....	8-10

### **Chapter 9 - Working with the Bluetooth Radio**

Enabling the Bluetooth Radio.....	9-1
Pairing and Trusted Devices.....	9-2
Connecting to Other Bluetooth Devices.....	9-2
Transferring Files using Beam File 5	
Making the Terminal Discoverable.....	9-6
Enabling the Terminal to Receive Incoming Beams.....	9-6
Selecting COM Ports.....	9-6

### **Chapter 10 - Working with GPS**

Overview.....	10-1
Assisted GPS Support.....	10-1
Powering the GPS Module.....	10-1
Communication Port.....	10-1
COM7.....	10-1
GPS Intermediate Driver.....	10-1
GPS Demo.....	10-2

### **Chapter 11 - Dolphin 60s HomeBase Device (Model D60s-HB)**

Overview.....	11-1
Unpacking the HomeBase.....	11-1
Charging Overview.....	11-1
Communications.....	11-1
Convenient Storage.....	11-2
Capacity.....	11-2
Dimensions.....	11-2
Weight.....	11-2
Parts and Functions.....	11-3
Front Panel.....	11-3
Back Panel.....	11-4
Bottom Panel.....	11-5
Power.....	11-5
Connecting Power to the HomeBase.....	11-5

---

Charging the Main Battery .....	11-6
To Power a Terminal and Charge its Main Battery .....	11-6
Charging a Spare Battery in the Auxiliary Battery Well .....	11-6
Communication .....	11-6
Requirements .....	11-7
Setting Up and Connecting the Dolphin Terminal to the HomeBase .....	11-7
Mounting the HomeBase .....	11-7
Desk Mounting .....	11-7

**Chapter 12 - Dolphin 60s Mobile Charger Devices**

Overview .....	12-1
Charging Overview .....	12-1
Mobile Charger Components (60s-MC) .....	12-1
Mobile Charger with DEX Cable Components (60s-DEXKIT) .....	12-2
Mobile Charger with DB9 Cable Components (60s-DB9KIT) .....	12-3
Charging the Main Battery .....	12-3
To Power a Terminal and Charge its Main Battery .....	12-4

**Chapter A - Dolphin 60s Terminal Agency Information**

Label Locations .....	A-1
Model Number, Serial Number and IMEI Labels .....	A-1





# ***Customer Support***

## ***Product Service and Repair***

Honeywell International Inc. provides service for all of its products through service centers throughout the world. To find your service center, go to [www.honeywellaidc.com](http://www.honeywellaidc.com) and select Support. Contact your service center to obtain a Return Material Authorization number (RMA #) before you return the product.

To obtain warranty or non-warranty service, return your product to Honeywell (postage paid) with a copy of the dated purchase record. To learn more, go to [www.honeywellaidc.com](http://www.honeywellaidc.com) and select Service & Repair at the bottom of the page.

## ***Technical Assistance***

To search our knowledge base for a solution or to log in to the Technical Support portal and report a problem, go to [www.hsmcontactsupport.com](http://www.hsmcontactsupport.com).

For our latest contact information, see [www.honeywellaidc.com/locations](http://www.honeywellaidc.com/locations).

## ***Warranty Disclaimer: Proper Use of a Touch Screen Mobile Device***

If your mobile device has a touch screen display, please note that a touch screen responds best to a light touch from the pad of your finger or a Honeywell approved stylus. Using excessive force or a metallic object when pressing on the touch-screen may cause damage to the tempered glass surface and may not be covered by the product's warranty.

## ***Limited Warranty***

For warranty information, go to [www.honeywellaidc.com](http://www.honeywellaidc.com) and click **Get Resources > Product Warranty**.

## ***Send Feedback***

Your feedback is crucial to the continual improvement of our documentation. To provide feedback about this manual, contact the Honeywell Technical Communications department at [ACSHSMTechnicalCommunications@honeywell.com](mailto:ACSHSMTechnicalCommunications@honeywell.com).



# Getting Started

## Out of the Box

Verify that the carton contains the following items:

- Dolphin 60s mobile computer (terminal)
- 3.7V Li-ion rechargeable battery
- USB charge/communication cable
- Power adapter with regional plug adapters
- Quick start guide
- Compliance Regulatory Sheet

If you ordered accessories for your terminals, verify that they are also included with the order. Be sure to keep the original packaging in the event that the Dolphin terminal should need to be returned for service.

*Note: Your Dolphin model may differ from the model illustrated in this guide; however, the features noted are standard for all Dolphin 60s models with Windows® Embedded Handheld unless otherwise indicated.*

## Initial Setup for Dolphin 60s Terminals

### Step 1. Install the Battery


*Note: Before installing the main battery, read the [Guidelines for Battery Pack Use and Disposal](#) on page 2-13.*

Dolphin 60s model terminals are designed for use with battery part number 60s-BATT-1 (Li-ion 3.7V, 12.358 watt hour) manufactured for Honeywell International Inc.

The terminal is shipped with the battery packaged separate from the unit. Perform the steps illustrated below to install the battery. For information on how to remove the battery, see [Replacing the Main Battery](#) on page 1-12.



*Ensure all components are dry prior to placing the battery in the terminal. Mating wet components may cause damage not covered by the warranty.*

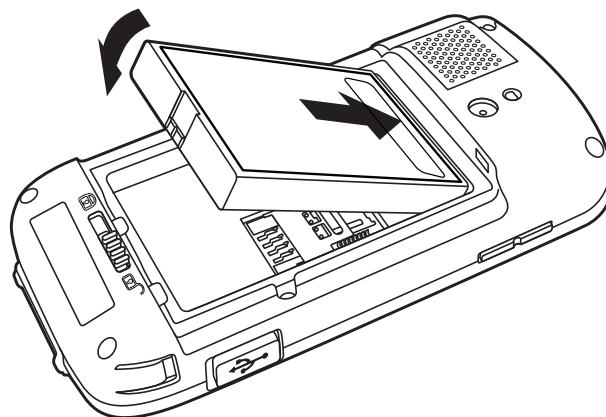

### Step 2. Charge the Battery

The power source for the Dolphin terminal is the 3.7V Li-ion rechargeable battery located under the battery door on the back panel of the device. See [Battery](#) on page 2-8 for additional information on battery storage, use, and disposal.


**Important:** Removing the battery from the terminal erases all non-persistent memory. Always suspend the terminal before removing the battery.

Note: For information on how to remove the battery from the terminal, see [Replacing the Main Battery](#) on page 1-12.


### Before Initial Use

Dolphin terminals ship with the battery significantly discharged of power. After installing the battery in the terminal, charge the battery with a Dolphin 60s charging peripheral for a minimum of **6 hours** for the extended battery pack.

Note: Inadequate source current may interfere with effective battery charging; see [Important Charging Guidelines](#) on page 2-11 for additional information.

 We recommend use of Honeywell peripherals, power cables, and power adapters. Use of any non-Honeywell peripherals, cables, or power adapters may cause damage not covered by the warranty.

Dolphin 60s model terminals are designed for use with the following charging devices and cables: D60s-HB, 60s-MC, 60s-DEXKIT, 60s-DB9KIT, and USB-WALL-CHARGER-1.

 Ensure all components are dry prior to mating terminals/batteries with peripheral devices. Mating wet components may cause damage not covered by the warranty.


### Using the USB Charge/Communication Cable (Model USB-WALL-CHARGER-1)

Dolphin 60s terminals ship with a USB Charge/Communication Cable and a power adapter with regional plug adapters. The USB Charge/Communication cable provides two options for charging the terminal. Use the cable in conjunction with the provided power supply adapter and plug adapter to charge the terminal from a power outlet or connect the cable to a high-power USB port to charge from a host device.

 **Warning** - The terminal shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program when using the micro USB port as a charging source.

#### Option 1: Charging from a power outlet


Use only a UL Listed power supply, which has been qualified by Honeywell with an output rated at 5VDC and 1A with the device.

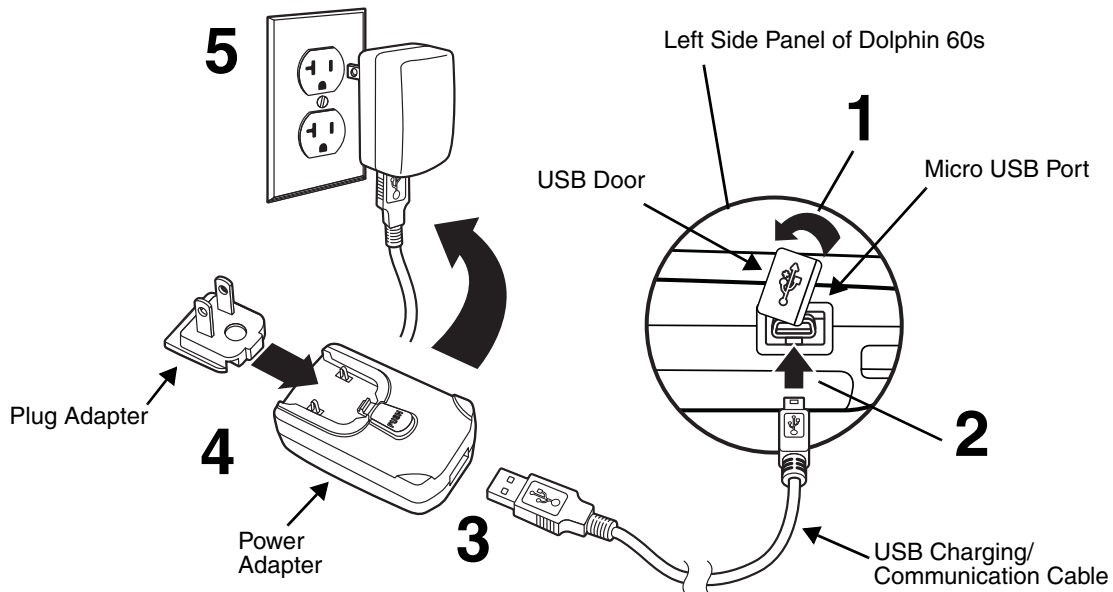

---


## Option 2: Charging from a high power USB port on a host device (PC)

Left Side Panel of Dolphin 60s

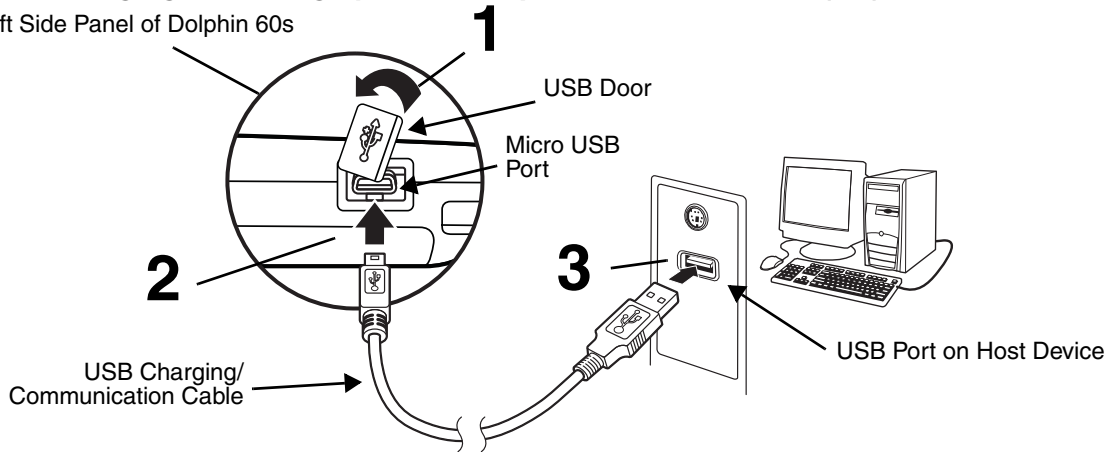

*Note: Charging the battery through a USB port takes more time than direct AC adapter charging. USB charging will not take place if the terminal is drawing more current than supplied by the USB port.*

Touch  > **Settings** > **System** > **Power** to verify the battery is charging.

To access detailed information on the battery, touch  > **Settings** > **System** > **Battery**.


### **Step 3. Boot the Terminal and Access the Home Screen**

The terminal begins booting as soon as power is applied. Do not press any keys or interrupt the boot process. When the boot process is complete, the **Home** screen appears depending on your Dolphin model.

*Note: During the initial charging stage, the terminal display may dim to conserve battery power due to inactivity. Touch the display to turn on the backlight.*

## The Home Screen

After the Dolphin terminal initializes, the **Home** screen appears.

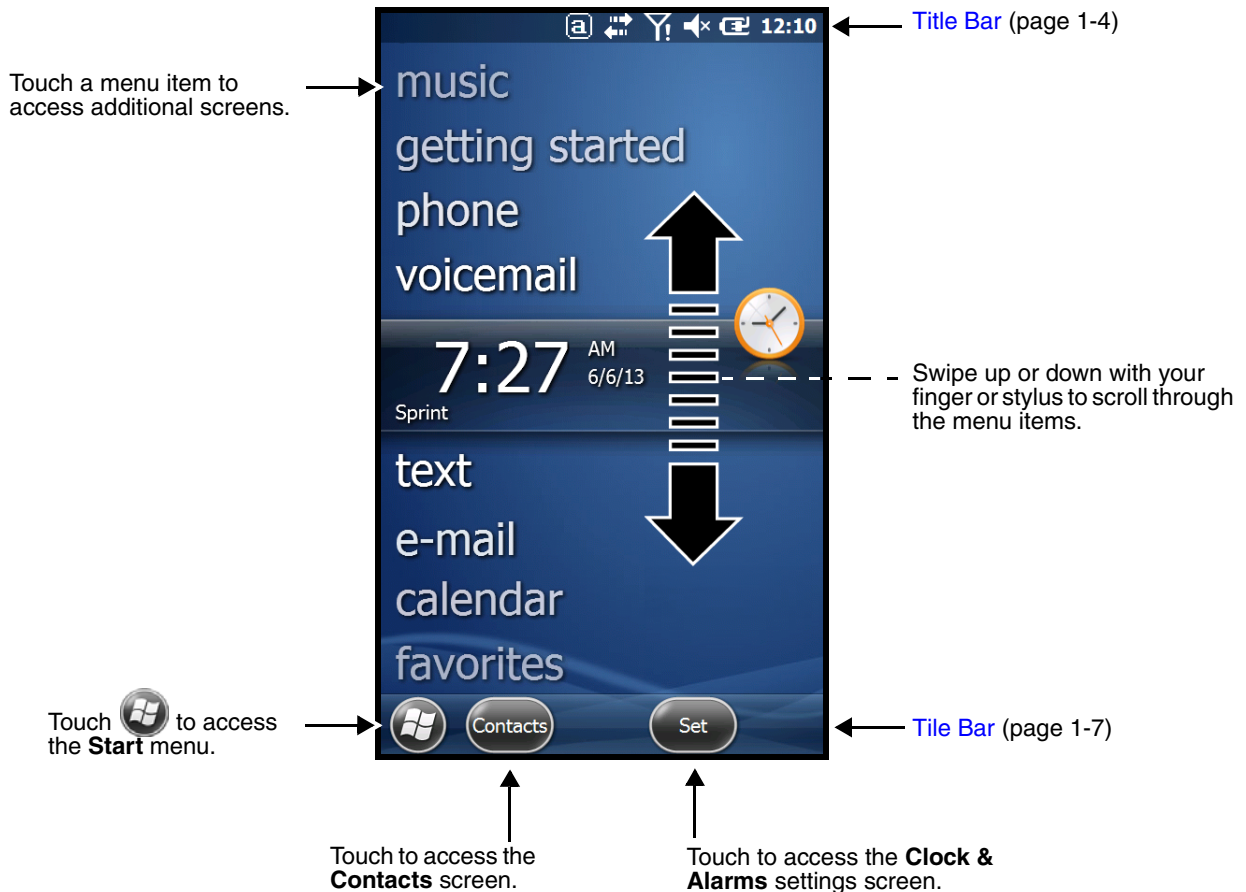


## Title Bar





 


 









 



The Title bar, located at the top of the screen, displays the active program, the status of various system functions, and the current time. Touching on the title bar provides access to the [Horizontal Scroll](#). The scroll provides access to additional programs and application screens. For additional information, see [Horizontal Scroll](#) on page 1-7.
























## Icons in the Title Bar

Indicator	Meaning
	Synchronizing data

## Icons in the Title Bar

Indicator	Meaning
	The terminal could not synchronize data with the workstation via ActiveSync.
	New e-mail
	New text message
	New voicemail
	New instant message
	Vibrate on
	Ringer off
	Speaker phone on
	Voice call in progress
	Calls are forwarded
	Call on hold
	Missed call
	Data call in progress
	A battery error has occurred. Replace the main battery with a Honeywell Li-ion battery pack.
	Battery is has a full charge
	Battery has a high charge
	Battery has a medium charge
	Battery has a low charge
	Battery has a very low charge and requires charging
	Terminal is running on external power. If a battery pack is installed, the battery is charging in the background.
	The terminal is not connected to external power. A battery is installed, but is defective; specifically, its charge level cannot be measured.

## Icons in the Title Bar

Indicator	Meaning
	No SIM card is installed
	Active network connection
	No active network connection
	GPRS available
	GPRS connecting
	GPRS in use
	EDGE available
	EDGE connecting
	EDGE in use
	UMTS available
	UMTS connecting
	UMTS in use
	Radio is off
	The radio is not connected to a network.
	The radio is connected. The bars indicate the signal strength.
	No radio signal
	The terminal is searching for a signal.
	Wi-Fi is on, but device is not connected
	Wi-Fi data call
	Pending alarm
	Bluetooth




---

## Horizontal Scroll

The Horizontal Scroll, located at the top of most application windows, provides access to additional application screens. You can swipe left or right on the scroll or touch each label on the scroll, until you get to the desired screen. Touching a label to the left or right of the center item brings new labels into view.

*Note: Touch the Title bar to access the horizontal scroll if it is not visible on the screen.*

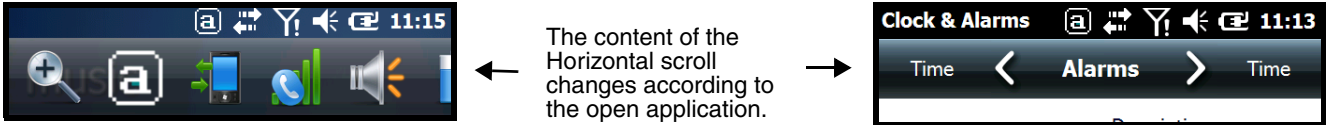


## Tile Bar

The **Tile Bar** is located at the bottom of an application window.



## Optional Virtual Keyboard

The virtual keyboard is licensed for a fee. If you attempt to upload a keyboard to your device and the following error message is displayed:

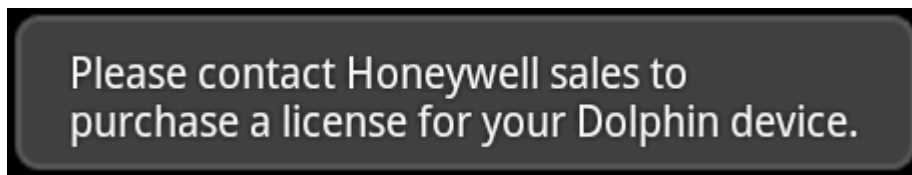

It indicates that you have not yet purchased a license for your device. Contact your Honeywell Sales representative for assistance. For contact information, see [Technical Assistance](#) on page TOC-ix.

The virtual keyboard appears when you open an application or select a field that requires text or numerical input. You can also touch the keyboard icon on the tile bar to toggle the keyboard on or off.



When you touch and hold the keyboard icon, a pop-up menu allows you to switch between the default enhanced Honeywell virtual keyboard, which is fully customizable or the standard Windows Embedded Handheld virtual keyboard.

---

## *The Enhanced Honeywell Virtual Keyboard*

During text input, you may need to switch between keyboard modes to access additional character sets (e.g., function keys, symbols, and numbers). Each keyboard mode, includes navigation keys, which allow you to quickly switch between modes. Touch the **ABC** key to switch to the **Qwerty Mode**, the **123** key to switch to the **Numeric Mode**, and the **#@&** key to switch to the **Function & Symbols Mode**.

*Note: The content of the keyboard and the mode initially displayed may vary depending on the application in use and the input field requirements.*

## *Alternate Keys*

Some keys include a second symbol in red. In order to use the alternate symbol, press and hold the key until the alternate symbol appears, then release the key to type the symbol.

## *Honeywell Virtual Keypad Creator*


The default enhanced virtual keyboard is fully customizable using the *Honeywell Virtual Keypad Creator* software available for download at [www.honeywellaidc.com](http://www.honeywellaidc.com). The user-friendly utility allows you to personalize multiple keyboard features including key position, size, quantity, color, and the keyboard skin. In addition, you can make language changes, create alternate or function keys for special character sets, and add application launch keys to streamline common business tasks.

Virtual Keypad consists of two software applications. The first is the *Virtual Keypad Creator*, which resides on your PC and is used to design and save keypad layouts. The second is the *Virtual Keypad*, which is downloaded to your mobile device. The *Virtual Keypad* on your mobile device displays the keypad you designed using *Virtual Keypad Creator*.

The customization process is easy. Simply download and install the *Virtual Keypad Creator* software onto your PC, modify the provided standard template, then download the customized keyboard to your terminal using a USB connection.

---

## ***The Start Menu***

To see the programs loaded on your terminal, touch  to access the **Start** menu.



### ***Navigating the Start Menu***

- Swipe up or down with your finger or stylus to scroll through the menu icons.
- To open a program, touch once on the program icon.
- To reposition an icon on the **Start** menu, touch and hold the stylus on the icon, then drag the icon to the desired position.

### ***Pop-Up Menus***


With pop-up menus, you can quickly choose an action for a selected item. To access a pop-up menu, touch and hold the stylus on the item name of the action you want to perform. When the menu appears, lift the stylus, and touch the action you want to perform.

Touch anywhere outside the menu to close the menu without performing an action.

## File Explorer

You can use the File Explorer to find files and organize files into folders.

Touch  > File Explorer .

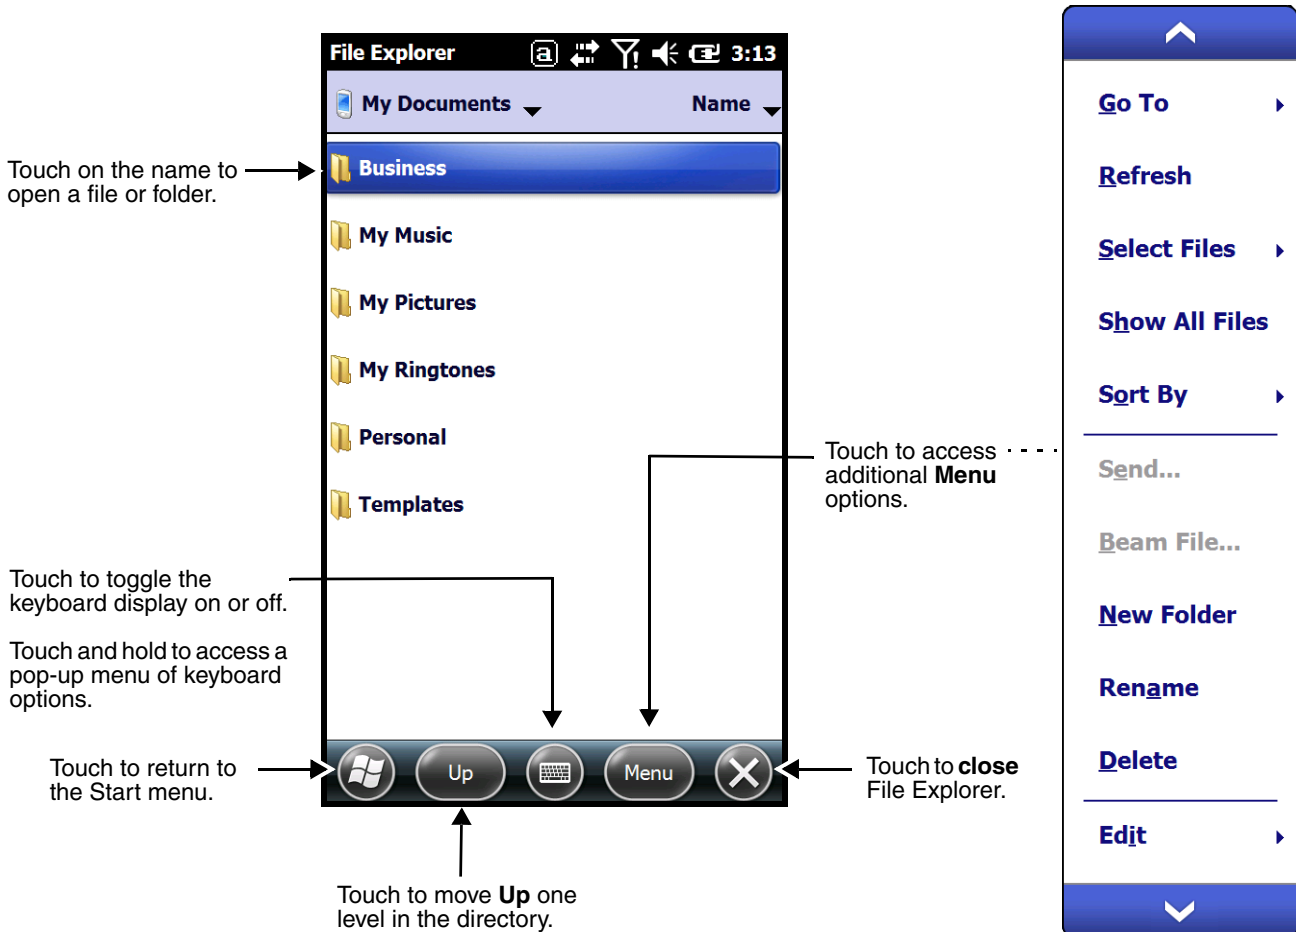

To **move** or **copy** files between folders using File Explorer:

1. Touch and hold on the item you want to move, then touch **Cut** or **Copy** on the popup menu.
2. Navigate to the folder you want to move or copy the file to, then touch and hold a blank area of the window.
3. Touch **Paste** on the pop-up menu.

*Note: If there is no blank space available in the window, touch **Menu** on the tile bar, navigate to the end of the menu using the down arrow, then touch **Edit** > **Paste**.*

---

## File Provisioning on the Dolphin 60s

### **\IPSM\Honeywell**


The IPSM folder is the only partition on the terminal that persists across a kernel upgrade (\*.UPG file extension). During a kernel upgrade, files are automatically copied from the \IPSM\Honeywell folder and then installed in the \Honeywell (root file system) folder as part of the upgrade process.

\IPSM\Honeywell\AutoInstall

The files in the IPSM\Honeywell\AutoInstall folder are only installed when a factory reset or kernel upgrade occurs. Once the files are installed, they persist through hard and soft resets. If a file is added to the folder and a hard or soft reset is performed, it will have no effect. If a program is manually removed using the Remove Programs application (see page 6-20), then the program is not automatically re-installed on a hard or soft reset.

### **\Honeywell**

The Honeywell partition or root file system partition is persistent over a hard reset, soft reset, and the removal of the battery pack or the removal of AC power. However, during a kernel upgrade the root file system is reformatted so all data in the folder is deleted and replaced by any files in the \IPSM\Honeywell folder as part of the upgrade process.


 *To prevent data loss, back up all user data to an SD card or external memory device before performing an upgrade.*

\Honeywell\AutoInstall



If you run a CAB file from within the \Honeywell\AutoInstall (user store) folder, after the program has been installed, the CAB file will be deleted from the User Store. However, the program remains installed through all successive Hard and Soft resets.

If you want the program to be part of the Autoinstall that occurs after a factory reset or software upgrade, paste the program file(s) in both the \IPSM\Honeywell\Autoinstall folder and the \Honeywell\Autoinstall.

Contact a Honeywell technical support representative for information on how to perform a factory reset or for information on available software upgrades for your Dolphin terminal. For contact information, see [Technical Assistance](#) on page ix.

 *To prevent data loss, back up all user data to an SD card or external memory device before performing an upgrade.*

## Search

The Search feature helps you quickly locate information. Touch  > **Search Phone** .


Enter the text you want to find, select a data type, and then touch **Search**. Select **Larger than 64 KB** in the **Type** drop-down field to quickly find information that is taking up storage space.

---

## Suspend Mode

In Suspend mode, the device enters a low power state to conserve battery power. The radio associated with the phone maintains enough power to wake the terminal for incoming phone calls.

Suspend mode automatically turns the touch screen off to save battery power when the terminal is inactive for a programmed period of time. The automatic timeout limits are adjustable from the **Advanced** tab located under **Settings > System > Power** (see page 6-18).

To put the device into Suspend mode, press and release the **Power** key  for approximately 4-5 seconds. To resume from the **Suspend** mode, press and release the Power key.


## Replacing the Main Battery

*Note: Before replacing the main battery, read the [Guidelines for Battery Pack Use and Disposal](#) on page 2-13.*




*Ensure all components are dry prior to mating terminals/batteries with peripheral devices. Mating wet components may cause damage not covered by the warranty.*

1. Remove the battery door, slide the latch to unlock the battery door, remove the battery door, then remove the battery.

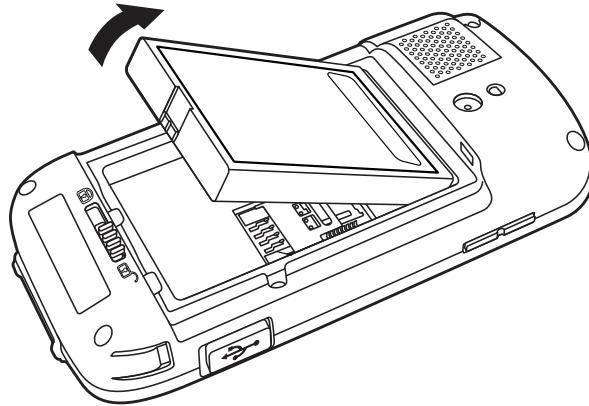

2. Insert the new battery, then attach and lock the battery door.

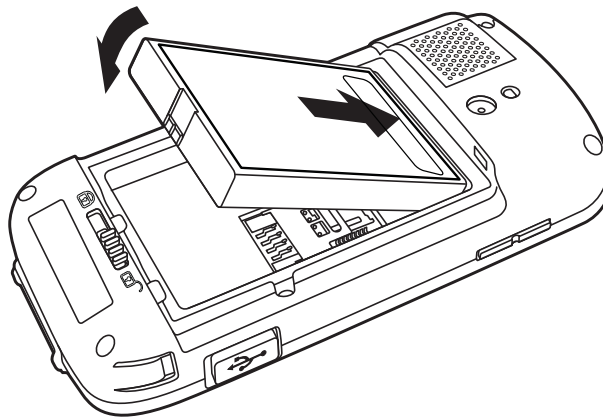

*Note: Do not attempt to use the terminal without the battery door installed.*

3. The terminal begins booting as soon as power is applied.



We recommend use of Honeywell Li-ion battery packs. Use of any non-Honeywell battery may result in damage not covered by the warranty.



## ***Resetting the Terminal***

There are three types of system resets: a **Soft Reset**, a **Hard Reset**, or a **Factory Reset**. The soft and hard resets preserve all data stored in the file system. Contact a Honeywell technical support representative for more information on how to perform a **Factory Reset**. For contact information, see [Technical Assistance](#) on page ix.

### ***Soft Reset (Warm Boot)***

A **Soft Reset** re-boots the device and preserves any objects created in RAM. You would perform a soft reset when: the terminal fails to respond, after installing some software applications, or after making changes to certain system settings, such as network cards.



To perform a **Soft Reset**:

1. Press and hold the **Blue** key  and then **Power** key  for approximately 6-7 seconds.
2. When the reset is complete, the **Home** screen displays.

### ***Hard Reset (Cold Boot)***

A **Hard Reset** re-boots the terminal and closes any open applications running in RAM at the time of the reset.

To perform a **Hard Reset**:

1. Press and hold the **Blue** key  and then **Send** key  for approximately 6-7 seconds.
2. When the reset is complete, the **Home** screen displays.





## Hardware Overview

### Standard Configurations for the Dolphin 60s

#### WLAN, WPAN & Camera

- Microsoft Windows Embedded Handheld 6.5 Professional
- TI AM3715 Cortex-A8 800MHz Processor
- 256MB RAM X 512MB Flash
- 3.7V Li-ion rechargeable extended battery pack
- Dedicated imager capable of decoding standard 1D and 2D bar code symbologies
- 5.0 megapixel auto focus camera
- 802.11b/g/n and Bluetooth

#### WLAN, WPAN, WWAN, GPS & Camera

- Microsoft Windows Embedded Handheld 6.5 Professional
- TI AM3715 Cortex-A8 800MHz Processor
- 256MB RAM X 512MB Flash
- 3.7V Li-ion rechargeable extended battery pack
- Dedicated imager capable of decoding standard 1D and 2D bar code symbologies
- 5.0 megapixel auto focus camera
- 802.11b/g/n and Bluetooth
- Voice and Data, GSM/GPS

---

## ***Peripherals for the Dolphin 60s***

The following item is sold separately to enhance the capabilities of your Dolphin terminal.

### ***Dolphin 60s HomeBase (Model D60s-HB)***

The Dolphin 60s HomeBase device is a charging and communication cradle equipped with a USB host port that is Hi-Speed 2.0v compliant, which enables the terminal to interface with the majority of PC-based enterprise systems. This device also contains an auxiliary battery well that charges a spare Honeywell extended battery pack.

For more information, see [Dolphin 60s HomeBase Device \(Model D60s-HB\)](#) on page 11-1.

## ***Accessories for the Dolphin 60s***

Each of the following items are sold separately to enhance your terminal's capabilities.

*Note: When using accessories where the terminal is worn on the body, the terminal's touch panel must face away from the body.*

### ***Dolphin 60s Mobile Charger (Models 60s-MC, 60s-DEXKIT, and 60s-DB9KIT)***

The Dolphin 60s Mobile Charger is a charging cable that connects the terminal directly to a 12 Volt DC power source, such as a cigarette lighter port inside a vehicle, eliminating the need for a cradle. Intelligent battery technology on-board the terminal ensures proper charging. The Dolphin 60s Mobile Charger is an ideal low-cost charging solution for in-transit mobile applications. The 60s-DEXKIT features a DEX interface cable. The 60s-DB9KIT features a DB9 interface cable.

For more information, see [Dolphin 60s Mobile Charger Devices](#) on page 12-1.

### ***USB Charge/Communication Cable and Adapter Kit (Model USB-WALL-CHARGER-1)***

The Dolphin USB charge/communication cable adapter kit is an all-in-one solution for charging and communication. Use the USB-CABLE-1 cable in conjunction with provided power supply adapter and plug adapter to charge the terminal from a power outlet or connect the cable to a high-power USB port to charge from a host device. The USB-CABLE-1 cable also supports communication with a computer without the need for a cradle. See [Connecting and Synchronizing the Terminal and Workstation](#) on page 7-9.

### ***Holster (Model HOLSTER-1)***

The holster provides convenient storage for the Dolphin 60s terminal in mobile environments. The holster features an integrated belt clip and spare battery pouch.

### ***Stylus Kits (Model 60s-STYLUS)***

Each Dolphin is shipped with a stylus and a stylus tether used to secure the stylus to the terminal to prevent loss. Kits containing three styli and three tethers are available for purchase.

---


***Battery (Part Number 60s-BATT-1)***

The rechargeable battery provides the main power for the terminal. For more information, see [Battery](#) on page 2-10.

## Features of the Dolphin 60s

Note: Your Dolphin model may differ from the model illustrated; however, the features noted are standard for all Dolphin 60s models with a Windows Embedded Handheld OS unless otherwise indicated. For a complete overview of the optional keyboards available for the Dolphin 60s, See [Using the Keyboards](#) on page 5-1.

### Front Panel

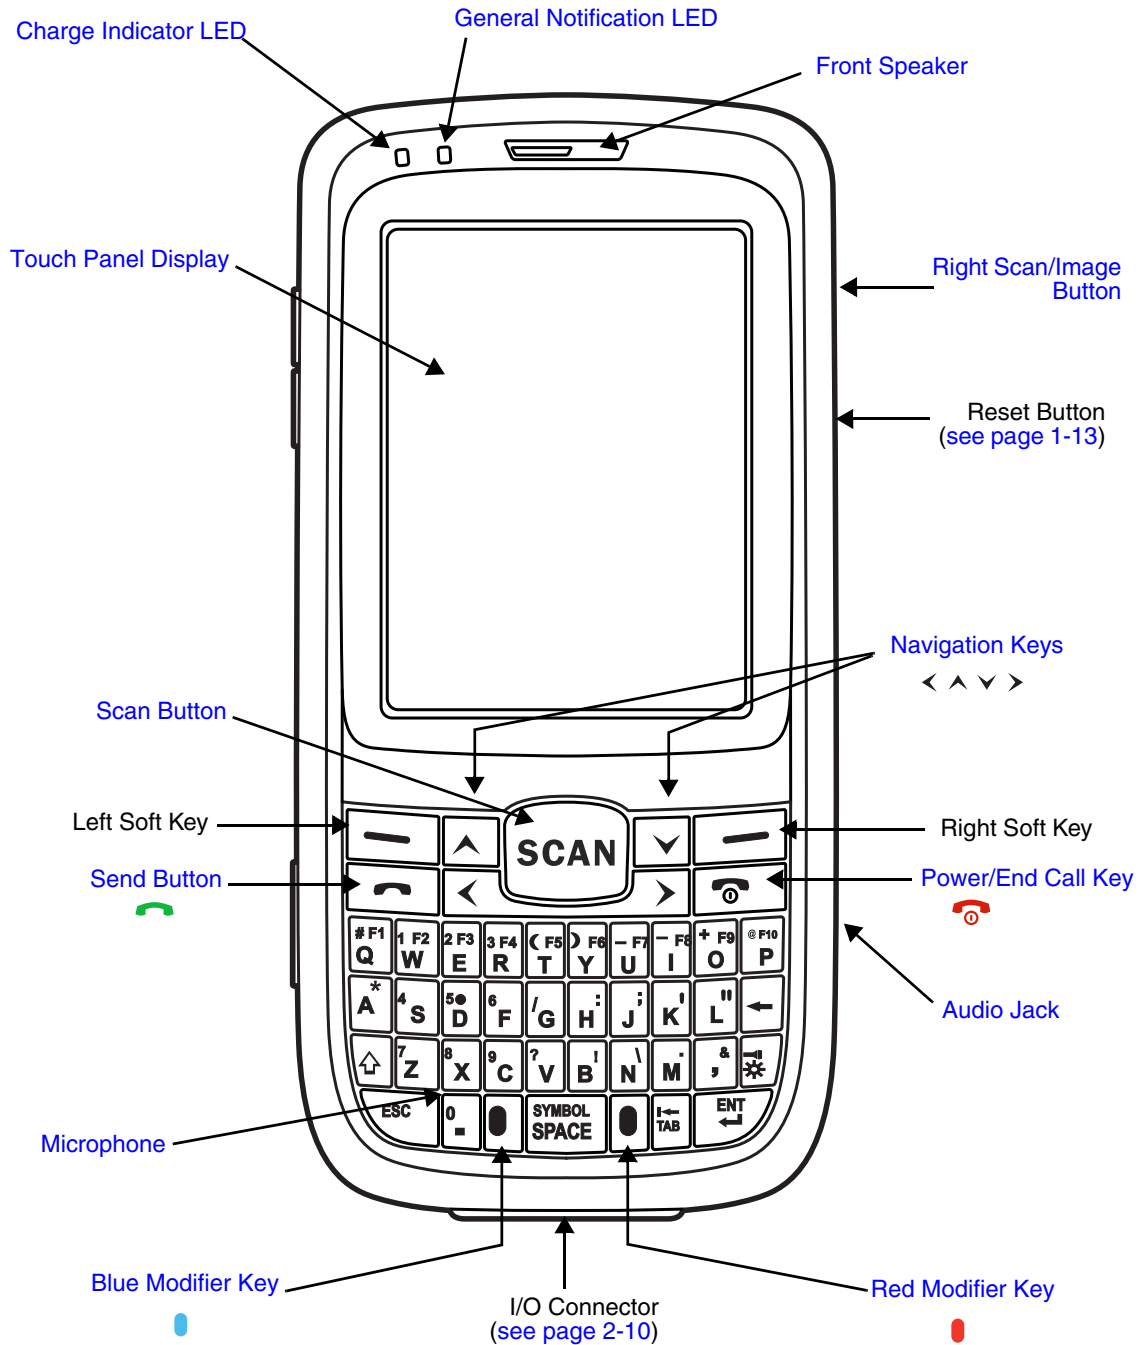

For a description of each callout, see page 2-5.

---

## **Feature Descriptions: Front Panel**

### **Audio Jack**

The 3.5mm audio jack supports both speaker (stereo) and microphone (mono) headsets.

### **Blue Modifier Key**

See [Using the Modifier Keys](#) on page 5-2.

### **Power/End Call Key**

The Power/End Call key, located in the upper right corner of the keypad, puts the terminal in Suspend Mode or wakes the terminal from Suspend Mode. See [Suspend Mode](#) on page 1-12. The key is also used to end/disconnect a phone calls.

### **Charge Indicator LED**

The light emitting diode (LED) located above the top left corner of the LCD display illuminates when the Power Tools **BattMon** application is enabled and the device is on AC charge. For more information, consult the Dolphin Power Tools User's Guide for Windows Embedded Handheld 6.5.

### **Front Speaker**

The front speaker is the receiver for handset voice calls. See [Voice Communication](#) on page 8-4.

### **General Notification LED**

The light emitting diode (LED) located above and to the left of the LCD display flashes and illuminates during resets, scanning/imaging, and taking a picture. This LED can be programmed by various software applications.

### **Microphone**

The integrated microphone that provides audio input for handset and speaker phone voice calls. See [Voice Communication](#) on page 8-4.

### **Navigation Keys**

The centrally located navigation keys enable you to move and position the cursor through software programs. The up and down arrows are programmed to perform specific functions when pressed in combination with the Blue and Red modifier keys. For more details, see [Using the Navigation Keys](#) on page 5-3.

### **Red Modifier Key**

See [Using the Modifier Keys](#) on page 5-2.

### **Right Scan/Image Button**

By default, the right button triggers the scanner/imager. You can reassign the button to launch applications or execute commands. For additional information, see [Changing Button Assignments](#) on page 6-5.

### **Scan Button**

The Scan button is centrally located for easy access with the right or left hand. By default, the button activates the scanner/imager.

---

## **Send Button**


Answers a phone call or initiates a phone call. See [Voice Communication](#) on page 8-4.

## **Touch Panel Display**

The color 2.8 inch (liquid crystal display (LCD) touch panel is covered with an industrial, protective lens for greater durability. The quarter video graphic array (QVGA) display resolution is 240 X 320. The touch panel can be activated with a finger or with the stylus.

The touch panel backlight illuminates when the screen is touched. For more information, see [Backlight](#) on page 6-11.

## Back Panel

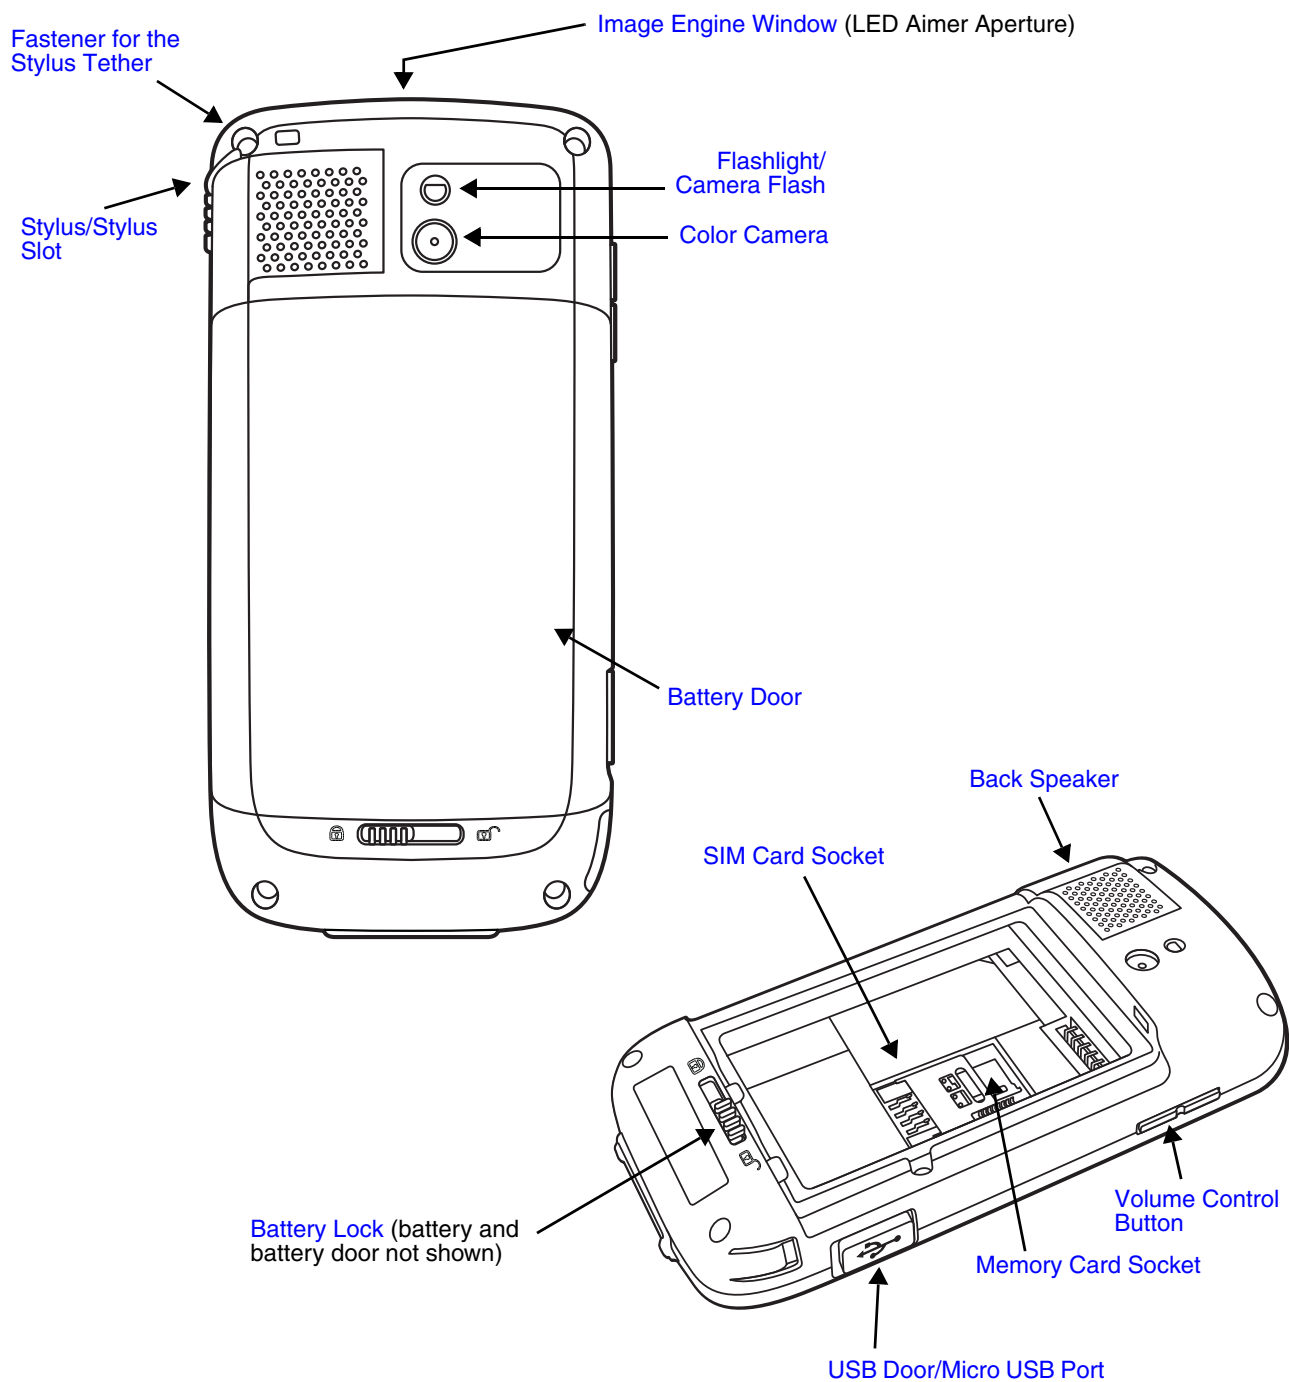

*Note: Your Dolphin model may differ from the model illustrated; however, the features noted are standard for all Dolphin 60s with Windows Embedded Handheld models unless otherwise indicated.*

For a description of each callout, [see Feature Descriptions: Back Panel](#) on page 2-8.

---

## Feature Descriptions: Back Panel

### Back Speaker

The integrated rear speaker sounds audio signals as you scan bar code labels and enter data. The integrated speaker also supports playback of wave and MP3 files, software mixer, and Speakerphone for WWAN/GSM audio. The operating frequency range is 600-3000Hz at >90dB.

### Battery

Dolphin 60s model terminals are designed for use with battery part number 60s-BATT-1 (Li-ion 3.7 V, 12.358 watt hour) manufactured for Honeywell International Inc. For information on how to remove the battery, see [Replacing the Main Battery](#) on page 1-12.

### Battery Door

The battery door protects the battery and any installed SIM and/or memory cards in the terminal's battery well. When the battery door is installed properly, the terminal's environmental rating is preserved. For information on how to remove the battery, see [Replacing the Main Battery](#) on page 1-12.

*Note: Do not use the terminal without the battery door installed.*

### Battery Lock

The Battery Lock allows the user to lock the battery door in place.

### Color Camera

The 5.0-Megapixel Resolution auto-focus color camera provides easy picture and video capture. The camera lens and camera flash are located on the back panel of the terminal.

### Fastener for the Stylus Tether

The Stylus Tether helps prevent accidental loss when the stylus is not stored in the stylus slot. A stylus tether is a coiled, elastic cord that tethers the stylus to the terminal. Secure one end of the cord to the back panel of the terminal and the other end to the stylus.

### Flashlight/Camera Flash

The flashlight/camera flash is located on the back panel of the terminal.

When used as a Flashlight, touch  > **Flashlight**  or press the Red Key  > , to turn the flashlight On or Off.

When used as a Camera Flash with the terminal's color camera, the flash is controlled by the camera application.

### Image Engine Window

The image engine reads and decodes linear, stacked linear (e.g., PDF417), and 2D matrix bar code symbologies. The LED aperture for the imaging engine's LED aimer is contained behind this window. For more details, see [Using the Scan Image Engine](#) on page 3-1.



---

## Memory Card Socket

The memory card socket provides the user with the option to expand the terminal's memory capacity using microSD or microSDHC memory interfaces. The expansion socket is located under the battery door and battery.

*Note: Honeywell recommends the use of Single Level Cell (SLC) industrial grade microSD or microSDHC memory cards with Dolphin terminals for maximum performance and durability. Contact a Honeywell sales representative for additional information on qualified memory card options.*

When the battery door and battery pack are properly installed, the card is sealed against moisture and particle intrusion, read/write data is stored securely, and the terminal's environmental rating is preserved; see [Installing a SIM Card and/or Memory Card](#) on page 2-15.

## SIM Card Socket

The card socket for the Subscriber Identity Module (SIM) is located under the battery door and main battery. When the battery door and battery are properly installed, the card is sealed against moisture and particle intrusion, read/write data is stored securely, and the terminal's environmental rating is preserved; see [Installing a SIM Card and/or Memory Card](#) on page 2-15.

## Stylus/Stylus Slot

The stylus is used to operate the touch panel. The back panel of the terminal features a storage slot to hold the stylus when not in use. The stylus features a special tip for added accuracy and ease of use.

## USB Door/Micro USB Port

The Micro USB port is located under the protective USB door on the left side of the terminal. To access the micro USB port, gently lift the bottom edge of the door closest to the bottom of the terminal, and then twist 90° counterclockwise.

The micro USB port in conjunction with the USB Charge/Communication Cable (model USB-CABLE-1) powers the terminal, charges the main battery, and facilitates communication. The micro USB port supports low, full, and high-speed USB v2.0 client communication with a maximum rate of 480 Mbps.

For additional information, see [Using the USB Charge/Communication Cable \(Model USB-WALL-CHARGER-1\)](#) on page 1-2 and [Connecting and Synchronizing the Terminal and Workstation](#) on page 7-9.

 
## Volume Control Button

Press the top or bottom of the volume button to raise or lower the volume of the active speaker.

---

## The I/O Connector

The I/O connector powers the terminal, charges the main battery, and facilitates communication. Dolphin 60s peripherals are designed to work exclusively with this connector. The I/O connector supports low, full, and high speed USB v2.0 communication with a maximum rate of 480 Mbps.



Pin	Signal	Pin	Signal
1	ADP_IN	9	GND
2	ADP_IN	10	GND
3	RXD	11	GND
4	TXD	12	RTS
5	Cradle_EN	13	USB_DP
6	DTR	14	USB_DN
7	DC_5V_OUT	15	USB_VBUS
8	CTS	16	GND

*Note: Signals referenced are for a DTE device.*

## Battery

The primary power source for the Dolphin 60s terminal is the 3.7V Li-ion rechargeable battery located under the battery door on the back panel of the device. Honeywell recommends you keep the battery in the terminal charged at all times to help prevent data loss. Letting the battery become fully discharged causes the terminal to lose all data in RAM.

*Note: All data in RAM is cleared when the battery is removed. Always Suspend the terminal before removing the battery to ensure any changes made are saved to the flash memory.*

Dolphin 60s model terminals are designed for use with battery part number 60s-BATT-1 (Li-ion 3.7 V, 12.358 watt hour) manufactured for Honeywell International Inc.



*We recommend use of Honeywell Li-ion battery packs. Use of any non-Honeywell battery may result in damage not covered by the warranty.*

## Charging Options

Dolphin terminals ship with the battery significantly discharged of power. **The battery must be completely charged for a minimum of 6 hours before using a Dolphin terminal for the first time.**

When the main battery is installed in the terminal, use one of the following:

- [Dolphin 60s HomeBase Device \(Model D60s-HB\)](#), see page 11-1
- [Dolphin 60s Mobile Charger Devices](#), see page 12-1
- [Dolphin 60s USB Charge/Communication Cable \(Model USB-WALL-CHARGER-1\)](#), see page 1-2

When the main battery is not installed in the terminal:

- Place the battery pack in the [Auxiliary Battery Well](#) of the [Dolphin 60s HomeBase Device \(Model D60s-HB\)](#).

For information on how to remove the battery from the terminal, see [Replacing the Main Battery](#) on page 1-12.

## Charging Time

### Important Charging Guidelines

Charging Peripheral/Accessory	60s-BATT-1
HomeBase (Model D60s-HB)	6 hours
Mobile Charger (Model 60s-MC)	6 hours
Mobile Charger with DEX Cable (Model 60s-DEXKIT)	6 hours
Mobile Charger with DB9 Cable (Model 60s-DB9KIT)	6 hours
USB Charge/Communication Cable with provided power supply (Model USB-WALL-CHARGER-1)	6 hours
USB Charge/Communication Cable (Model USB-CABLE-1) connected to a workstation (PC) 500mA USB port	8 hours

### Source Current Specifications

Battery charging times can be significantly lengthened or charging may not occur if the terminal is drawing more current than is supplied by the charging peripheral (e.g., HomeBase), USB wall charger, or USB Host (e.g., workstation PC).

- The maximum current supplied through a charging peripheral is 2.0A.
- The maximum current supplied by the USB wall charger is 900 mA.
- The maximum current supplied by a USB Host can vary from 100mA to 500mA.  
Do not attempt to charge the terminal from a 100 mA source. An active Dolphin terminal uses more current than supplied by a 100 mA source causing the terminal to continue to draw power from the battery.

*Note: Placing the terminal in Suspend mode while charging reduces the current draw of the terminal and shortens the charging time of the battery.*

To verify your terminal is not drawing more current than supplied by the charging source:

1. Touch  > **Settings**  > **System**  > **Battery**  when the terminal is connected to a charging source.

2. Check the Battery Current. If the current is positive, then charging current is going into the battery. If the current is negative, the battery is discharging current and your terminal is drawing more current than the charging source.

*Note: The charging current is always less than source current due to the terminal being in operation.*

### Charging a Severely Low or Completely Discharged Battery

Battery Charge Status	Symptom
Severely Low	Pressing the Power button does not wake the terminal from Suspend mode. The general notification LED may flash once when the Power button is pressed.
Completely Discharged	Pressing the Power button does not wake the device and the general notification LED remains off.

Use one of the following options to charge a severely low or completely discharged battery.

1. Insert the battery into the auxiliary battery well of the HomeBase. When the auxiliary battery LED on the HomeBase turns green, the battery is fully charged.
2. Dock the terminal into the charging well of a peripheral (e.g., HomeBase). The terminal starts to boot as soon as power is supplied by the base.

*Note: To prevent the possible loss of unsaved data, do not remove the terminal from the base until the battery has sufficiently charged. Touch the **Start** > **Settings** > **System** > **Battery** to view detailed information on the status of the battery.*


3. Charge the terminal from a wall power outlet using the USB Charge/Communication Cable and power supply provided with your terminal. As the battery charges, the charge indicator LED will be red. When the battery reaches a safe charge threshold, the terminal begins to boot. The length of time before the battery reaches a safe charge threshold varies depending on the extent of the battery discharge.
4. Charge the terminal from a USB host device (PC) using the USB Charge/Communication Cable.

*Note: Inadequate source current may interfere with effective battery charging; see [Important Charging Guidelines](#) on page 2-11 for additional information.*

As the battery charges, the charge indicator LED will be red. When the battery reaches a safe charge threshold, the terminal begins to boot. The length of time before the battery reaches a safe charge threshold varies depending on the extent of the initial battery discharge level and the current supplied by the USB charging source.

### Battery Error Notification

If your terminal displays the following indicators, replace the battery with a Honeywell Dolphin 60s extended battery pack. For information on how to remove the battery from the terminal, see [Replacing the Main Battery](#) on page 1-12.

- An “Authentication Error” pop up window appears during startup.
-  appears in the Title bar at the top of the touch screen.
- The General Notification LED illuminates red.
- A Notification appears on the Tile bar at the bottom of the touch screen.

---

## **Storing Batteries**

To maintain top performance from batteries, avoid storing batteries outside of the following temperature ranges:

- 14°F to 113°F (-10°C to +45°C) for short term storage of less than one month
- 32°F to 86°F (-0°C to +30°C) for long term storage

Do not store batteries in extremely high humidity. For prolonged storage, do not keep batteries stored in a charger that is connected to a power source.

## **Guidelines for Battery Pack Use and Disposal**

The following are general guidelines for the safe use and disposal of batteries:

- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Improper battery use may result in a fire, explosion or other hazard.
- We recommend use of Honeywell Li-ion battery packs. Use of any non-Honeywell battery may pose a personal hazard to the user.
- Only use the battery for the system for which it is specified. Do not use a battery in any other manner outside its intended use in Dolphin terminals and peripherals.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Replace defective batteries immediately; using a defective battery could damage the Dolphin terminal.
- Never throw a used battery in the trash. Promptly dispose of used batteries in accordance with local regulations.
- Do not short-circuit a battery or throw it into a fire; it can explode and cause severe personal injury. Do not allow metallic conductive objects to contact battery terminals.
- If you observe that the Honeywell battery supplied is physically damaged, please send it to Honeywell International Inc. or an authorized service center for inspection, see [Product Service and Repair](#) on page [TOC-ix](#).
- Battery usage by children should be supervised.
- Avoid dropping the terminal or battery. If the terminal or battery is dropped, especially on a hard surface, and the user suspects damage, send it to a Honeywell International Inc. or an authorized service center for inspection.
- If you are not sure the battery or charger is working properly, send it to Honeywell International Inc. or an authorized service center for inspection, see [Product Service and Repair](#) on page [TOC-ix](#).
- Excessive discharge can degrade battery performance. Recharge the battery when your terminal indicates low battery power.
- Although your battery can be recharged many times, the battery life is limited. Replace it after the battery is unable to hold an adequate charge.
- The Dolphin 60s should only be connected via its microUSB connector to CTIA certified adapters, products that bear the USB-IF logo or products that have completed, the USB-IF compliance program.

---

## Managing Battery Power

Letting the battery become fully discharged causes the terminal to lose all data in RAM. Honeywell recommends, you keep a charged battery in the terminal at all times to help prevent data loss. Removing the battery from the terminal erases all non-persistent memory.

### Default Critical and Low Battery Points

When the terminal is running on battery power (as opposed to external power), warnings are displayed when the battery reaches critical and low battery points. The warning points are determined by the following registry entry:

#### [HKEY\_LOCAL\_MACHINE\ControlPanel\Power]

There are two DWORD values in this registry entry: **MedState** and **LowState**.

The default values for these entries are as follows:

#### MedState=25%

This sets the Low Battery point to 25%. When the battery hits the percentage charge specified here, the user is notified.


#### LowState=10%

This sets the Critical Battery point to 10%. When the battery hits the percentage charge specified here, the user is notified.


*Note: Warnings do not appear when the terminal is on external power.*

### Setting Critical and Low Battery Points


Developers can reset the battery parameters in the registry from 0 (no warning) to 99 (would nearly always warn). You can review and set these battery points in the RegEdit Power Tool.

1. Touch  > **Power Tools** > **RegEdit**.
2. Drill down to **HKEY\_LOCAL\_MACHINE** > **ControlPanel** > **Power**.
3. Touch the **Value Name** (i.e., MedState or LowState) to change the Value Data. You can reset the Value Data from 0 (no warning) to 99 (would nearly always warn).
4. Touch **OK** to save changes.

### Checking Battery Power

1. Touch  > **Settings**  > **System** 
2. Touch **Power**  to view the power status of the main battery.

**Or**

Touch **Battery**  to view detailed information on the installed battery pack.

---

For additional information on Advanced Power Settings, [see page 6-20](#).

For additional information on the Battery Log Configuration, [see page 6-12](#).

## **System Resets**

See [Resetting the Terminal](#) on page 1-13.

## **Hardware Maintenance**

When needed, clean the image engine window and the touch screen with a clean, non-abrasive, lint-free cloth. The terminal can be cleaned with a damp cloth.

**Important** - All battery and connector doors must be present, undamaged, and properly closed on the terminal to maintain an IP54 rating.

## **Installing a SIM Card and/or Memory Card**


### *SIM Card*


Short for Subscriber Information Module, a SIM card stores the subscriber's personal information, GSM/GPRS radio settings, security keys, contacts, etc. SIM cards can be installed in compatible mobile devices, enabling you to switch devices without losing personal and setup information.

Before installing the SIM card, the service provider **must** activate the SIM card.


*Note: If no SIM card is installed, you can still make emergency phone calls (e.g., 9-1-1).*

### **Installation**


1. Suspend the terminal. Press and release the **Power** key  for approximately 4-5 seconds.
2. Unlock and remove the battery door, then remove the battery.
3. Slide the SIM Card latch toward the bottom of the terminal to unlock.

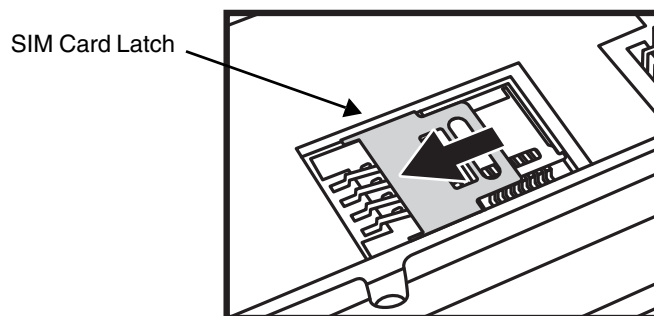


4. Lift the SIM card latch.

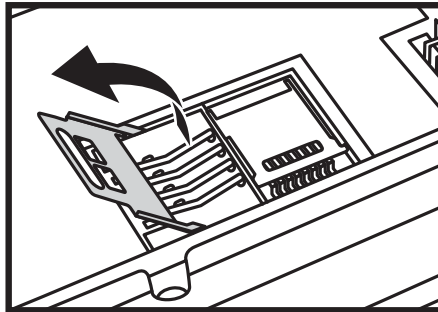


5. Slide the SIM (contacts facing down) into the socket, then close the SIM card latch.

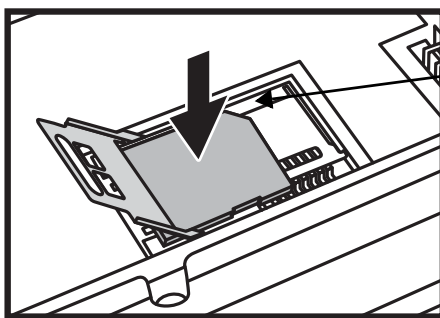

Chamfered Corner  
of SIM Card

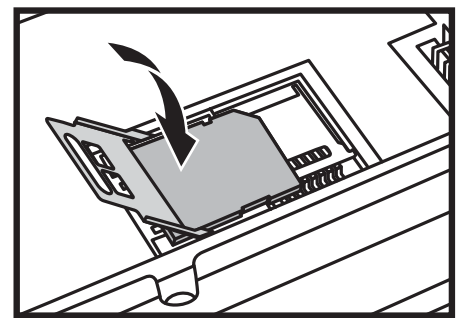

6. Lock the SIM card latch by sliding the latch toward the top of the terminal.

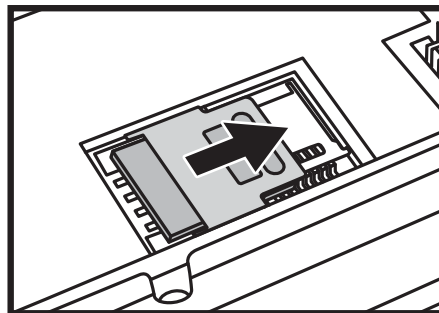


7. Install the battery, then attach and lock the battery door. The terminal begins booting as soon as power is applied.

### *Memory Card*

You can expand the terminal's memory capacity by installing a microSD or microSDHC memory card. Honeywell recommends the use of Single Level Cell (SLC) industrial grade microSD or microSDHC memory cards with Dolphin terminals for maximum performance and durability. Contact a Honeywell sales representative for additional information on qualified memory card options.


*Note: Format the memory card before initial use.*

### **Installation**


1. Suspend the terminal. Press and release the **Power** key  for approximately 4-5 seconds.
2. Unlock and remove the battery door, then remove the battery.




- 
- Slide the SIM Card latch toward the bottom of the terminal to unlock, then lift the SIM card latch. If a SIM card is installed, remove the SIM card to reveal the memory card latch.

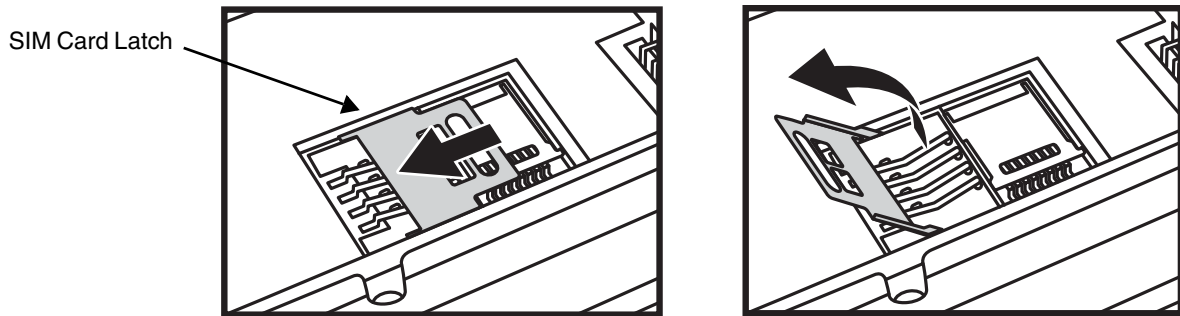


- Slide the memory card latch to the left to unlock, then lift the memory card latch.

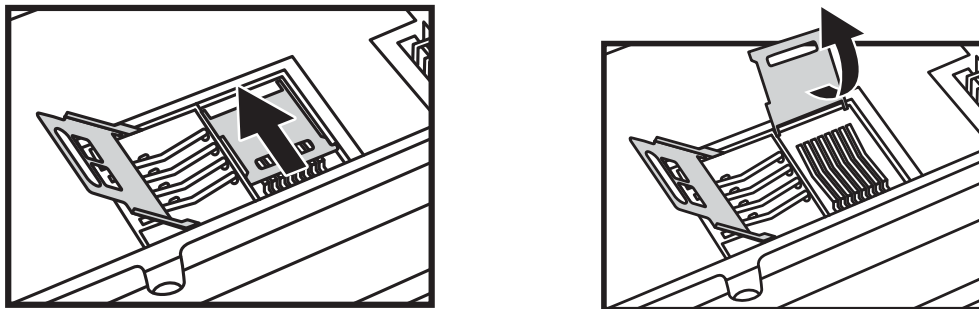


- Insert a MicroSD or MicroSDHC card into the socket aligning the corner on the card with the corner of the socket.

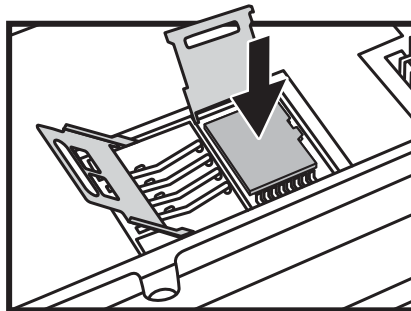

- Close the memory card latch, then lock by sliding the latch right. If you want to install a SIM card, insert the card into the SIM card socket (see [SIM Card](#)).

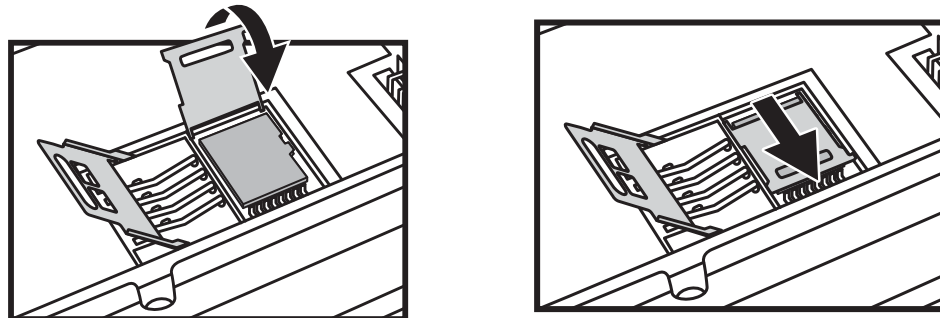

- 
7. Close the SIM card latch, then lock the SIM card latch by sliding the latch toward the top of the terminal.

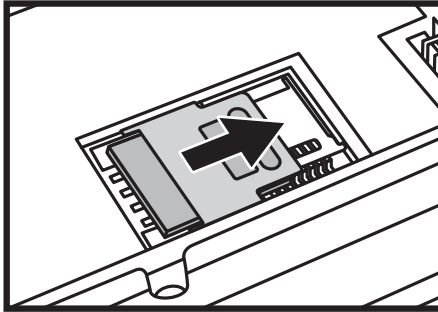

8. Install the battery, then attach and lock the battery door. The terminal begins booting as soon as power is applied.

## Using the Scan Image Engine

### Overview

The Dolphin 60s terminal houses a compact image engine that instantly reads popular 1D and 2D bar codes and supports omni-directional aiming and decoding for greater flexibility in real-world settings. The image engine can also capture black and white digital images, such as signatures and pictures of damaged inventory.

With the latest CMOS-based technology, the engine works like a digital camera and enables black and white digital image capture, signature capture, and reading of OCR characters.

### Image Engine Specifications

#### Field of View

Horizontal Field Angle (°) 21.9+/-0.5 degree

Vertical Field Angle (°) 15.9+/-0.5 degree

#### Depth of Field

The depth of field measurements used the following parameters:

- Distances are measured from the front of the engine.
- +23°C (+73°F), 0 lux
- Photographic quality codes

Symbology	Distance (in/cm) Near	Distance (in/cm) Far	Delta (in/cm)
3 mil C39/128	-	-	-
5 mil C39/128	2.25 (5.7)	4.35 (11.049)	2.1 (5.3)
7.5 mil C39/128	1.25 (3.2)	6.87 (17.4)	5.62 (14.3)
10 mil C39/128	0.67 (1.7)	9.93 (25.2)	9.26 (23.5)
15 mil C39/128	1.01 (2.6)	15.16 (38.5)	14.15 (35.94)
20 mil C39/128	1.80 (4.57)	18.56 (47.14)	16.76 (42.57)
100% 13 mil UPC	1.57 (3.9)	12.18 (30.9)	10.61 (26.9)
5 mil PDF417	-	-	-
6.7 mil PDF417	1.53 (3.8)	4.63 (11.7)	3.1 (7.8)
10 mil PDF417	1.38 (3.5)	7.34 (18.6)	5.96 (15.1)
5 mil microPDF	-	-	-
5 mil DataMatrix	-	-	-
10 mil DataMatrix	1.52 (3.8)	4.87 (12.3)	3.35 (8.5)

20 mil DataMatrix	1.07 (2.7)	9.66 (24.5)	8.59 (21.8)
10 mil QR	1.50 (3.8)	5.13 (13.0)	3.63 (9.2)
20 mil QR	2.48 (6.3)	9.66 (24.5)	7.18 (18.2)
32 mil Maxicode	1.56 (3.9)	13.19 (33.5)	11.63 (29.5)

### **Supported Bar Code Symbolologies**

<b>Symbology Type</b>	<b>Symbology Name</b>	
<b>1D Symbolologies</b>	Codabar Code 3 of 9 Code 11 Code 32 Pharmaceutical (PARAF) Code 93 Code 128 EAN with Add-On EAN with Extended Coupon Code EAN-8 EAN-13 GS1-128 GS1 Databar Interleaved 2 or 5	ISBT 128 Matrix 2 of 5 MSI Plessey Straight 2 of 5 IATA Straight 2 of 5 Industrial Telepen Trioptic Code UPC with Add On UPC-A UPC-E
<b>2D Symbolologies</b>	Aztec Codablock A Codablock F Data Matrix	GS1 Databar MaxiCode Micro PDF PDF417 QR Code
<b>Composite Codes</b>	UPC/EAN UCC/EAN GS1 Databar	
<b>OCR</b>	MICR E 13-B OCR-A OCR-B	
<b>Postal Codes</b>	Postnet and most international 4-state codes Australian Post British Post	Canadian Post China Post

---

## Decoding

The terminal supports two types of image decoding for use in various bar code reading and imaging applications: full-area imaging and Advanced Linear Decoding (ALD).

### Full-Area Imaging


Full-area imaging provides omni-directional reading of linear and non-linear 1D and 2D bar codes, OCR, signature capture, and picture taking. When reading all bar code types using full-area imaging, a positive read can be obtained from many positions; see [The Aiming Beam](#) on page 3-3. To achieve the best read, the aiming beam should be centered horizontally across the bar code.

### ALD


ALD provides fast reading of linear and stacked linear bar codes. To achieve a positive read when reading linear 1D and PDF417 bar codes, the aiming beam should be centered horizontally across the bar code. When ALD is enabled, the reader does not read matrix or postal codes.

### Using the Scan Demo to Decode a Bar Code

The aiming beam should be oriented in line with the bar code to achieve optimal decoding.

1. Touch  > **Demos**  > **Scan Demo** .
2. Point the Dolphin terminal at the bar code. Press and hold the **Scan** button.

*Note: The right side button also triggers the scan/imager.*

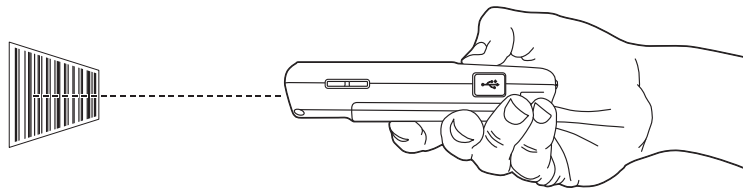

3. Center the aiming beam over the bar code; see [The Aiming Beam](#) on page 3-3

*Note: By default, the LED illumination and aiming beam options are enabled. For optimum performance, avoid reflections by scanning the bar code at a slight angle.*

4. When the bar code is successfully decoded, the terminal beeps and the bar code information appears on the touch screen.

### The Aiming Beam

The aiming beam is smaller when the terminal is held closer to the code and larger when it is farther from the code. Symbologies with smaller bars or elements (mil size) should be read closer to the unit whereas symbologies with larger bars or elements (mil size) should be read farther from the unit.

---

## ***Linear Bar Code***



## ***2D Matrix Symbol***



## ***Capturing Images Using the Imaging Demo***

The image-capture process is an intuitive, split-second operation for experienced users. By following the basic guidelines, new users can easily develop their own technique and, with practice, quickly learn to adapt it to different application environments.

### **Image Preview**

When the imaging process is initiated, the touch screen displays a preview of the object. This is a live video image of what the imager is currently viewing. The live video image has a slightly degraded appearance compared to the captured image. This is normal.

### **Scan Key**

On all Dolphin 60s terminals, the Scan button captures images.

### **File Formats**

File formats supported for image storage include Bitmap (BMP), JPEG (JPG) and Portable Network Graphics (PNG). The default file format for images is a gray scale JPG.

### **Compression**

Digital images have a maximum image size of 640 x 480 pixels and may have up to a 256 (8 bit) gray scale image definition.

The image quality and related file size are determined by the data compression method used by the software application used to take images. The average size of the image file is approximately 4–8K. However, the size of the image depends on the content of the image - the more complex the content, the larger the file size.

## ***Taking an Image***


The following steps are basic guidelines for taking images:

---

1. Touch  > **Demos** > **Imaging Demo** .

2. Point the Dolphin terminal at the object. To preview the image, press and hold the **Scan** button.

*Note: The general notification LED above the touch screen illuminates red while the Scan button is pressed.*

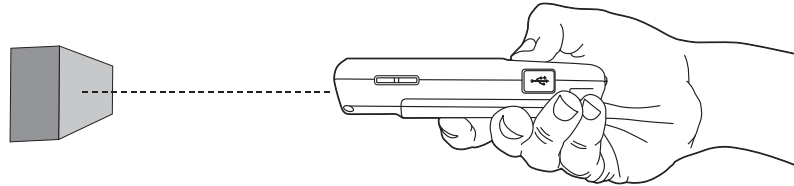

3. Adjust the terminal's position until the object appears on the touch screen the way you want it to appear in the image.

4. Release the **Scan** button to capture the image.

5. Touch **File** on the Tile bar, then select **Save** or **Save As**.

*Note: Unless otherwise specified, the image is saved to the **My Device\My Documents** folder.*

### **Uploading Images**

Image files can be uploaded to a host workstation using Microsoft ActiveSync or Windows Mobile Device Center and a Dolphin communication peripheral. For additional information see [Connecting and Synchronizing the Terminal and Workstation](#) on page 7-9.








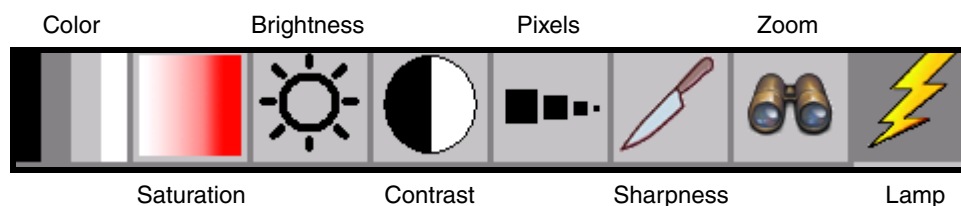
## Using the Color Camera

### Overview


Dolphin 60s terminals are equipped with 5.0-Megapixel auto focus cameras to provide easy integration of color picture and video capture into business applications. The camera lens and camera flash are located on the back panel of the terminal.


### Taking a picture using the Camera Demo tool

1. Touch  > **Demos**  > **Camera Demo** .
2. Adjust the camera settings using the icon menu at the top of the display screen.



3. Point the terminal's camera lens at the object you want to capture.

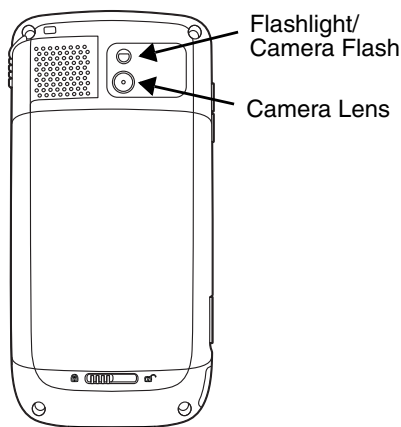


4. Center the object you want to take a picture of on the live preview screen.
5. Press the **ENT** key or Touch  on the touch screen.

*Note:* Touch the green arrow  to review or edit your pictures.

To exit the picture review/edit screen, touch the green box .



## Camera Options

The Camera Options menu provides access to create customized profiles, adjust audible feedback, modify file preferences, and set caption options. Touch **Options** > **Camera** to access the Camera Options menu.

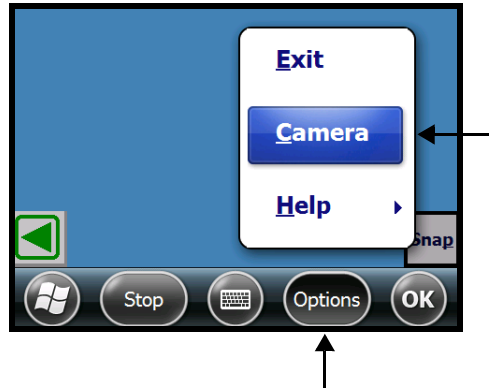


The Camera Options screen contains five tabs: **Profile**, **Display**, **Capture**, **Caption**, and **File**.

### Profile Tab

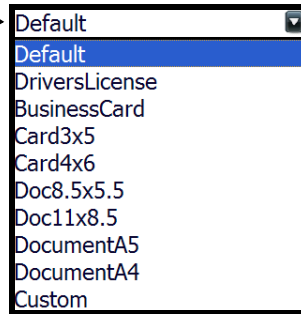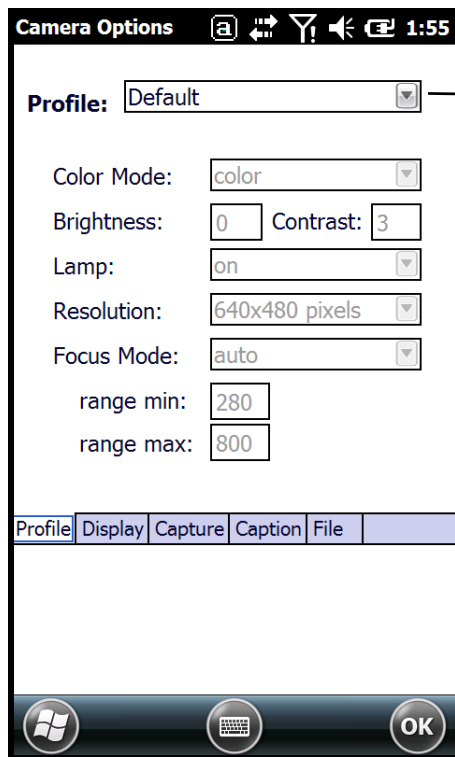

The profile tab allows you to customize your camera settings, or chose from several predefined profiles designed to provide the best picture quality for common tasks.

### Display Tab

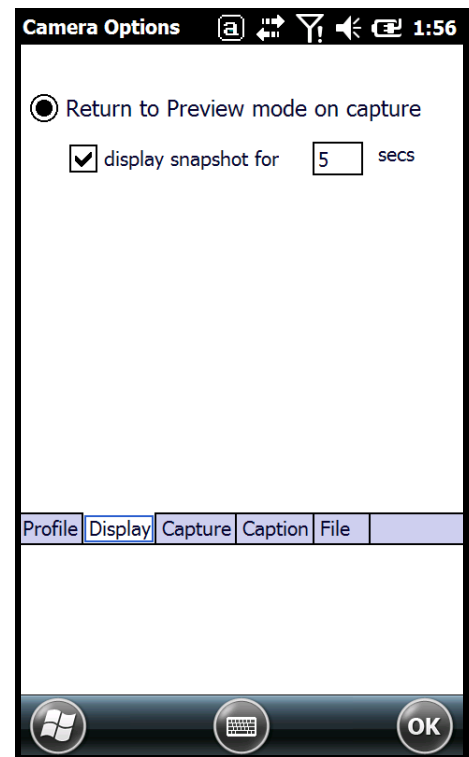

### Capture Tab

Camera Options [a] [↔] [Y] [🔊] [📷] 1:56

Focus:

Sound Effects:

Profile | Display | **Capture** | Caption | File

[Windows] [Keyboard] [OK]

### Caption Tab

Camera Options [a] [↔] [Y] [🔊] [📷] 1:56

**Include:**

- Date  Time
- File Name
- GPS coordinates

Profile | Display | Capture | **Caption** | File

[Windows] [Keyboard] [OK]

### File Tab

Camera Options [a] [↔] [Y] [🔊] [📷] 1:56

Folder:  [...]

**File:**

Prefix:

Index:


Format:

Profile | Display | Capture | Caption | **File**

[Windows] [Keyboard] [OK]

---

## Taking a picture using the Windows Embedded Handheld 6.5 Camera tool

1. Touch  > **Pictures & Videos > Camera**
2. Point the terminal's camera lens at the object you want to capture.  
*Note: The camera lens is located on the back panel of the terminal.*
3. Center the object you want to take a picture of on the live preview screen. Adjust the camera settings or let the camera auto-focus.  
*Note: Focus On is the default Focus mode. In this mode, the camera performs auto-focus while it is in preview mode but not during picture capture.*
4. Press the **ENT** button to capture the photo.
5. The touch screen displays the captured photo. Touch **OK** or **Camera** on the Tile Bar to return to the active viewfinder screen.

### Menu


Touch **Menu** on the Tile Bar at the bottom of the touch screen to adjust the camera settings, switch to video mode, and access additional camera options.

Item	Descriptions
Video	Activate Video Mode
Mode	Set Mode (i.e., Normal, Burst, or Timer)
Resolution	Set Picture Resolution (i.e., QVGA, VGA, SVGA, XGA, UXGA, QXGA, or MEGA5)
Zoom	Set Zoom (i.e., x1, x2, or x3)
Flash	Set Camera Flash On or Camera Flash Off
Focus	Set Focus Off, Focus On (default), Focus on Trigger, or Fixed-Focus  Focus On (default setting): The camera auto-focuses while it is in preview mode. As you move the camera, the lens targets and auto-focuses on different objects. Once the picture is in focus in preview screen, the camera is ready for the picture to be taken. To reduce the capture time of the photo, the camera does not auto-focus during picture capture process.  Focus on Trigger: The camera auto-focuses while it is in preview mode and again during picture capture. The Focus on Trigger lengthens the capture time of the photo.
Brightness	Set the brightness setting from +2.0 EV to -2.0 EV in .5 EV increments
Full Screen	Switch to full screen mode (Tap screen to exit full screen mode)
Options	Set Camera Options, Video Options, Slide Show Options or General Options


## Options

Touch **Menu** > **Options**. The Options menu contains four screens:


### General Tab

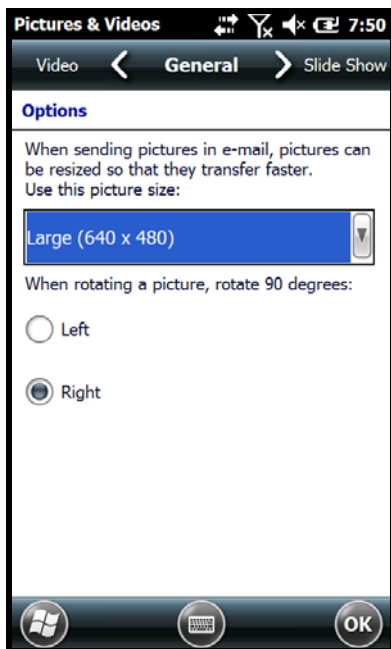


### Slide Show Tab

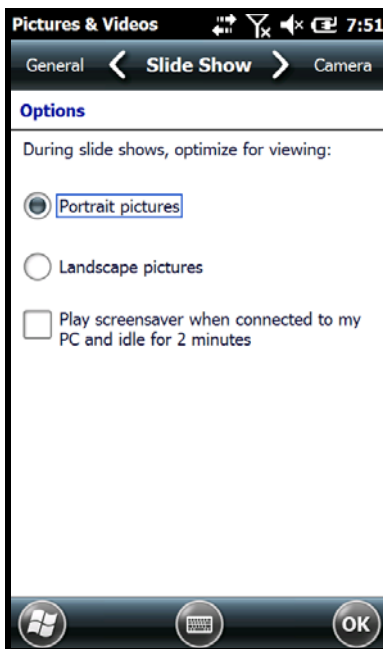

### Camera Tab

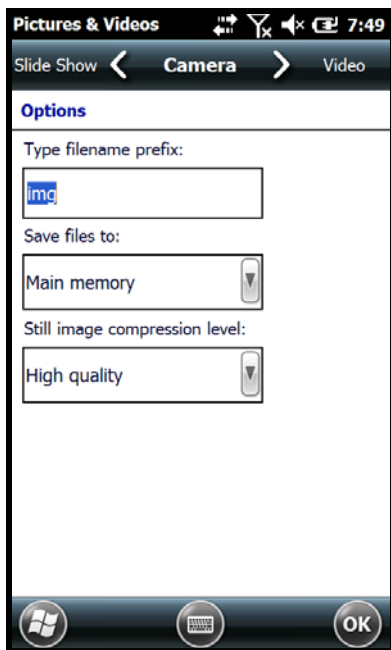


### Video Tab

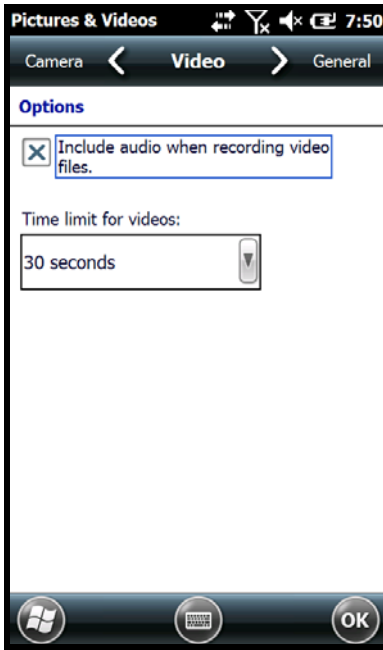

---

## ***Recording Video using the Windows Embedded Handheld 6.5 Camera Tool***

1. Touch  > **Pictures & Videos** > **Camera** > **Menu** > **Video**
2. Point the terminal's camera lens at the object you want to capture.
3. Press the **ENT** button to start recording.
4. Touch **Stop** on the screen or press **ENT** button to stop recording.

## ***Uploading Pictures and Videos***

Picture and Video files can be uploaded to a host workstation using Microsoft ActiveSync or Windows Mobile Device Center and a Dolphin communication peripheral. For additional information see [Connecting and Synchronizing the Terminal and Workstation](#) on page 7-9.

## Using the Keyboards


### Available Keyboards

Note: Contact a sales representative for information on additional keyboard options.

46-Key QWERTY Keyboard



30-Key Numeric Keyboard

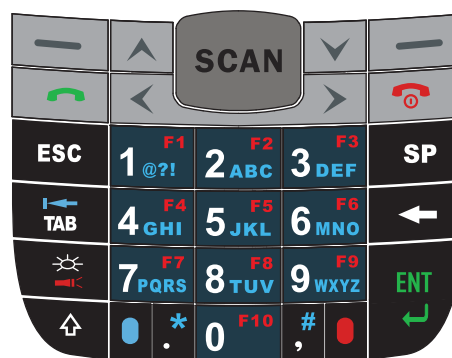

### All Keyboards Contain the Following:

- Backlit for easy viewing in various lighting conditions.
- Centrally located Scan key for both right- and left-hand operation.
- Color-coding so you can clearly see the most common keyboard combinations.
- Function, navigation, and modifier keys.

### Keyboard Combinations

See [30-Key Numeric Keyboard](#) on page 5-4.

See [46-Key QWERTY Keyboard](#) on page 5-6.








### Common Buttons

See [Using the Function Keys](#) on page 5-2.



See [Using the Modifier Keys](#) on page 5-2.

See [Using the Navigation Keys](#) on page 5-3.


## Using the Function Keys

Name	Key Symbol	Function
Backlight		Turns the keyboard backlight on or off.
Flashlight	 &  Red	Turns the flashlight on or off. The flashlight is located on the back panel of the terminal.
Backspace		Moves the cursor back one space each time the key is pressed. If you are typing text, it deletes the previous character each time it is pressed.
Enter		Confirms data entry.
Escape	ESC	Cancels the current action.
Power/End Call Key		The Power key, located in the upper right corner of the keypad, puts the terminal in Suspend Mode or wakes the terminal from Suspend Mode, see <a href="#">Suspend Mode</a> on page 1-12. This key is also used to end/disconnect a phone calls.
SCAN Key	SCAN	Activates the scan and wakes the terminal from Suspend Mode. The key location allows convenient one-handed image-taking and/or bar code decoding.
Space	SYMBOL SPACE or SP	Moves the cursor one space.
Tab	 TAB	Moves the cursor to the next tab stop or the next control (on a form).

## Using the Modifier Keys





Name	Key	Function
Blue & Red	 Blue  Red	<p>The blue and red keys are used in combination with other keys to type special characters and perform system functions. Each keyboard is color-coded to indicate the character typed or function performed when specific keys are pressed immediately after the blue or red modifier key.</p> <p><i>Normal</i> Press the blue or red key once to modify only the next key pressed.</p> <p><i>Locked</i> Press the blue or red key twice to toggle the modifier lock on or off. If a modifier key is locked on, the next keys pressed are modified until the lock is turned off. This prevents having to press the modifier key each time a key is pressed.</p> <p><i>Note: Press the locked modifier key once to temporarily unlock the modifier key for a single key stroke.</i></p>



Name	Key	Function
Shift		The shift key modifies only the next key pressed; it must be pressed before each key you wish to modify. Shift toggles the keyboard between uppercase alphabet mode and lowercase alphabet mode.  Press the shift key twice to toggle Caps Lock ON or OFF.


### ***Using the Navigation Keys***

Located in the center of each keyboard for easy access with either hand, the navigation keys navigate the cursor through application screens.

Key	Function
	Moves the cursor up one row or line.
	Moves the cursor down one row or line.
	Moves the cursor one character to the right.
	Moves the cursor one character to the left.

*Note: Additional functionality varies according to the application in use.*

## 30-Key Numeric Keyboard

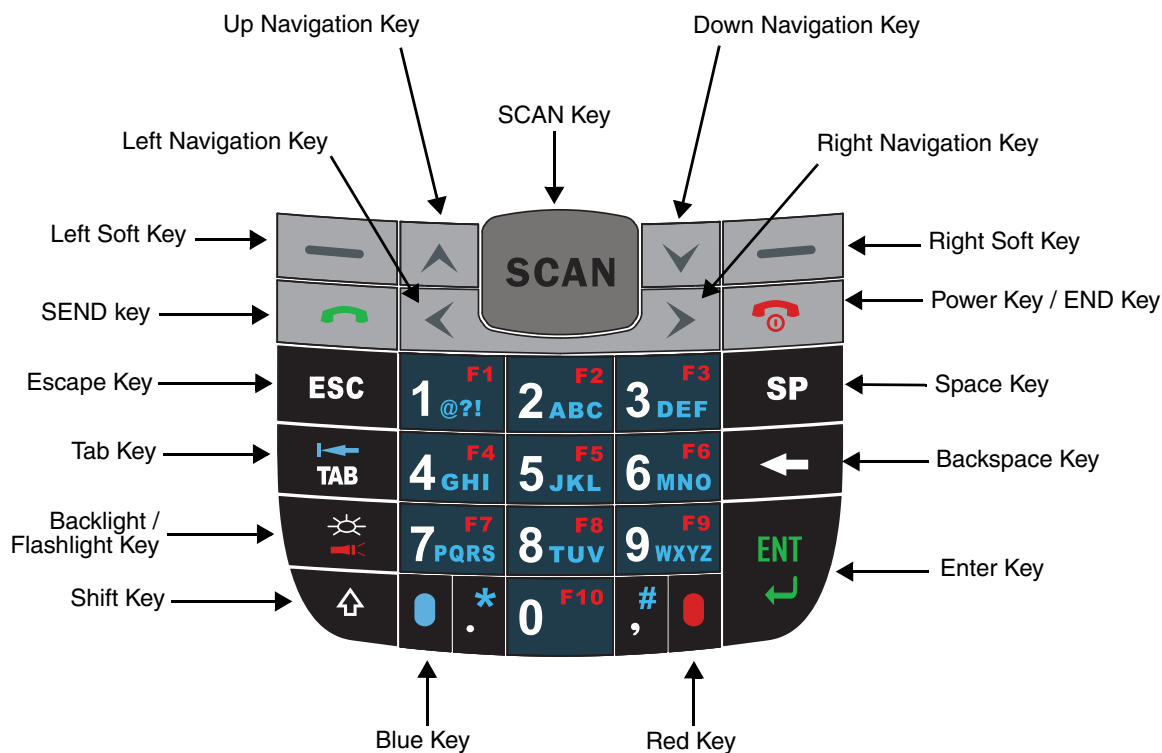


## 30-Key Numeric Keyboard Combinations

Key	Normal	Blue + Normal	Blue + Normal + Shift	Red + Normal
<b>Left Soft Key</b>	Left Soft Key performs the left function.			
<b>SCAN</b>	SCAN			
<b>Right Soft Key</b>	Right Soft Key performs right function.			
<b>SEND</b>	SEND	Cold Boot	Cold Boot	SEND
<b>Left Navigation</b>	Left			
<b>Up Navigation</b>	Up			
<b>Down Navigation</b>	Down			
<b>Right Navigation</b>	Right			

Key	Normal	Blue + Normal	Blue + Normal + Shift	Red + Normal
<b>Power/END</b>	Power On/Off or END Call	Warm Boot	Warm Boot	Power On/Off or END Call
<b>TAB</b>	TAB	back TAB	TAB	TAB
<b>1</b>	1	@ ? !	@ or ? or !	F1
<b>2</b>	2	ABC	abc	F2
<b>3</b>	3	DEF	def	F3
<b>Space</b>	Space			
<b>Backlight</b>	Backlight	Backlight	Backlight	flashlight
<b>4</b>	4	GHI	ghi	F4
<b>5</b>	5	JKL	jkl	F5
<b>6</b>	6	MNO	mno	F6
<b>Backspace</b>	backspace			
<b>ESC</b>	Escape			
<b>7</b>	7	PQRS	pqrs	F7
<b>8</b>	8	TUV	tuv	F8
<b>9</b>	9	WXYZ	wxyz	F9
<b>ENTER</b>	Enter			
<b>Shift</b>	Shift			
<b>Period</b>	period	asterisk	asterisk	period
<b>Blue</b>	Blue			
<b>0</b>	0	0	0	F10
<b>Red</b>	Red			

## 46-Key QWERTY Keyboard

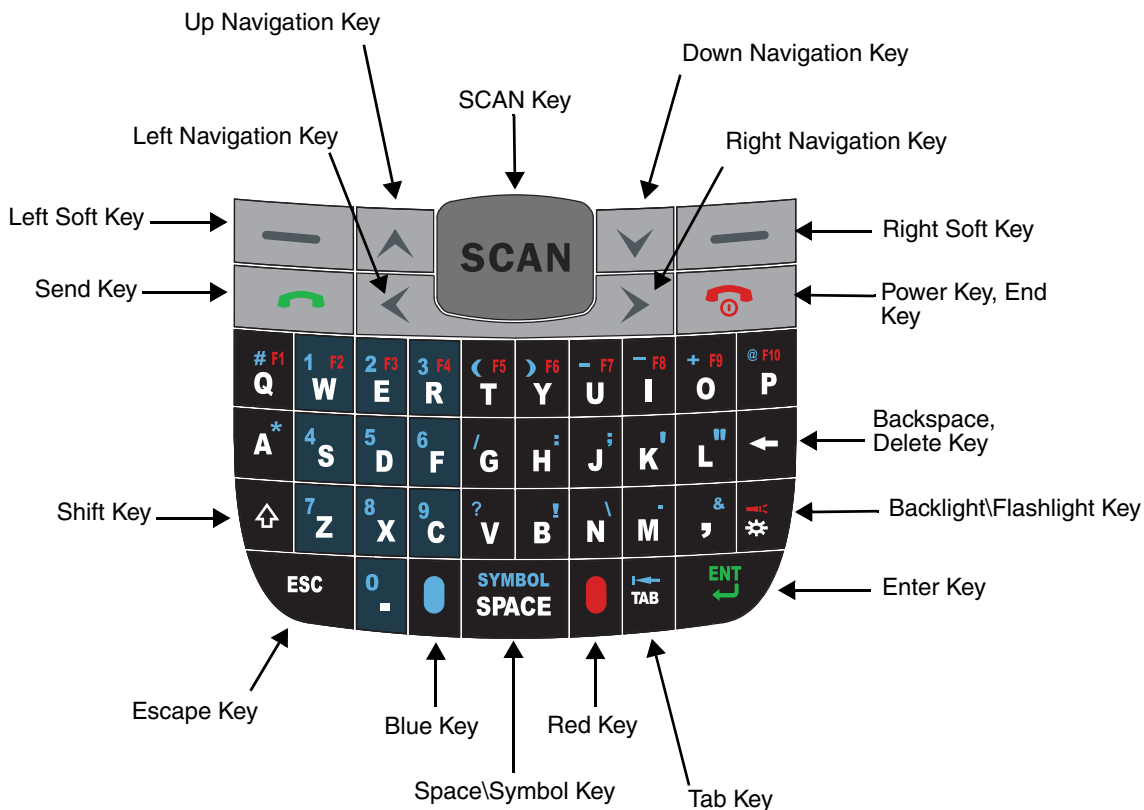

## 46-Key QWERTY Keyboard Combinations



Key	Normal	Shift + Normal	Blue + Normal	Red + Normal
Send	Send	Send	Cold Boot	Send
Left Soft Key	Left Soft Key			
SCAN	Scan			
Right Soft Key	Right Soft Key			
Power/End	Power/End	Power/End	Warm Boot	Power/End
Left Navigation Key	Left			
Up Navigation	Up			


Key	Normal	Shift + Normal	Blue + Normal	Red + Normal
<b>Down Navigation</b>	Down			
<b>Right Navigation</b>	Right			
<b>Q</b>	q	Q	# (pound/group)	F1
<b>W</b>	w	W	1	F2
<b>E</b>	e	E	2	F3
<b>R</b>	r	R	3	F4
<b>T</b>	t	T	(	F5
<b>Y</b>	y	Y	)	F6
<b>U</b>	u	U	_ (underscore)	F7
<b>I</b>	i	I	- (minus)	F8
<b>O</b>	o	O	+ (plus)	F9
<b>P</b>	p	P	@	F10
<b>A</b>	a	A	* (asterisk)	
<b>S</b>	s	S	4	
<b>D</b>	d	D	5	
<b>F</b>	f	F	6	
<b>G</b>	g	G	/	
<b>H</b>	h	H	: (colon)	
<b>J</b>	j	J	; (semi-colon)	
<b>K</b>	k	K	' (single quote)	
<b>L</b>	l	L	" (double quote)	
<b>Backspace</b>	Backspace	Backspace		
<b>Shift</b>	Shift			
<b>Z</b>	z	Z	7	






<b>Key</b>	<b>Normal</b>	<b>Shift + Normal</b>	<b>Blue + Normal</b>	<b>Red + Normal</b>
<b>X</b>	x	<b>X</b>	8	
<b>C</b>	c	<b>C</b>	9	
<b>V</b>	v	<b>V</b>	? (question mark)	
<b>B</b>	b	<b>B</b>	! (exclamation point)	
<b>N</b>	n	<b>N</b>	\ (back slash)	
<b>M</b>	m	<b>M</b>	. (period)	
<b>Comma</b>	, (comma)	, (comma)	& (ampersand)	, (comma)
<b>Backlight</b>	Backlight	Backlight	Backlight	Flashlight
<b>ESC</b>	Escape			
<b>Period</b>	. (period)	. (period)	0	. (period)
<b>Blue</b>	Blue			
<b>SYMBOL/ SPACE</b>	Space	Space	SYMBOL	Space
<b>Red</b>	Red			
<b>TAB</b>	Tab	Back Tab	Back Tab	Tab
<b>ENT</b>	Enter			

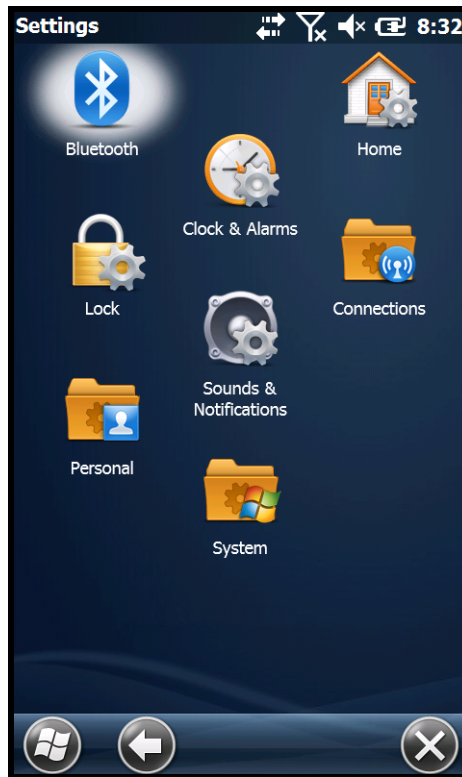


## System Settings

### Overview

Customized settings are available on the System Settings menu. Touch  > **Settings**  and the settings screen opens.




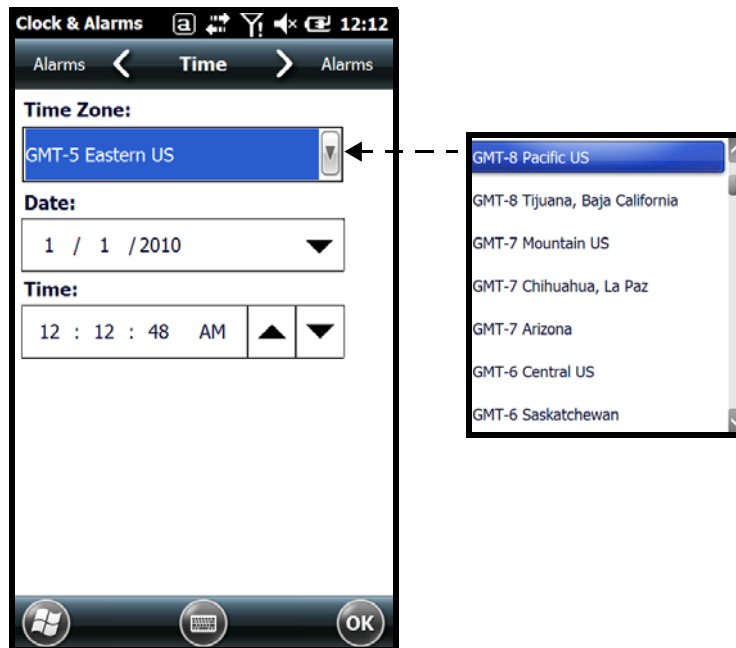
Icon		Description
<b>Bluetooth</b>		Configure the Bluetooth radio. See <a href="#">Working with the Bluetooth Radio</a> on page 9-1.
<b>Home</b>		Customize the look and the information displayed on the Home screen.
<b>Clock &amp; Alarms</b>		Set the system clock, date, time and schedule alarms. See <a href="#">Clock &amp; Alarms</a> on page 6-2.
<b>Lock</b>		Password protect the terminal to limit access. See <a href="#">Lock</a> on page 6-3.
<b>Sounds &amp; Notifications</b>		Set the sound volume, enable or disable sounds for specific actions, set sound parameters for system notifications and enable or disable vibrator notification.

Icon		Description
Connections		Establishes network connections settings. See <a href="#">Connections Menu</a> on page 7-1.
Personal		Customizes buttons, and set SIP options. See <a href="#">Personal Menu</a> on page 6-4.
System		Adjusts system settings. See <a href="#">System Menu</a> on page 6-8.

## Clock & Alarms

The Clock & Alarms settings can be accessed from the **Home** screen or the **Settings** menu.

1. On the **Home** screen, touch the line that displays the time and date or touch  > **Settings** > **Clock & Alarms**.
2. The **Time** settings screen provides access to set the system clock (i.e., Time Zone, Date, and Time). All scheduled items run according to the settings on the screen. Touch the arrow to the right of the time zone to open the drop down menu. Select the appropriate time zone from the menu. Set the correct time and date in the remaining fields and touch **OK** to save.








---




## Lock

The Lock settings screen provides access to additional password security features that enable you to prevent an unauthorized person from unlocking the touch screen and accessing the terminal. Select from two password security options: a **Strong Alphanumeric Password** or a **Simple PIN**.

To **add** password protection:

1. Touch  > **Settings**  > **Lock** .
2. Check the box next to the phrase **"Prompt if phone unused for"**.
3. Select the length of inactive time you want the terminal to wait before implementing password security for terminal access.
4. Select **Strong Alphanumeric Password** or **Simple Pin** from the Password type drop-down menu.
5. Input the **Password** you want to use to unlock the terminal.
6. Input the password a second time to **Confirm**.
7. Touch **OK** on the tile bar.
8. Select **Yes** to save the password settings.

To **remove** password protection:




1. Touch  > **Settings**  > **Lock** .
2. Enter your password.
3. Uncheck the box next to the phrase **"Prompt if phone unused for"**.
4. Touch **OK** on the tile bar.

---

## Personal Menu

To access the Personal Menu, touch  > **Settings**  > **Personal** . The screen opens displaying the Personal Menu.



Icon		Description
<b>Buttons</b>		The Dolphin 60s has three programmable buttons (i.e., Right and Left Soft Keys and Right Scan/Image Button). Touch the Buttons icon to program the buttons to perform specific tasks. See <a href="#">Buttons</a> on page 6-5.
<b>Owner Information</b>		Enter your contact information (e.g., name, company, address, telephone number and E-mail address).
<b>Phone</b>		The Phone icon is present on Dolphin models equipped with WWAN radio (GSM/UMTS/GPRS/EDGE) capabilities. Touch this icon to set up user parameters. See <a href="#">Options</a> on page 8-6.


---

## Buttons

The Dolphin 60s has three programmable buttons: **Right Scan/Image** side button, **Left** and **Right Soft Key** buttons. Use the **Buttons** setting to reassign the buttons to launch applications or execute commands.

### Changing Button Assignments

1. Touch  > **Settings**  > **Personal**  > **Buttons** .

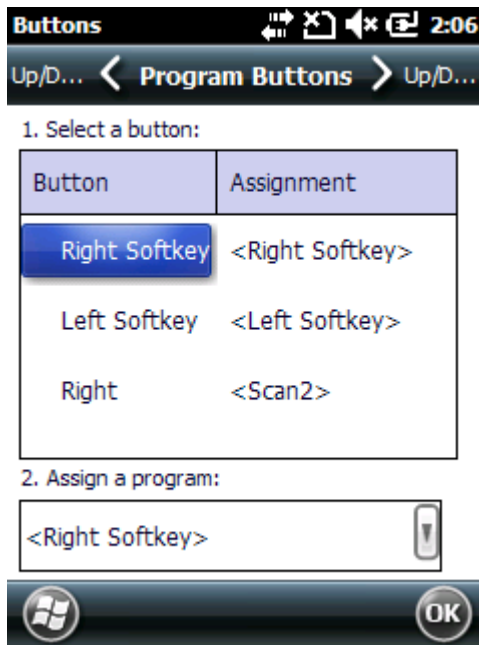

*Note: The buttons that appear on this window are the only buttons that can be programmed via the Buttons setting. You cannot add buttons to this window.*

2. To change button assignment, touch on the name of the button in the **Button** column, and then select a program or command in the **Assign a program** drop down list.
3. Touch **OK** to save.
4. Press the button to verify that the program is launched or action performed.

### Available Applications

The **Assign a program** list contains the applications installed on the terminal. If there is a program installed that you would like to see in this list, paste a Shortcut to the program in the `\\Windows\Start Menu\Programs` folder. For instructions about creating shortcuts, see [Using File Explorer](#) on page 6-6

---

## Additional Functions



The **Assign a program** list also contains the following commands:


Command	Description
<Context Menu>	Performs the same function as touch-and-hold to open the context menu for the control.
<Home>	Returns to the Home screen.
<Input Panel>	Opens the soft input panel.
<Left Softkey>	Opens the menu or performs the action displayed on the left side of the Command bar.
<None>	Nothing happens when the button is pressed.
<OK/Close>	Performs the same function as touching <b>OK</b> on the screen.
<Right Softkey>	Opens the menu or performs the action displayed on the right side of the Command bar.
<Rotate Screen>	Changes the screen orientation from portrait to landscape.
<Scroll Down>	Scrolls down in the open application.
<Scroll Left>	Scrolls left in the open application.
<Scroll Right>	Scrolls right in the open application.
<Scroll Up>	Scrolls up in the open application.
<Start Menu>	Opens the Start menu.

## Using File Explorer


If you do not see the program listed under the Assign a Program list, you can either use File Explorer on the terminal or ActiveSync (see page 6-7) on the workstation to create a shortcut to the program and place the shortcut in the Start Menu folder.

*Note: We recommend that you Copy and Paste Shortcut so that you do not alter your program configurations by accident. Using Copy and Paste Shortcut (as opposed to Cut and Paste) ensures that the program files remain where they need to be for the system to find them to perform system functions.*

1. Touch  > **File Explorer**  .
1. Touch the **Program Files** folder under **My Device**.
2. Touch and hold on the program, then touch **Copy** on the pop-up menu.
3. Navigate back to the **My Device** root directory, then touch **Windows** > **Start Menu**.

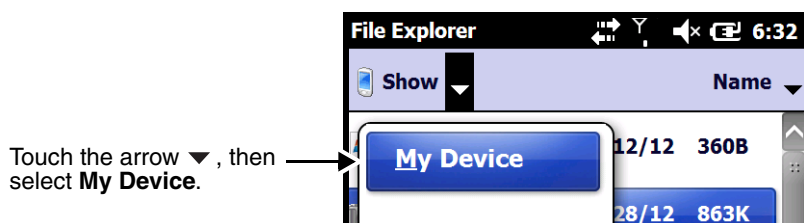

4. Touch and hold a blank area of the window, then touch **Paste Shortcut** on the pop-up menu.  
*Note: If there is no blank space available in the window, touch on **Menu > Edit > Paste Shortcut**.*

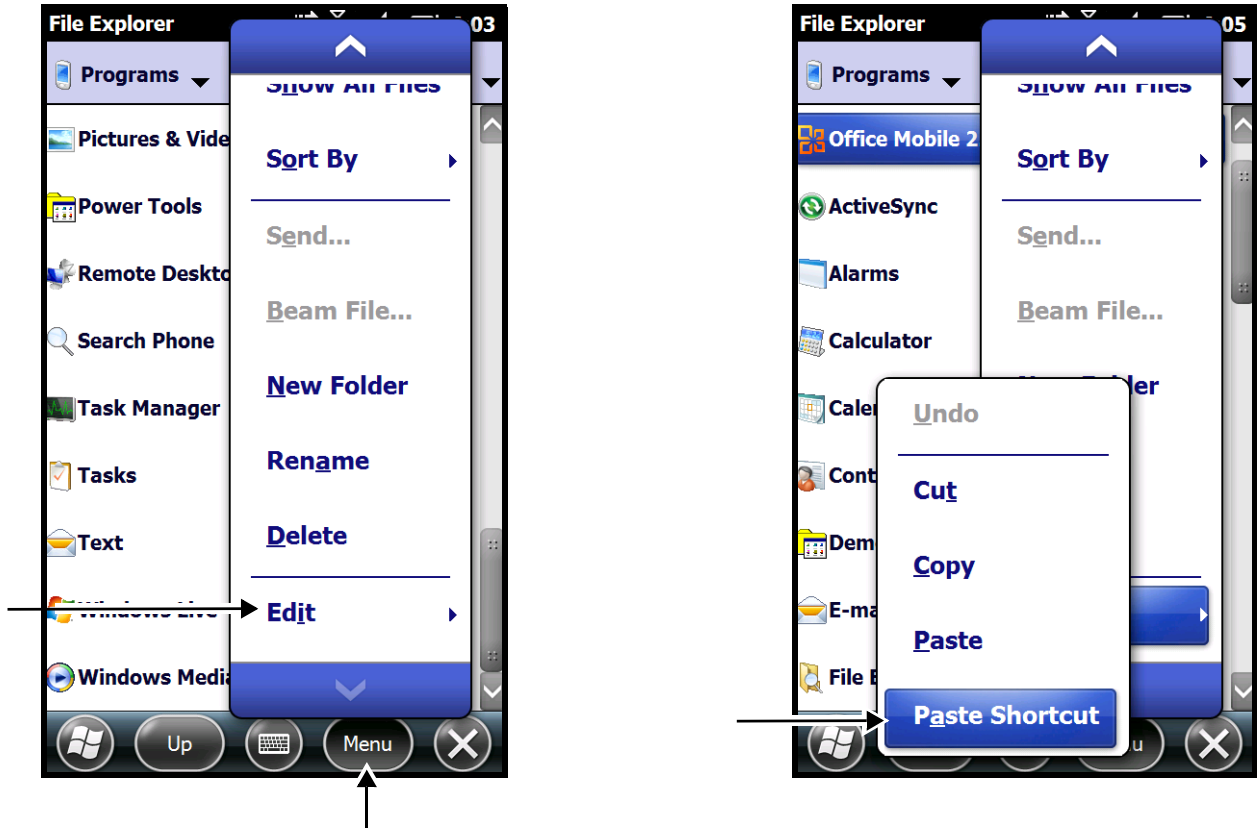

5. Touch  to verify that the program now appears on the **Start** menu.

### *Using ActiveSync on the Workstation*

Here, you are performing the same basic process as on the terminal, except that you are using the Explore utility (Windows Explorer) to copy and paste the shortcut.







1. Connect the terminal to the workstation using a Dolphin 60s peripheral.
2. Open **ActiveSync > Explore** and navigate to the program.
3. Right-click on the program and select **Create Shortcut**.
4. Select the shortcut, right-click, and select **Cut**.
5. Navigate to the **Start Menu** folder (**Windows > Start Menu > Programs**).
6. Right-click on an empty area and select **Paste Shortcut**.
7. On the terminal, touch the **Start** menu.
8. Verify that program appears.











## System Menu

The System menu enables you to verify and sometimes alter system parameters.

To access the System menu, go to  > **Settings**  > **System** . Touch the appropriate icon to open that system setting.



Icon		See Page
About		See <a href="#">About</a> on page 6-9.
Backlight		See <a href="#">Backlight</a> on page 6-11.
Battery		See <a href="#">Battery</a> on page 6-12.
Certificates		See <a href="#">Certificates</a> on page 6-14.
Encryption		See <a href="#">Encryption</a> on page 6-14.
Error Reporting		See <a href="#">Error Reporting</a> on page 6-15.

Icon		See Page
HSM SystemInfo		See <a href="#">HSM SystemInfo</a> on page 6-15.
Managed Programs		See <a href="#">Managed Programs</a> on page 6-16.
Memory		See <a href="#">Memory</a> on page 6-17.
Power		See <a href="#">Power</a> on page 6-18.
Regional Settings		See <a href="#">Regional Settings</a> on page 6-19.
Remove Programs		See <a href="#">Remove Programs</a> on page 6-20.
RIL		See <a href="#">RIL</a> on page 6-20.
Screen		See <a href="#">Screen</a> on page 6-21.
SIP Config		See <a href="#">SIP Config</a> on page 6-15.
Task Manager		See <a href="#">Task Manager</a> on page 6-22.

## About

The **About** system settings screen displays specific information about the terminal. Three information screens are available: **Version**, **Device ID**, and **Copyrights**.

To access the **About** system screen, touch  > **Settings**  > **System**  > **About** .

### The Version Screen

Displays the information about the software, operating system, and processor.

---

### **The Device ID Screen**

Displays the information the terminal uses to identify itself to other devices. It can be important to know this information if the Dolphin terminal is going to be part of a networked system of devices.

- **Device name:** Displays the system's default name. This is the name used by ActiveSync.
- **Description:** Displays the description of the device ID.

### **The Copyrights Screen**

Displays important copyright information.



## Backlight


The Backlight system setting enables you to customize backlight functionality for the display and keypad (i.e., Send, Home, Back and End buttons). The settings menu contains three tabs: **Dim Backlight**, **Brightness** and **Keypad Backlight**.

To access the Backlight settings, touch  > **Settings**  > **System**  > **Backlight** .

### Dim Backlight

The **Dim Backlight** settings determine if the backlight dims during periods of non-use and how many minutes you want to elapse before the backlight automatically dims when the terminal is running on battery power, external power or USB power.

- **Battery Power:** The terminal is being powered by the battery.
- **External Power:** The terminal is being powered by an external power source, e.g., HomeBase or Mobile Base.
- **USB Power:** The terminal is being powered by a USB connection, e.g., the Charge/Communication cable connected to a workstation (PC) or used in conjunction with the provided power supply (USB-WALL-CHARGER-1).

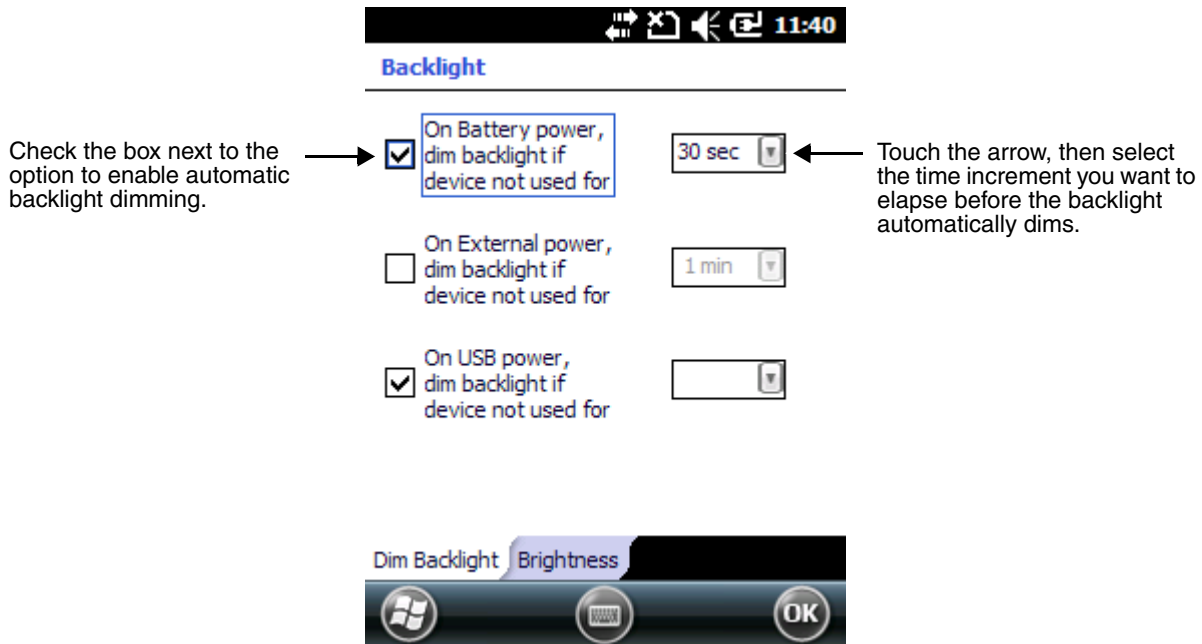


### Brightness

The **Brightness** tab determines the backlight intensity of the display when the terminal is in use. The settings customize how the terminal responds to the environmental lighting conditions in which the terminal is being used.

---

When the terminal is in a specific environment, you can manually adjust the brightness level for the environment by changing the Brightness level number from 1 to 8 or by dragging the slider left or right on the screen. The highest Brightness level is indicated with an 8.

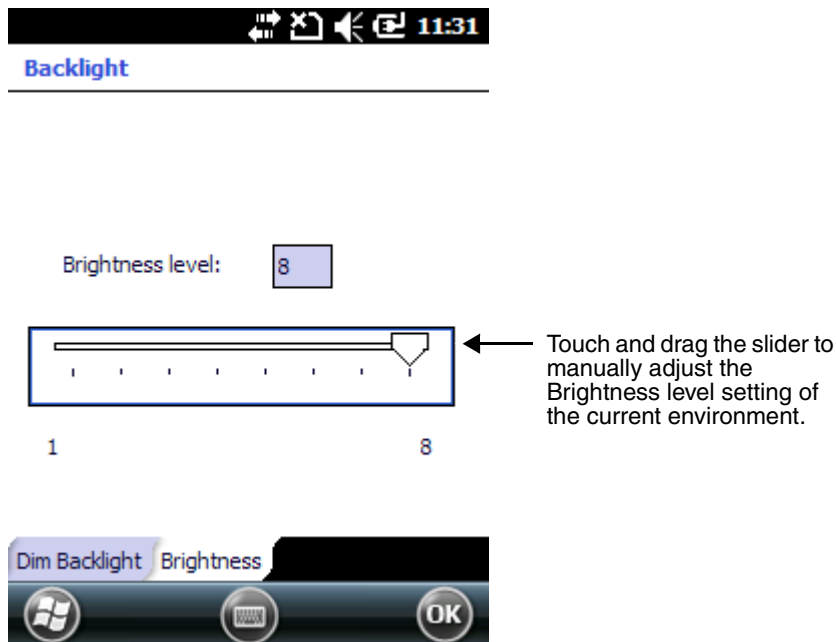

## **Battery**

The Battery system settings menu contains two tabs: **Battery Status** and **Log Config**. The **Battery Status** tab provides the status of the battery pack (e.g., Battery Time to Full or Battery Time to Empty, Voltage, Current, Temperature, Chemistry, and Serial Number). The **Log Config** Tab allows you to configure the BatteryLogFile.

To access the Battery system settings, touch  > **Settings**  > **System**  > **Battery**  .

### **Battery Status**

The Battery Status tab provides the following information on the battery.

#### *Battery Life Percent*

The Battery Life Percent indicates the percentage of charge remaining on the battery.

#### *Battery Time to Full or Empty*

When external power is supplied to the terminal, the estimated charging time remaining to achieve a full charge is listed. When power is supplied by the battery, the estimated time remaining on the battery charge is listed.

*Note: Time estimates are based on the present voltage and current readings.*

#### *Battery Voltage*

The Battery Voltage status can range from approximately 3.2 V to 4.2 V.

#### *Battery Current*

The Battery Current reflects the charging current going into the battery when it is a positive and the discharge current when it is negative.

*Note: The charging current is always less than current source due to device being in operation.*

### Battery Temperature



The Battery Temperature indicates the temperature status of the battery.

### Battery Chemistry

The Battery Chemistry provides the battery type (e.g., Li-ion).

### Battery Serial Number


The Battery Serial Number displays the serial number of the authenticated Honeywell battery.

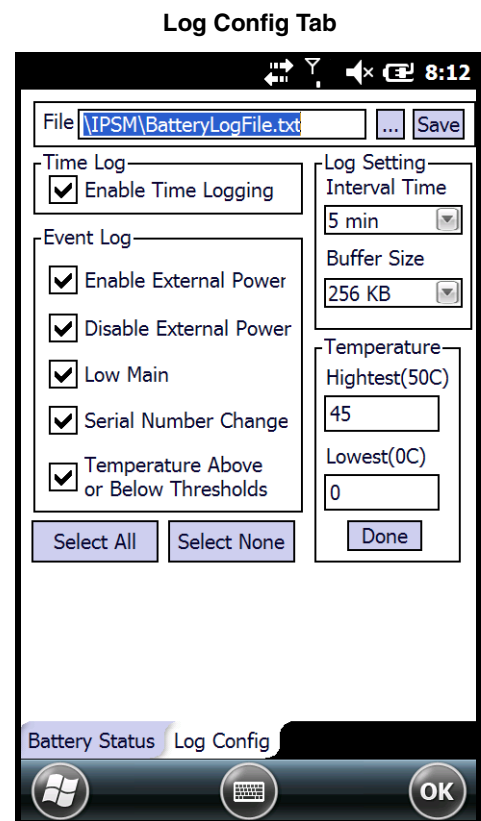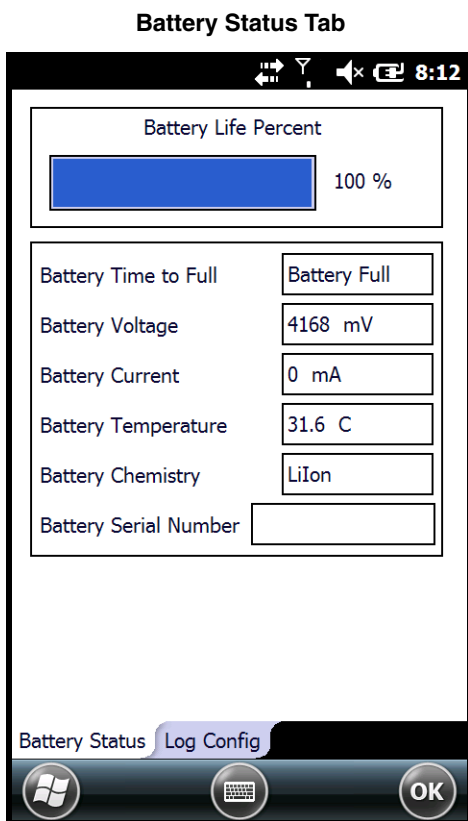

---

## Certificates


Certificates shows you the certificates that are recognized by the operating system. The Horizontal scroll bar at the top of the screen provides access to the three certificate screens: **Intermediate**, **Personal**, and **Root**.

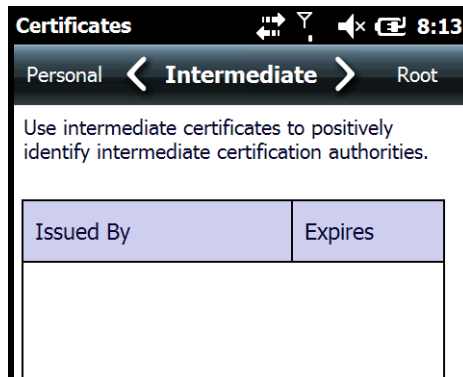

← Swipe left or right on the Horizontal scroll or touch the label (e.g., Root or Personal) to access the additional screens.

## Encryption

Encryption gives you the option of encrypting files placed on storage cards so that those files cannot be read by any other device. Check the box to enable file encryption when saving to a storage card.

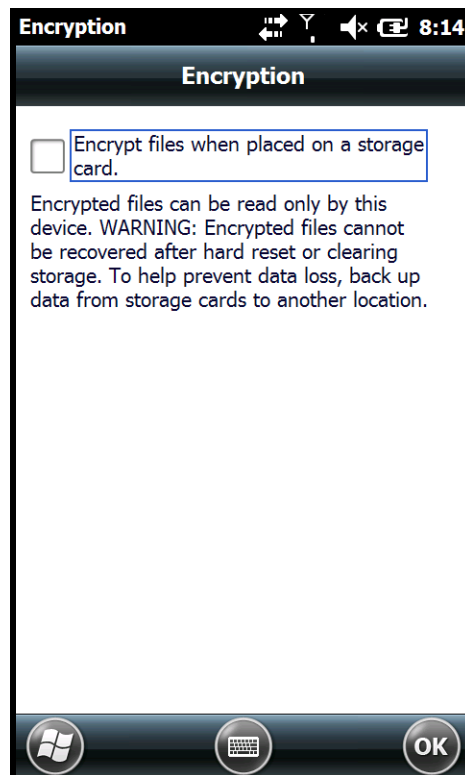

---

## **Error Reporting**

Error Reporting gives you the option of enabling or disabling the error reporting function of Windows Embedded Handheld 6.5.

## **HSM SystemInfo**

The HSM SysInfo screen provides important system information including firmware versions, DLL versions, system parameters, as well as network and radio information. HSM SysInfo screen contains six tabs: **System**, **HW**, **SW**, **Radio**, **EXE** and **DLL**.

To output the system information to a text file:

1. Touch  > **Settings**  > **System**  > **HSM SystemInfo** .
2. Touch **Save** on the tile bar.
3. A text file containing the collected system information is created and saved to **IPSM/SysInfo.txt**.

To upload SysInfo.txt file to a Workstation via ActiveSync:


1. Connect the Dolphin terminal to the workstation using a Dolphin communication peripheral.
2. Open Windows Explorer on the workstation.
3. Navigate to the **Mobile Device** folder.
4. Double click **My Windows Mobile-Based Device** and navigate to the **IPSM** folder.
5. Copy the **SysInfo.txt** file to your workstation.

## **SIP Config**


The SIP Config settings screen enables you to configure Session Initiation Protocol (SIP) for Voice Over IP (VoIP) and Telephony communication.

To access the SIP Config screens, touch  > **Settings**  > **System**  > **SIP Config** .

**SIP Setting Tab**

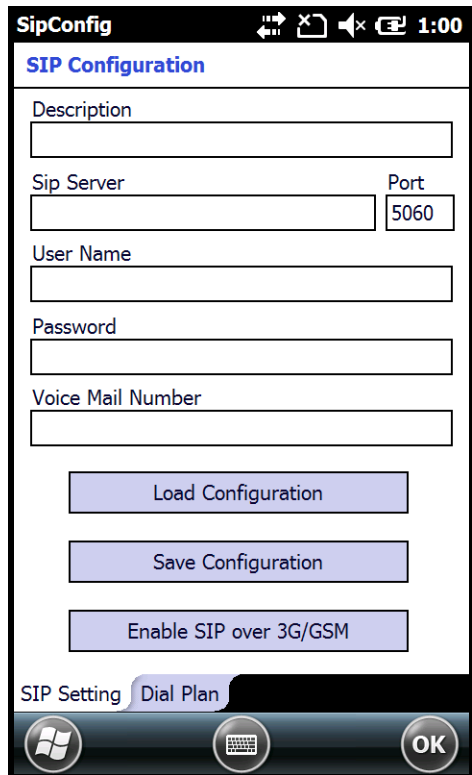

**Dial Plan Tab**

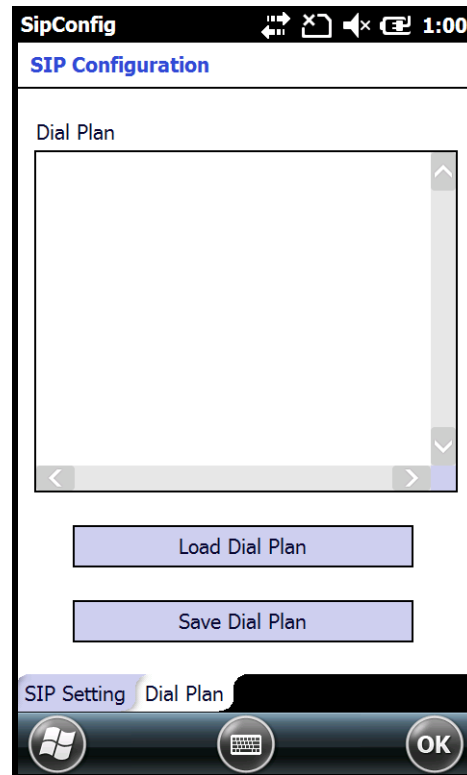

## ***Managed Programs***

The Managed Programs screen lists the installation history of programs on the terminal that are managed by and enrolled to an enterprise domain. Managed Programs is the client-side that works with the server product System Center Mobile Device Manager (MDM). MDM consists of MDM Gateway Server and one or more computers that run MDM Device Management Server; MDM Enrollment Server; and Microsoft SQL Server® 2005 databases.

It lets system administrators:

- provide an authenticated connection to Line of Business (LOB) applications, managed Group Policy, and application packages.
- use Group Policy and software packages to manage the enrolled Windows phones (enforce policy, wipe devices, etc.).
- manage the requests for and retrieving of certificates for devices and for creating the Active Directory® Domain Service objects that represent these devices. By using these objects, you can manage the devices as if they were members of a domain.


---

## Memory

The Memory applet shows the capacity and usage of the Storage and Program portions of the Flash file system. The Storage portion includes the IPSM folder, which can be detailed under the Storage Card tab. When the Program portion becomes too full, you can use the Task Manager to remove any unnecessary tasks.

### Main Screen

The Main screen displays the usage statistics of the flash memory.

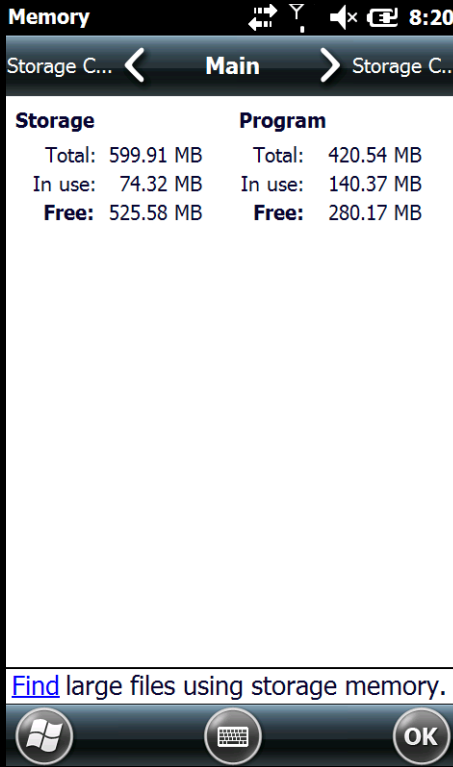

The screenshot shows the 'Memory' applet interface. At the top, there is a status bar with the time '8:20' and various system icons. Below that is a navigation bar with 'Storage C...' on the left, 'Main' in the center, and 'Storage C...' on the right. The main content area is divided into two columns: 'Storage' and 'Program'. Each column lists 'Total', 'In use', and 'Free' memory amounts. At the bottom, there is a blue link that says 'Find large files using storage memory.' and a navigation bar with a Windows logo, a keyboard icon, and an 'OK' button.

Storage	Program
Total: 599.91 MB	Total: 420.54 MB
In use: 74.32 MB	In use: 140.37 MB
<b>Free: 525.58 MB</b>	<b>Free: 280.17 MB</b>


### Storage Card Screen

The **Storage Card** screen displays the current capacity and usage statistics of the selected memory type: IPSM, RAMDISK or Storage Card. Select the memory type from the drop-down list. RAMDISK is selected by default.

- **IPSM** (Internal Persistent Storage Manager)  
Data or programs stored in the IPSM are not affected when the operating system is upgraded. Autoinstall programs, for example, are stored in \\IPSM\Honeywell\Autoinstall so that they are always installed after an operating system upgrade or factory reset. Contact a Honeywell technical support representative for more information on how to perform a factory reset. For contact information, see [Technical Assistance](#) on page ix.
- **RAMDISK**, is a virtual disk that resides in RAM, volatile memory. The virtual disk provides faster access speed than the IPSM or other system folders. RAMDISK is volatile and is cleared when a reset (i.e., soft, hard or factory) is performed or power is lost.

- **Storage Card**

You can install one memory card in Dolphin terminals (see [Installing a SIM Card and/or Memory Card](#) on page 2-15). If a storage card is installed in the terminal, you can select it in the drop-down list and see capacity and usage statistics for the card.

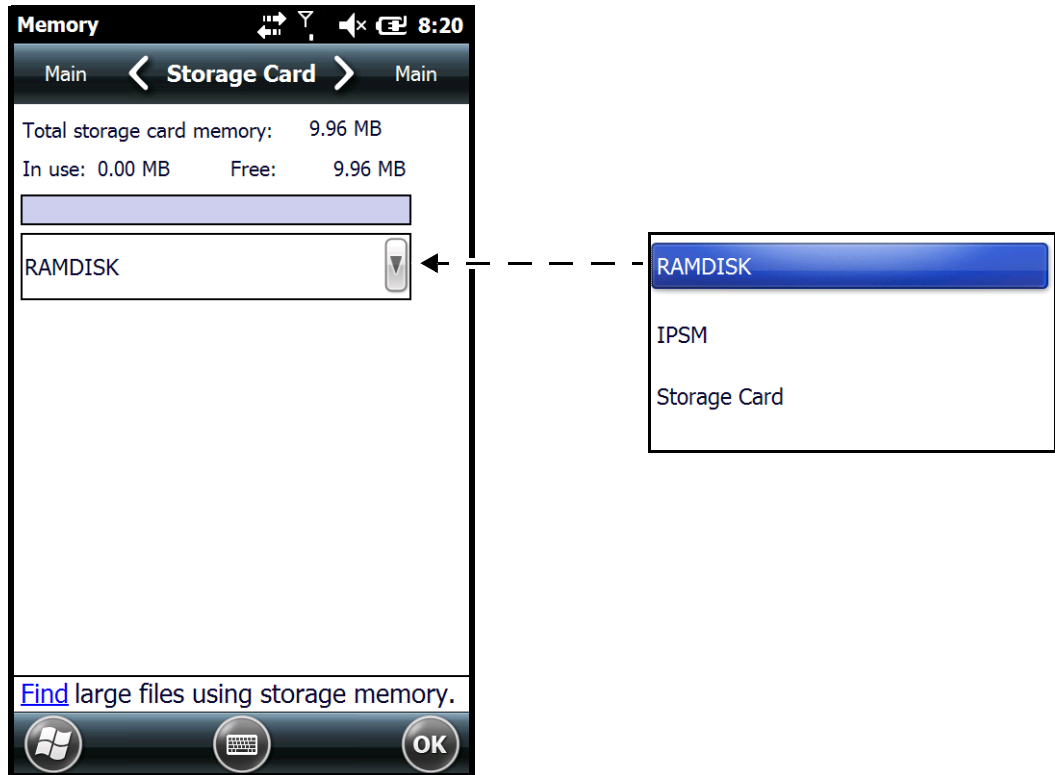

## **Power**

Power system settings contains two tabs: **Battery** and **Advanced**

Touch  > **Settings**  > **System**  > **Power** 

### *Battery Tab*

The battery tab displays the power level status of the battery. For detailed information on the main battery, see [Battery](#) on page 6-12.

### *Advanced Tab*

The Advanced tab settings determine power time-outs when running on **battery power**, **external power**, or **USB power**. To reserve power and extend time between charging cycles, configure the terminal to automatically enter [Suspend Mode](#) (see page 1-12) after a specific number of minutes of inactivity.


**On battery power:** The terminal is being powered by the battery.

**On external power:** The terminal is being powered by an external power source, e.g., HomeBase.



**On USB power:** The terminal is being powered by a USB connection, e.g., the Charge/Communication cable connected to a workstation (PC) or used in conjunction with the provided power supply (USB-WALL-CHARGER-1).

*Note: The **On USB power** time-out setting does not auto-suspend the terminal if an ActiveSync connection between the terminal and workstation is active. Disable ActiveSync on the workstation in order for the device to auto-suspend while connected to the workstation.*

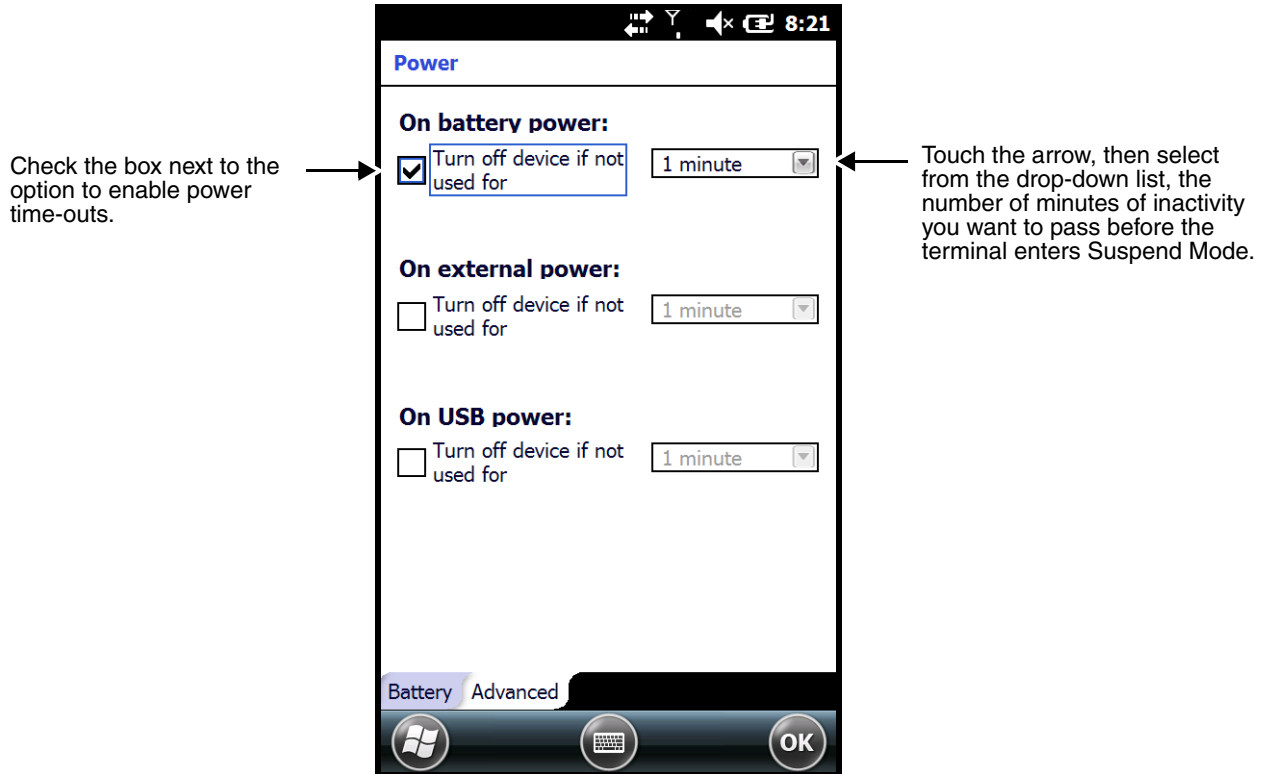

## Regional Settings

Regional Settings enables you to customize the appearance and formatting to your geographic region. Specifically, you can customize numbers (i.e., number of decimal places allowed), currency (i.e., using the \$ or € symbol), time, and date. These specifications apply to all screens, including the Home screen. The Region screen displays an overview of the region selected in the drop-down list at the top.





The terminal is loaded with a number of pre-programmed regional settings. Select one from the list and the results appear on the screen. To see specific settings or to change a specific setting, touch on one of the items on the horizontal scroll bar (i.e., Region, Number, Date), make the change, and touch **OK** to save.


## Remove Programs

Remove Programs enables you to remove programs installed on the terminal. Any program (usually CAB or DLL files) stored in the \\IPSM\Honeywell\Autoinstall folder re-installs after a software upgrade or a factory reset. If a program is manually removed using the **Remove Programs** application, the program does not re-install on a hard or soft reset.

*Note: A program (file) does not automatically install if it is added to the \\IPSM\Honeywell\Autoinstall folder and a hard or soft reset is performed. For information on program installation, see [Installing Additional Software](#) on page 7-11.*

For information about the system resets, see [Resetting the Terminal](#) on page 1-13. See Honeywell support for more information on how to perform a factory reset.

1. Touch  > **Settings**  > **System**  > **Remove Programs** .
2. Select the program you want to remove on the list, and then touch **Remove**.
3. Touch **Yes**. Wait while the program is removed.

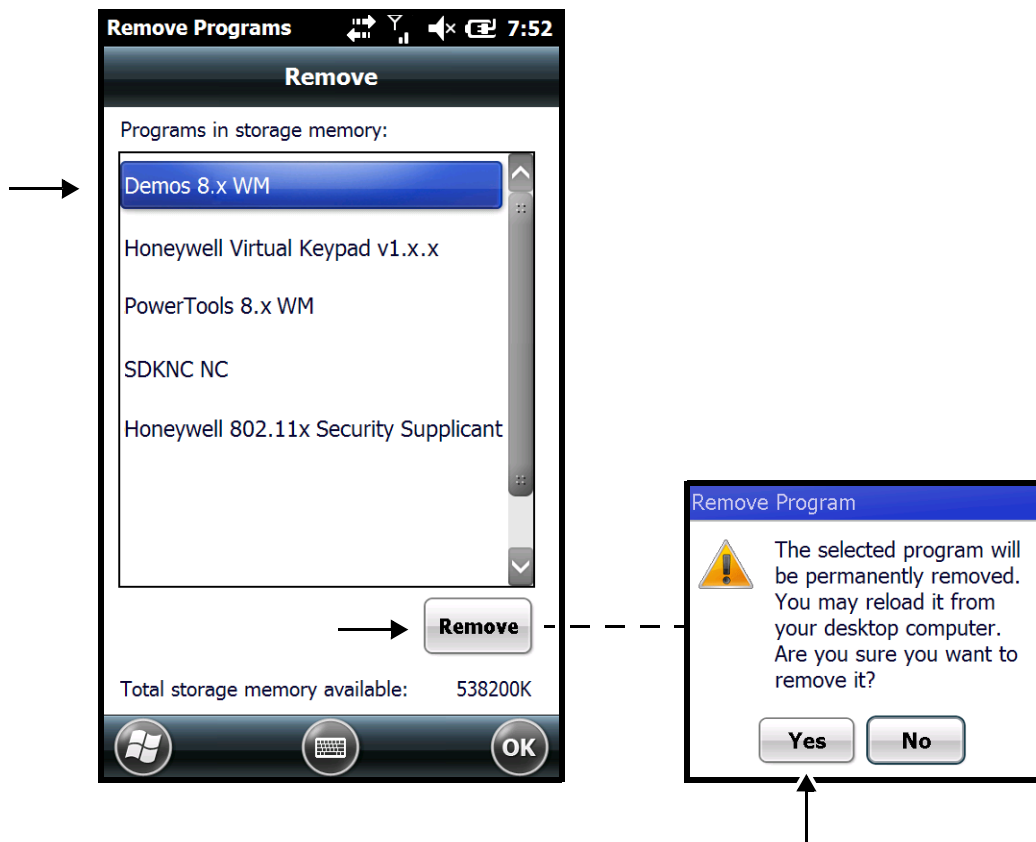

4. Verify that the program no longer appears in the list.





## RIL

The **RIL** Information screen displays useful statistics for the GSM WWAN Voice module.

---

## Screen

The Screen system setting contains two screens: **Clear Type** and **Text Size**.

Touch  > **Settings**  > **System**  > **Screen**  .

### ClearType Screen

The display supports ClearType font rendering, which is a Microsoft technology that dramatically increases the readability of text on LCD displays.


To enable ClearType font rendering, select **Enable ClearType** and touch **OK**.

*Note: For more information about ClearType font rendering, visit: [www.microsoft.com/typography/WhatIsClearType.aspx](http://www.microsoft.com/typography/WhatIsClearType.aspx).*

### Text Size Screen

The Text Size screen enables you to perform font scaling within certain views of the: Home screen (only on non-phone devices), Contacts, Calendar, Messaging, and Tasks. Font scaling means that you can increase or decrease the point size of the font on application windows.

To change the text size, move the slider toward **Smallest** or **Largest**. The Example text changes to reflect the font change.

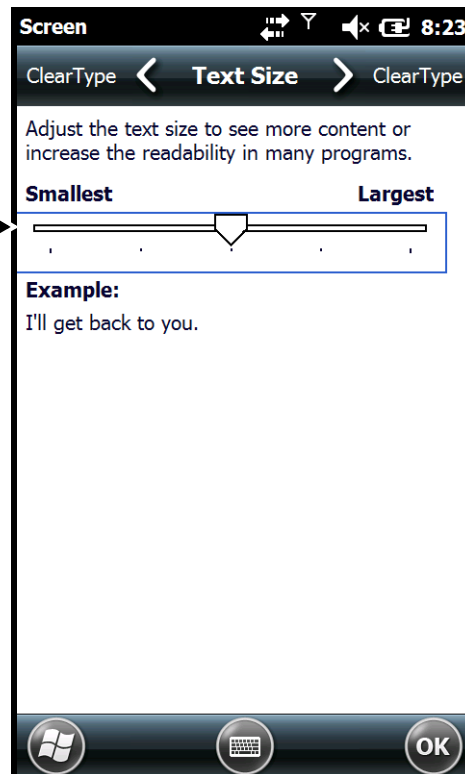

Touch **OK** to save the new text size.

---



## Task Manager

The Task Manager provides information about applications and processes running on your mobile computer. You can use the Task Manager to monitor the memory and CPU usage of specific applications and processes. Check the Task Manager when you are receiving out of memory errors or when the mobile computer is running slowly.

Touch  > **Settings**  > **System**  > **Task Manager**  .

### Applications

To view the status of the programs running on your mobile computer, touch the **Menu** button at the bottom of the screen, then touch **View** > **Applications**.

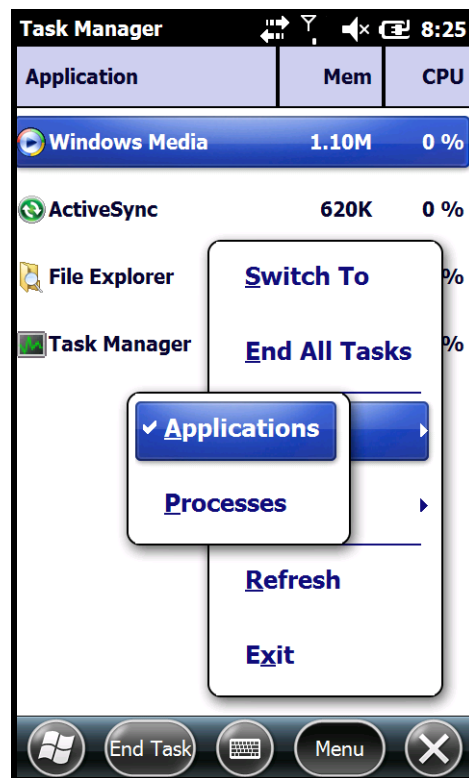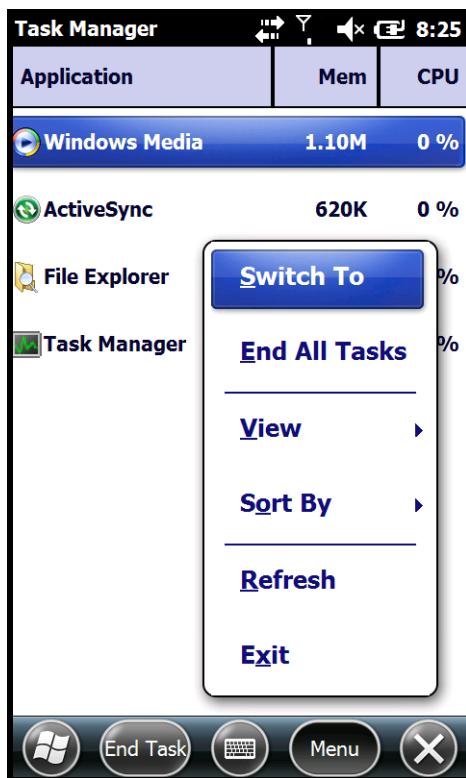



From the application list, you can:

- Touch and hold on an application, then touch **Switch To** on the pop-up menu.
- Touch and hold on an application, then touch **End Task** or **End All Tasks** on the pop-up menu.

*Note: Anytime you stop a running program, it frees up memory. To free up memory, return to the running program, save your data, and close the application.*

## Processes


To view information about the processes running on the mobile computer, touch the **Menu** button at the bottom of the screen, then touch **View > Processes**.

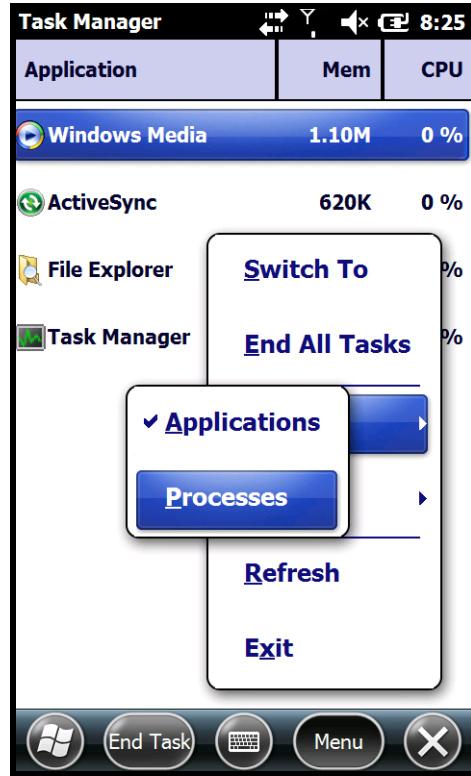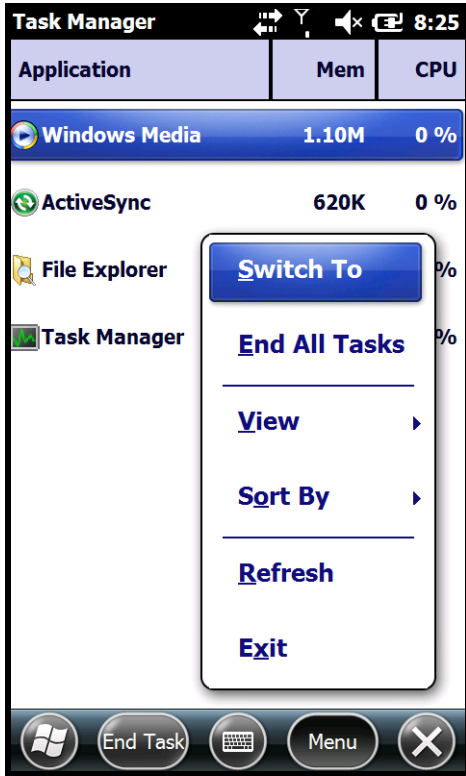







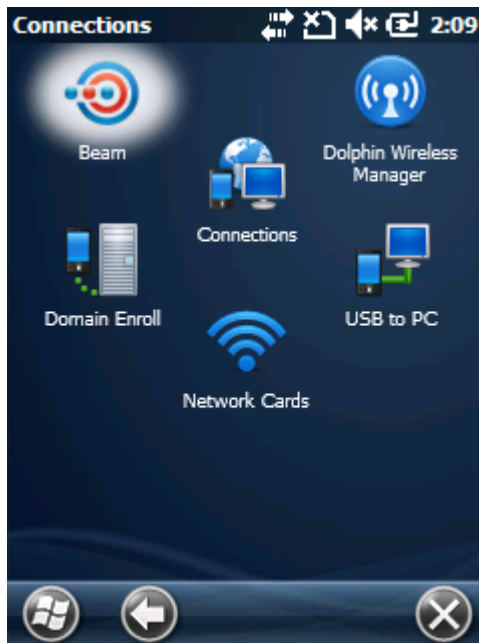

## Connections Menu

The Connections system setting provides access to the terminal's various wireless communication options.



Icon		Description
Beam		Enable the terminal to receive incoming beams from devices using Bluetooth wireless technology. See <a href="#">Working with the Bluetooth Radio</a> on page 9-1.
Connections		Open the Microsoft connections application. See <a href="#">Microsoft Connections Application</a> on page 7-2.
Dolphin Wireless Manager		Manage the wireless radios installed in the terminal. See <a href="#">Dolphin Wireless Manager</a> on page 7-5.  <i>Note: The Dolphin Wireless Manager icon may not appear on the Connections menu on terminals running Microsoft Windows Embedded Handheld 6.5 Classic. For information on how to access the <a href="#">Dolphin Wireless Manager</a>, see page 7-5.</i>
Domain Enroll		Open the Enrollment screen for connecting your phone with company resources.  <i>Note: System administrator password is required for domain enrollment.</i>
USB to PC		Enable advanced wired USB to PC communication via sync software. See <a href="#">Connecting and Synchronizing the Terminal and Workstation</a> on page 7-9.

Icon		Description
Network Cards		Manage Network card settings, search and add wireless networks, and modify advanced Wi-Fi settings (e.g., network notifications and connection time-outs).

### ***Microsoft Connections Application***


The Microsoft **Connections** application sets up multiple network connections to Internet Service Providers (ISPs) via an external modem.

**Do NOT enter connection parameters in the Connections application if:**

- you are using one of the on-board wireless radios to connect to a network. The Dolphin terminal uses the settings from each radio’s configuration utility to connect. The connections application is used primarily to setup WAN modem dial up connections.
- you are using Wireless Zero Configuration (WZC). By default, WZC is disabled on Dolphin terminals.

### ***To Access the Connections Application***

Touch  > **Settings**  > **Connections**  > **Connections** .

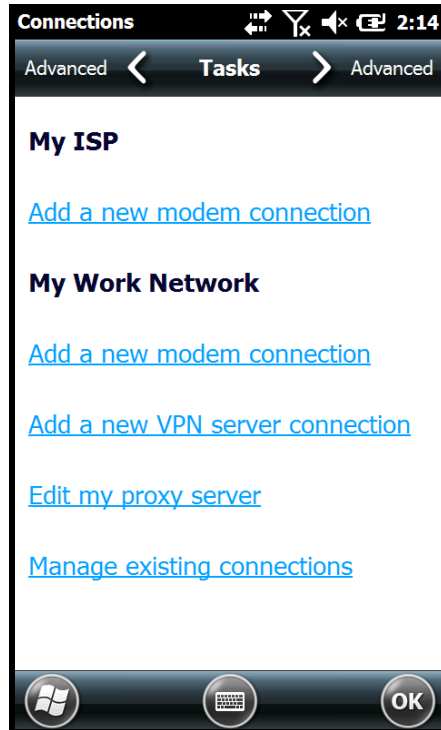




---

## Tasks

The Tasks screen enables you to initially configure, and then manage network settings when using a modem. Select an item in this list and then complete the setup screens that follow with the appropriate information for your network.

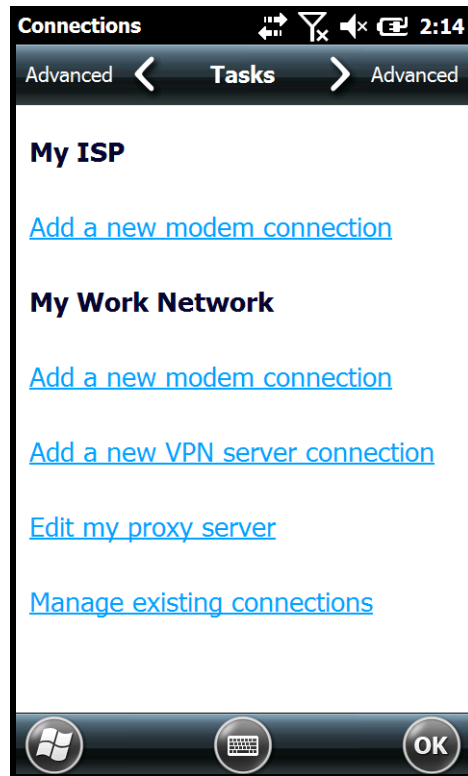

### *My ISP*

The links under the *My ISP* heading enable you to add and manage modem connections to an Internet Service Provider (ISP). To complete the setup screens, obtain the following information from your ISP:

- ISP dial-up access telephone number
- User name
- Password
- TCP/IP settings

### *My Work Network*

The links under *My Work Network* enable you to establish the following connection types:

- Modem
- Virtual Private Network (VPN)
- Proxy server connection


*Note: If you are connected to your ISP or private network during synchronization, the terminal should download the proper proxy settings during synchronization with the workstation. If these settings are not on your workstation or need to be changed, ask your ISP or network administrator for the proxy sever name, server type, port, type of Socks protocol used, and your user name and password.*

To complete the setup screens, obtain the network parameters from your system administrator.

---


## Modify an Existing Connection

The **Manage existing connections** link appears on the **Connections** screen under the *My ISP* heading after at least one network connection has been established. Touch **Manage Existing Connections**, then follow the setup screens to modify an existing connection.

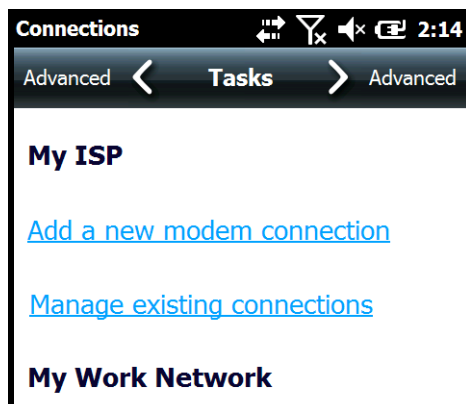

## Advanced

The Advanced screen enables you to select the default network, dialing rules, and IP address exceptions for modem connections.

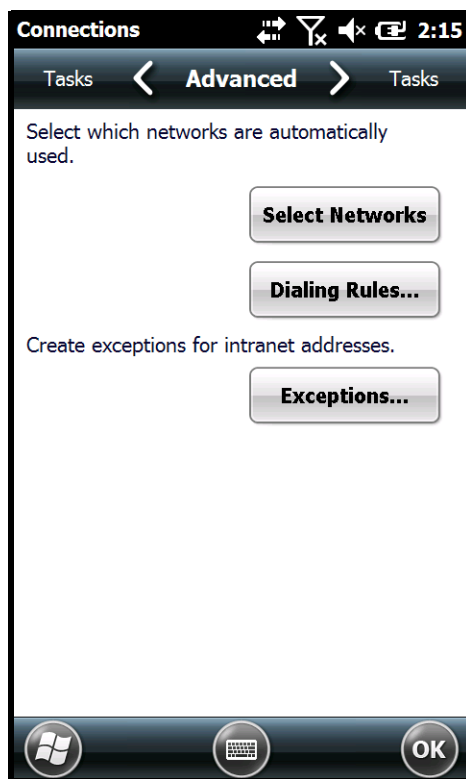


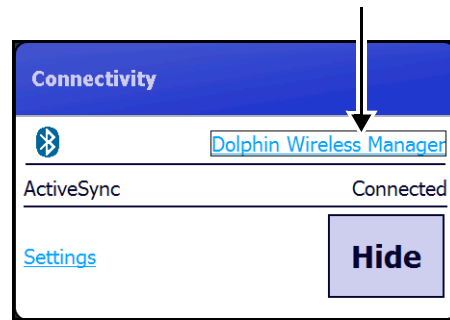
*Note: You should not need to change Advanced settings because most ISPs now use DHCP addresses.*

## Dolphin Wireless Manager

The Dolphin Wireless Manager provides a centralized interface that enables and disables all the on-board radios. Each radio has its own configuration program. The Dolphin Wireless Manager also provides shortcuts to the configuration utilities for each radio.

To open the **Dolphin Wireless Manager** do one of the following:


1. Touch once on the Title bar to access the **Horizontal Scroll** bar, then touch .
2. Select, **Dolphin Wireless Manager**.



OR

1. Touch  > **Settings**  > **Connections**  > **Dolphin Wireless Manager** .

## Dolphin Wireless Manager Window

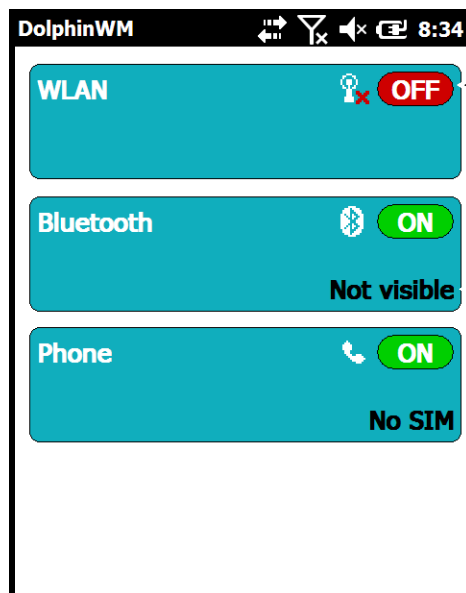


The state of the radio is shown in the upper right corner of the radio box.

If applicable, information about the radio displays when the radio is activated.


---

## Enabling the Radios

1. Open the **Dolphin Wireless Manager** (see page 7-5).
2. Touch anywhere inside the rectangle of the radio you want to enable.

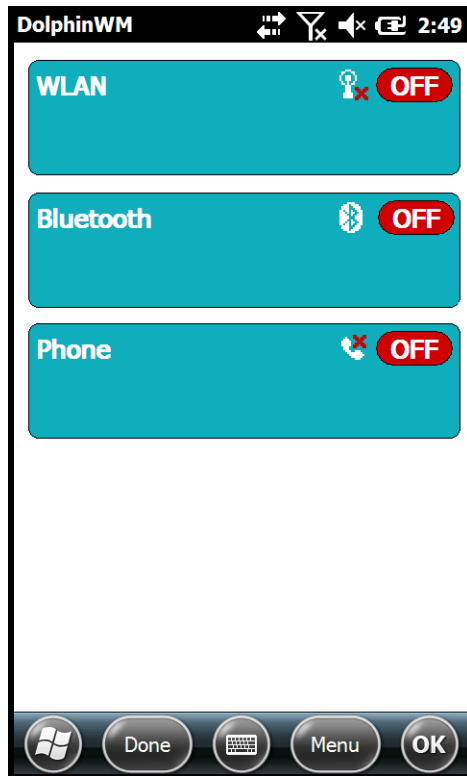

 3. The radio begins activating.



4. When the radio is activated (i.e., transmitting a signal), the **Off** button changes to **ON**.



*Note: If applicable, information about the radio appears in the rectangle.*

---

## Accessing Radio Configuration Utilities

Each radio has its own configuration utility that you can access by touching **Menu** on the tile bar.



### Radio Type

802.11b/g/n

### Menu Option

Touch **WLAN Settings** and the Honeywell WLAN Security Supplicant opens.

The *Honeywell WLAN Security Supplicant User's Guide* is available for download from at [www.honeywellaidc.com](http://www.honeywellaidc.com).

Bluetooth

Touch **Bluetooth Settings** and the Bluetooth Settings screen opens. For details, see [Working with the Bluetooth Radio](#) on page 9-1.

GSM/GPRS/EDGE





Touch **Phone Settings** and the Phone opens.

For details, see [Working with Wireless Wide Area Networking \(WWAN\)](#) on page 8-1.

---

## USB to PC


Enable **advanced network functionality** under the **USB to PC** connection settings if you are having trouble connecting and synchronizing your terminal with a workstation PC using a wired USB connection and ActiveSync or Windows Device Mobile Center. The advanced network functionality can also be enable to improve transfer speeds when synchronizing large groups of data or copying large files between the terminal and workstation. See [Connecting and Synchronizing the Terminal and Workstation](#) on page 7-9.

1. Touch  > **Settings**  > **Connections**  > **USB to PC** .
2. Check the box next to “Enable advanced network functionality”.
3. Touch **OK**, then attempt to sync the terminal and workstation PC.

## Network Cards

The **Network Adapters** screen provides access to set and configure the type of Network Adapter used by the Network card in the terminal. You can modify the adapter settings (e.g., Name Servers or IP address) by touching on the adapter type or highlighting the adapter and touching **Edit** at the bottom of the screen.

Touch  > **Settings**  > **Connections**  > **Network Cards**  to access the Network Adapters screen.

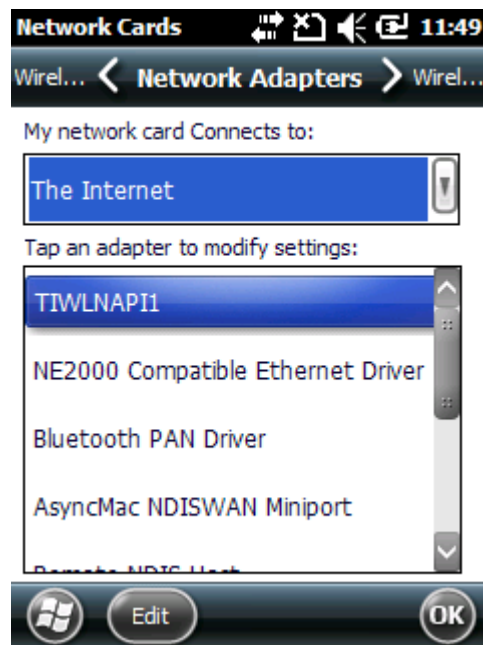

---

## Connecting and Synchronizing the Terminal and Workstation

To synchronize data between the terminal and the workstation, ActiveSync (version 4.5 or higher) or Windows Mobile Device Center (WMDC) must be installed and configured for the appropriate communication type on the host workstation (Windows-based PC) and the Dolphin terminal. Dolphin terminals ship with ActiveSync already installed. Therefore, if ActiveSync or WMDC is already installed on the host workstation, you just need to connect the Dolphin terminal to the host workstation (via Dolphin peripheral) to initiate communication.

If ActiveSync (4.5 or higher) or WMDC is not installed on the host workstation, you can download and install the most current version of the software from the [Microsoft Web site](http://go.microsoft.com/fwlink/?LinkId=147001) (<http://go.microsoft.com/fwlink/?LinkId=147001>).

*Note: ActiveSync on your Dolphin terminal works with WMDC on host workstations running Windows Vista or Windows 7 and with ActiveSync on host workstations running Windows XP. For detailed information on ActiveSync and WMDC visit the [Microsoft Windows Phone Web site](#).*



*When communicating via ActiveSync or WMDC, your terminal is designed to be connected to the host workstation with a communication peripheral sold/manufactured by Honeywell, such as the charge/communication cable. Use of any peripheral not sold/manufactured by Honeywell may cause damage not covered by the warranty.*

### Capabilities

- Back up and restore your device data.
- Copy (rather than synchronize) files between your device and workstation.
- Control when synchronization occurs by selecting a synchronization mode. For example, you can synchronize continually while connected to your workstation or only when you choose the synchronize command.
- Select which information types are synchronized, controlling how much data is synchronized. For example, you can choose how many weeks of past appointments you want synchronized.

### Communication Types

The Dolphin 60s terminal supports Hi-Speed USB communication (USB 2.0) via ActiveSync through the [The I/O Connector](#) (see page 2-10) on the bottom of the terminal and the microUSB port (see page 2-7) on the right side panel of the terminal. The maximum data transfer rate is 480 Mbps. A USB cable and/or a Honeywell hardware peripheral (e.g., HomeBase) allow the terminal to communicate with a workstation or to be networked through a USB hub. The Dolphin terminal defaults to USB communication out of the box.

### Hardware Requirements for Setup

- HomeBase, power supply (shipped with HomeBase) and a USB cable if one is not supplied with your Dolphin communication peripheral

OR

- The USB charge/communication cable (USB-CABLE-1) provided with your Dolphin terminal.

### Software Requirements for Communication

- ActiveSync (v4.5 or higher) or Windows Mobile Device Center installed and configured on the host workstation (PC), see [Setting Up the Host Workstation](#) on page 7-10.

*Note: ActiveSync or Windows Mobile Device Center must be setup on your workstation before you initiate synchronization from the terminal for the first time.*

- 
- Windows 98 Second Edition, Windows Me, Windows 2000, Windows NT (4.0 SP6 or higher), Windows XP, Windows Vista, and Windows 7 operating systems.

## ***Setting Up the Host Workstation***

To synchronize data between the terminal and the workstation, ActiveSync (v4.5 or higher) or Windows Mobile Device Center must be configured for same communication type on both the host workstation and the Dolphin terminal.

### *ActiveSync*

Verify that ActiveSync is configured to use the appropriate communication type.

1. In the ActiveSync window on your workstation, select **File > Connection Settings**.
2. Check the box next to “Allow USB connections”.

## ***Connecting the Dolphin Terminal to the Host Workstation***

After setting up both the workstation and the terminal:

1. Connect the Dolphin terminal to the workstation using a Dolphin communication peripheral.
2. ActiveSync or Windows Mobile Device Center should open and connect automatically to the Dolphin terminal.

## ***Synchronizing with the Host Workstation***

After setup, synchronization begins automatically whenever the terminal’s mechanical connector connects to a Dolphin peripheral that is connected to a host workstation with ActiveSync or Windows Mobile Device Center installed. For additional information visit the [Microsoft Phone Web site](http://go.microsoft.com/fwlink/?LinkId=147001) (<http://go.microsoft.com/fwlink/?LinkId=147001>).

*Note: if you are having trouble connecting and synchronizing your terminal with a workstation PC using a wired USB connection and ActiveSync or Windows Device Mobile Center, try enabling the **advanced network functionality** setting from the [USB to PC connections](#) screen.*

## ***Exploring the Terminal from the Workstation***

### *ActiveSync*

1. Open the main ActiveSync window (on the desktop).
2. Click **Explore**. This opens the Mobile Device folder for the terminal in Windows Explorer.
3. The Dolphin terminal is now treated as a mass storage device, and transferring files is as simple as dragging and dropping or copying and pasting.

### *Windows Mobile Device Center*

1. Open Windows Mobile Device Center (on the desktop).
2. Click **File Management**. This opens the Mobile Device folder for the terminal.
3. The Dolphin terminal is now treated as a mass storage device, and transferring files is as simple as dragging and dropping or copying and pasting.




---

## **Installing Additional Software**

Dolphin terminals ship with the operating system, radio drivers, and custom Honeywell software already installed. These are the default programs that install when your terminal first boots up. You can install additional software programs to the terminal provided that the following parameters are met:

- The software program was created for a Windows Embedded Handheld 6.5 device.
- The terminal has enough memory to store and run the program.
- The program has an EXE, CAB, or DLL extension.

When selecting programs, verify that the program and version of the program are designed for the Windows Embedded Handheld 6.5 and the terminal's processor. You can verify your processor by touching  > **Settings** > **System** > **About**. Make a note of the information in the **Processor** field on the **Version** screen.

To install additional software, you can use the communication options described in this chapter.

- [Adding Programs Using ActiveSync or Windows Mobile Device Center](#), see page 7-11.
- [Adding Programs Using the Internet](#), see page 7-12.

## **Adding Programs Using ActiveSync or Windows Mobile Device Center**

Generally, software for Windows Embedded Handheld devices must be installed to the host workstation first, then transferred to the Dolphin terminal.

*Note: An active Microsoft ActiveSync or Windows Mobile Device Center connection between a host workstation and the Dolphin terminal is required to add programs. For additional information, see [Connecting and Synchronizing the Terminal and Workstation](#) on page 7-9.*

1. Download the program to the workstation from either the Internet or the install CD. You may see a single \*.exe or setup.exe file, a \*.cab file, or a \*.dll file.

*Note: There may be several versions of files for different device types and processors. Select the file that matches the terminal's processor.*

2. Read any installation instructions, Read Me files, or documentation that comes with the program. Many programs provide special installation instructions.
3. Connect the terminal to the workstation via a Dolphin communication peripheral.

### **If the File is an Installer (\*.exe or \*.setup.exe)**

An installer program is one that installs on the workstation and the terminal simultaneously; one process installs to both devices.

1. On the workstation, double-click the \*.exe or setup.exe file. The installation wizard begins.
2. Follow the directions on the workstation screen. The installation process includes transferring the software to the Dolphin terminal.

### **If the File is Not an Installer**

Some programs cannot be installed on PCs because they are designed exclusively for Windows Embedded Handheld devices. In these cases, the appropriate files must be stored on the host workstation and transferred to the terminal via ActiveSync Explore or Windows Device Mobile File Management.

*Note: You know that the program is not an installer because an error message stating that the program is valid but designed for a different type of computer appears when you try to install the program on the workstation.*

- 
1. If you cannot find any installation instructions for the program in the Read Me file or documentation provided with the software, do one of the following:
    - a. Open **ActiveSync** and click **Explore**, or
    - b. Open **Windows Mobile Device Center** and click **File Management**
  2. On the workstation, navigate to the folder containing the program file(s).
  3. Copy and paste the file(s) into the **Program Files** folder on the Dolphin terminal.

*Note: If you want the program to be part of the Autoinstall that occurs after a factory reset or software upgrade, paste the program file(s) in both the \IPSM\Honeywell\Autoinstall folder and the \Honeywell\Autoinstall.*

4. On the terminal from the **Start** screen, touch **File Explorer**, navigate to the folder where the program is located.
5. Touch on the program file to start the installation.

*Note: If you copied the file to the \Honeywell\Autoinstall folder, you can perform a Soft Reset to install the program. For more information, see [Hardware Maintenance](#) on page 2-15.*

## **Connecting the Terminal to a Wireless Network**

You connect the terminal to a wireless network through the on-board radio (802.11b/g/n, Bluetooth, and/or GSM). Each radio has its own configuration utility and requires specific information about the wireless network to connect. Successful connection depends on your network infrastructure about which you will need specific information from your network administrator.

### **WLAN (802.11b/g/n)**

The Dolphin 60s has a 2.4 GHz 802.11b/g/n WLAN (Wireless Local Area Network) radio. The radio is interoperable with other 802.11b/g/n, Wi-Fi compliant products including access points (APs), workstations via PC card adapters, and other wireless portable devices. The next step is to configure the connection parameters of the radio to connect to a wireless network.

### **WLAN Radio**

The WLAN radio is configured in the Honeywell WLAN Security Supplicant, which you access by touching the WLAN SWC icon on the Start menu. For complete configuration instructions, download the *Honeywell Secure Wireless Client (SWC) User's Guide* from [www.honeywellaidc.com](http://www.honeywellaidc.com). A link to this guide appears on the Dolphin 60s product page.

## **Adding Programs Using the Internet**

When you have established a network connection, you can access the Internet and download additional software programs.

*Note: When selecting programs, verify that the program and version of the program are designed for Windows Embedded Handheld and the terminal's processor. You can verify your processor by touching*


 > **Settings** > **System** > **About** > **Version**. Make a note of the information in the Processor field.

1. Open Internet Explorer and navigate to the program's location. You may see a single \*.exe or setup.exe file, or several versions of files for different device types and processors.
2. Select the program version that matches your Dolphin terminal and processor.

3. Read any installation instructions, Read Me files, or documentation that comes with the program. Many programs provide special installation instructions.
4. Download the program to the terminal directly from the Internet. You would normally store the program in the \Program Files folder unless another location is required by the program.
5. On the terminal, touch the installer file: e.g., \*.exe or setup.exe file.
6. The installation wizard for the program begins.
7. Follow the directions on the screen to complete the installation.

## Software Upgrades

Contact a Honeywell technical support representative for information on available software upgrades for your Dolphin terminal, see [Customer Support](#) on page ix or go to [www.honeywellaidc.com](http://www.honeywellaidc.com).

 To prevent data loss, back up all user data to a microSD card or external memory device before performing an upgrade.

*Note: An active Microsoft ActiveSync or Windows Mobile Device Center connection between a host workstation and the Dolphin terminal may be required for some types of software upgrades. For additional information, see [Connecting and Synchronizing the Terminal and Workstation](#) on page 7-9.*

For information on [File Provisioning on the Dolphin 60s](#), see page 1-11.

## Dolphin 60s COM Port Assignment Table

COM Port	Description
COM0	Bluetooth Serial Port Service
COM1	USB Host - Dock - Switched
COM2	Bluetooth
COM3	Unused
COM4	Bluetooth Serial Port Service
COM5	Unused
COM6	Unused
COM7	<b>GPS:</b> COM Port for the GPS receiver
COM8	<b>USB Serial:</b> Virtual USB Serial port for ActiveSync
COM9	Bluetooth BTHATCI server



## Working with Wireless Wide Area Networking (WWAN)

### Overview

The Dolphin 60s has one radio option for WWAN connectivity: a GSM WWAN radio, which provides support for quad-band GSM/GPRS/EDGE (3G) 850/900/1800/1900 MHz.

The radio option support voice and data communication.

<b>GSM</b>	Short for Global System for Mobile communications, GSM is an open, non-proprietary wireless WAN system that is constantly evolving and growing.
<b>GPRS</b>	Short for General Packet Radio Service, GPRS is a non-voice value added service that allows packet-switched data to be instantly sent and received across mobile telephone networks.
<b>EDGE</b>	E-GPRS is a non-voice value added service that allows packet-switched data to be instantly sent and received across mobile telephone networks at a higher data rate than standard GPRS.

### Requirements

Using GSM/GPRS/EDGE requires:

- a network subscription to a GSM/GPRS/EDGE network (you need to know what service providers are in your geographic area), and
- an installed SIM card that has been activated by the network service provider (see [Installing a SIM Card and/or Memory Card](#) on page 2-15).

### Antenna Band

The WWAN radio features two internal antennas: an omni-directional antenna optimized for power output and receiver sensitivity and a second diversity receiver antenna.

For terminals with the multi-mode (software definable) WWAN radio:

- A penta band antenna supports 850/900/1800/1900 Mhz (GSM/GPRS/EDGE).
- A diversity receiver antenna supports 850 & 1900Mhz

For terminals with the GSM WWAN radio:




- A penta band antenna that supports 850/900/1800/1900 Mhz (GSM/GPRS/EDGE).
- A diversity receiver antenna supports 2100Mhz

### Signal Strength

On terminals equipped with a WWAN (voice + data) radio, the signal strength of the WWAN connection is indicated by the number of bars that appear in the signal strength icon in the Title bar at the top of the window.



---

Icon	Indicates...
	The signal strength of the radio connection.
	The signal strength of the phone (voice) connection.
	The signal strength of the data connection.

### ***Voice and Data Communication***

Dolphin terminals with integrated GSM/GPRS/EDGE (voice + data) radios are optimized for the following two-way communications:

**Voice:** GSM voice data (dial-up)

**Data:** Available speed depends on the wireless network carrier and their supported packet-data technology in addition to network conditions.

GPRS Class 10: data transmission max. 85.6 kbps (DL), max. 42.8 kbps (UL)

EDGE (E-GPRS) Class 10: data transmission max. 237 kbps (DL), max. 118 kbps (UL)

*Note: You can use the GSM radio for simultaneous voice and data communication on a UMTS (3G) network only. On a GSM network, if you want to communicate over the phone (voice), you cannot send data. If you want to send data, you cannot use the phone.*

---


## Enabling the WWAN Radio

You can enable or disable the WWAN radio in the [Dolphin Wireless Manager](#) (see page 7-5).

*Note: By default, the WWAN radio is enabled after a factory reset.*

To enable the WWAN radio:

1. Touch  > **Settings**  > **Connections**  > **Dolphin Wireless Manager** .

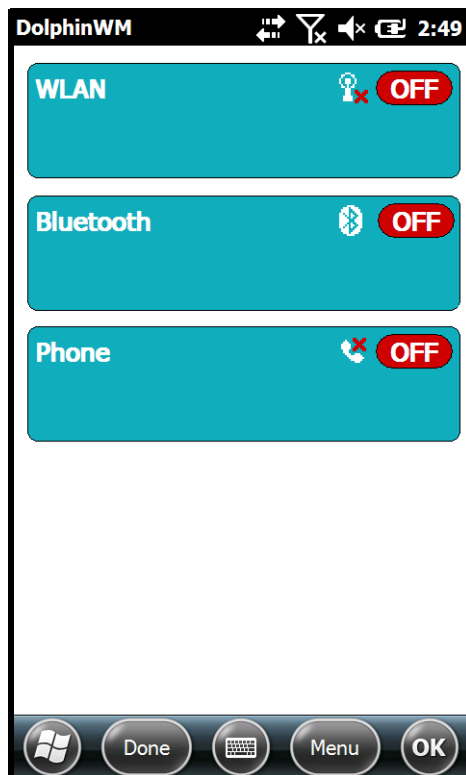

2. Touch anywhere inside the Phone rectangle and WWAN radio begins activating.



3. When the radio is activated (i.e., transmitting a signal), the **Off** button changes to **On**.



---

## Audio Modes

The Dolphin 60s terminal is equipped with speakers on the front and back of the terminal and a microphone that you can use to send and receive audio signals over the GSM network, see [Features of the Dolphin 60s](#) on page 2-4

There are three audio modes:

- **Handset Mode** - The front speaker is used for receiving handset voice calls.
- **Headset Mode** - When a headset is plugged into the Audio Jack, the terminal defaults to the headset for receiving calls and audio input.
- **Hands-Free Mode** - The back speakers are used as a speaker phone. To switch to speaker phone during a call, touch on the phone icon in the tile bar at the bottom of the screen, then select **Speaker On**.

## Volume Control




Press the up or down arrow on the **Volume Control** button on the left side of the device to adjust the volume of the active speaker, see [Volume Control Button](#) on page 2-9.

## Voice Communication


### Accessing the Dialer Window

*Note: The WWAN radio must be active for voice communication, see [Enabling the WWAN Radio](#) on page 8-3.*

To open the Phone dialer do one of the following:

- From the Home screen, touch twice on “**phone**”.
- From the Home screen, touch  > **Phone** .
- Press the **Send** button .



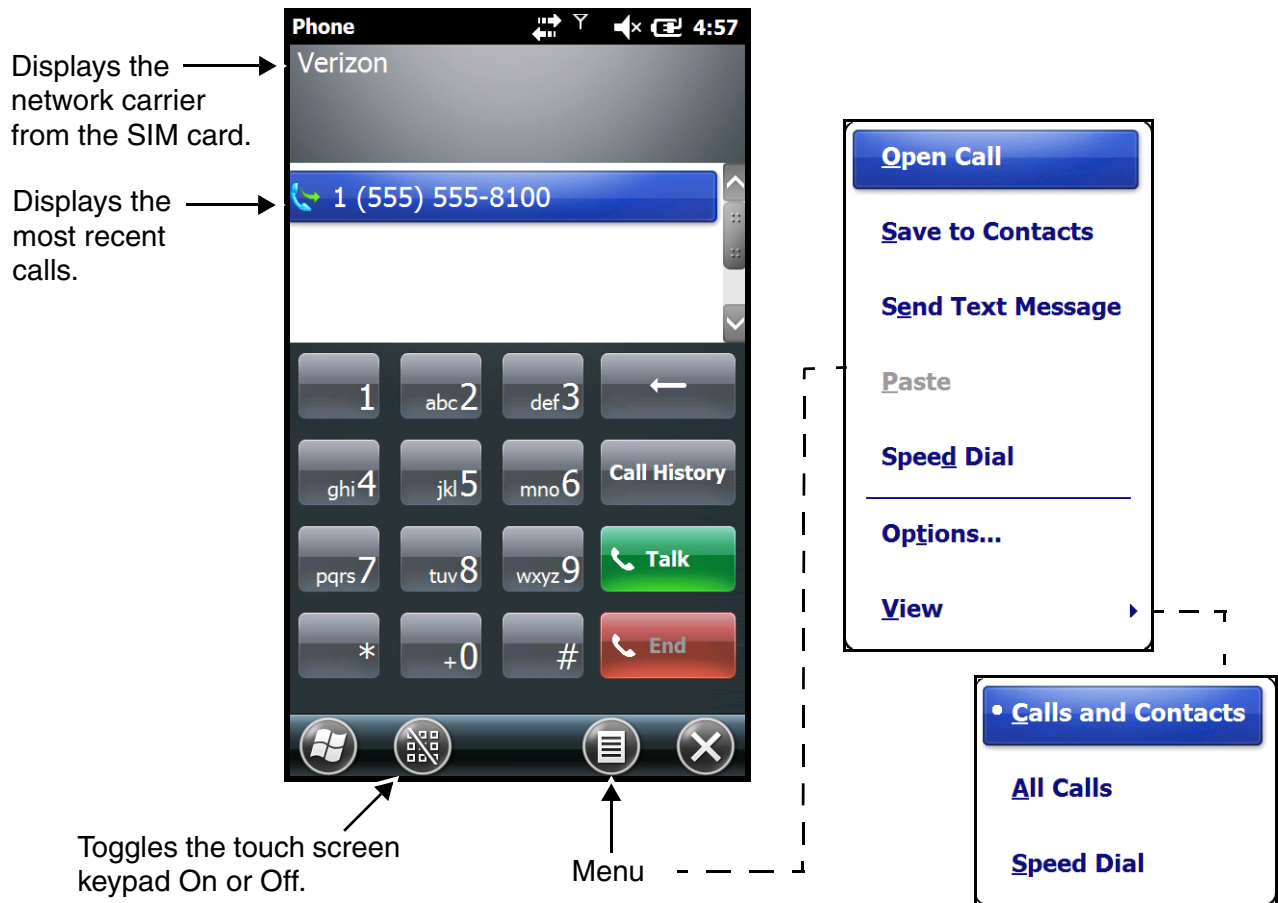

### Dialing

Touch the buttons on the dialer window.

### Sending Calls

After the number is dialed, touch **Talk**  or press the **Send** button .

*Note:* The  icon indicates that the phone is in use.

### Ending Calls

While the phone call is live, touch **End**  or **End** button .


### Accessing Voice Mail

From the **Home** screen, touch twice on “voicemail”.

*Note:* Update the voice mail retrieval number by turning the phone Off and then On via the Dolphin Wireless Manager, see [Enabling the WWAN Radio on page 8-3](#)

---

## Customizing the Phone

Touch **Menu**  from the Dialer screen to customize options for your phone.

### View

Select **View** on the Menu to modify the display screen to show Calls and Contacts, All Calls or Speed Dial numbers.


### Options

Select **Options** on the **Menu** to customize and view features specific to the network firmware the terminal is configured to use (e.g., GSM/UMTS) for voice and data communication.

### GSM/UMTS Options

When the WWAN radio is configured to communicate with GSM/UMTS networks, the **Options** menu contains four setting widows: **Sounds**, **Security**, **Services**, and **Network**.


### Sounds

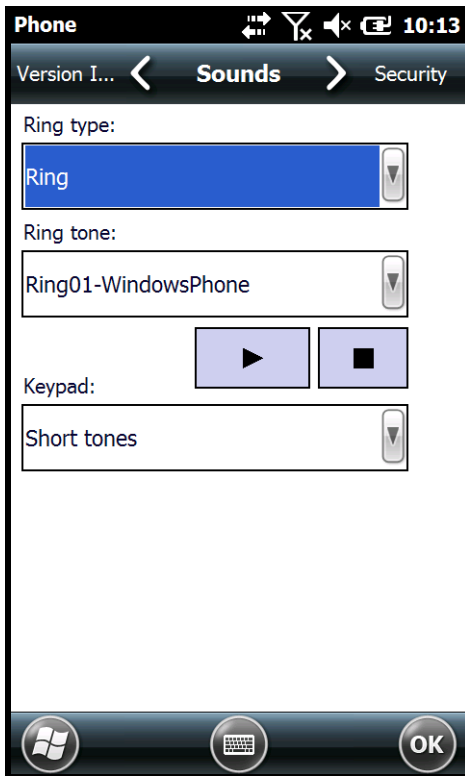

The **Sounds** screen enables you to customize the:


- Ring type (e.g., Ring, Increasing ring, Ring once, Vibrate, Vibrate and ring, Vibrate then ring or None)
- Ring tone
- Keypad tone (e.g., Long, Short, or Off)

## Security

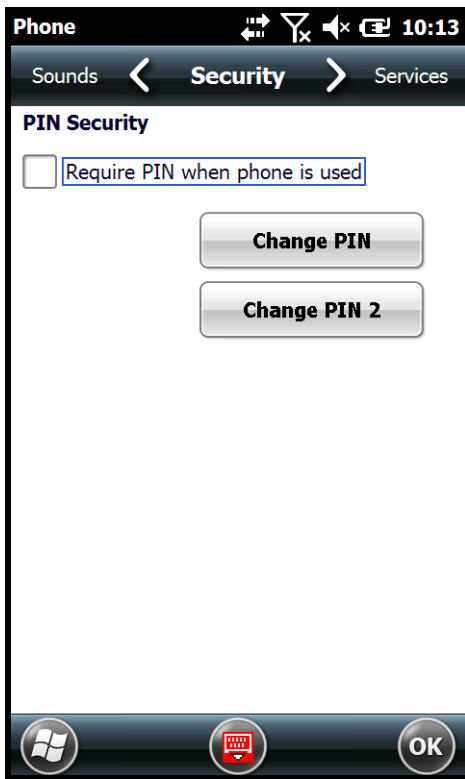

The **Security** screen provides access to establish or change your security PIN for phone calls. Check the box next to, “Require a PIN when the phone is used” to enable the PIN security feature.


## Services

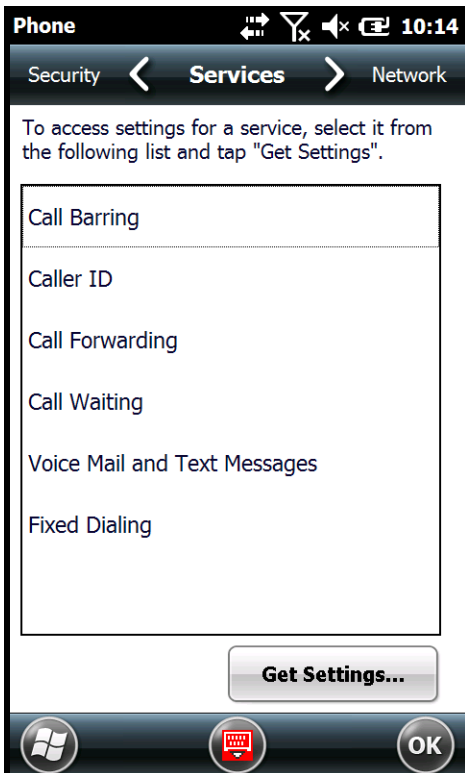

For each service, the phone reads settings from the network stored on the SIM card and then displays the available options from the carrier on the screen. To customize the settings, select it from the list and touch “Get Settings”.

---


## Network

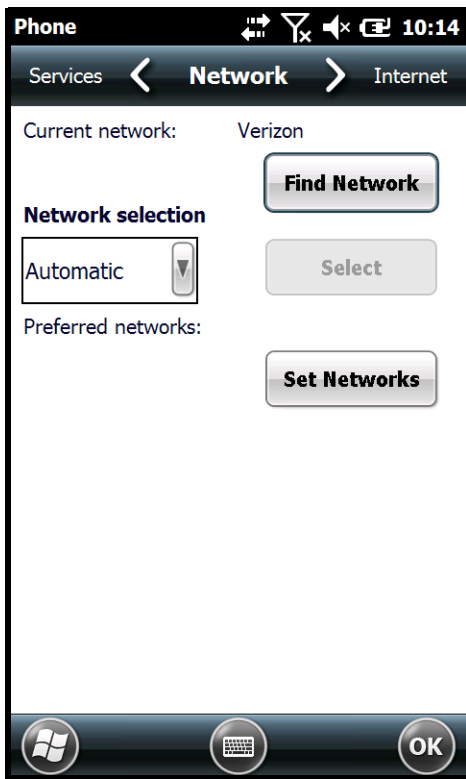

You can find, select, and set your preferred network order from the **Network** screen.

## Data Communication

You set up data communication using the Microsoft Connections application.

Touch  > **Settings**  > **Connections**  > **Connections**  to access the Microsoft Connections application.


## System Requirements

- The WWAN radio must be enabled; see [Enabling the WWAN Radio](#) on page 8-3
- You must have an active SIM card with a DATA plan installed; see [Installing a SIM Card and/or Memory Card](#) on page 2-15 The carrier on the SIM card is the ISP.

## Establishing Data Communication


1. Touch  > **Settings**  > **Connections**  > **Connections** .
2. Under My ISP, touch **Add a new modem connection**.


3. Enter a name for the connection in the “Enter a name for the connection” box. Select **Cellular Line (GPRS)** from the drop-down list in the “Select a modem” box. Touch **Next**.

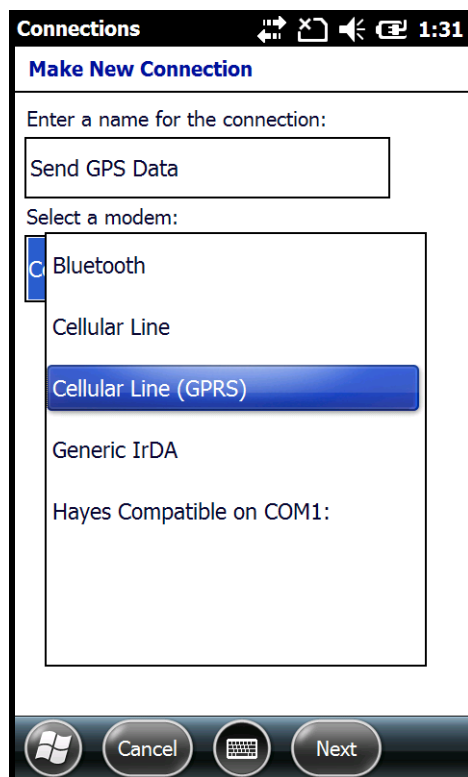


4. The "Access point name" field is automatically filled in with data retrieved from the active SIM card.  
*Note: If you want to manually configure the APN, user name and password fields instead of having the settings automatically retrieved from the SIM card, first uninstall/remove the RIL\_AutoAPN\_x\_x.CAB file.*
5. Touch **Next**.
6. The “User name” and “Password” fields are automatically filled in with data retrieved from the active SIM card.
7. Touch **Finish**.
8. The connection you just created should appear in the list on the **Modem** screen under **My ISP > Manage existing connections**.

- 
9. Touch and hold on the connection name. Select **Connect** on the popup menu.

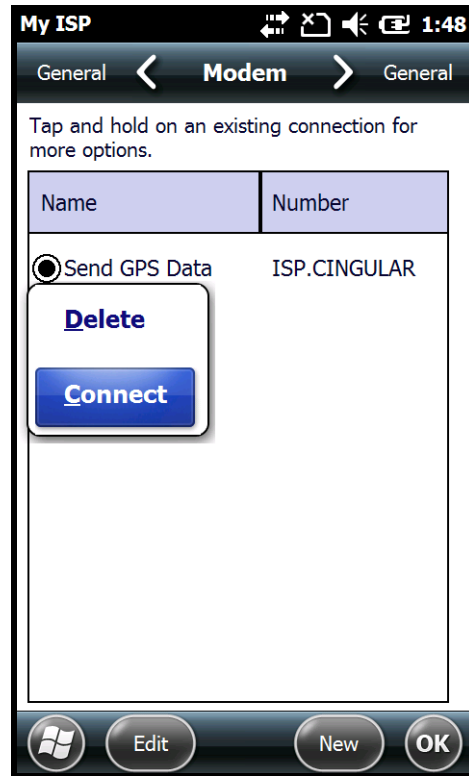

10. The network icon in the Title bar indicates the GSM radio is attempting to connect .



*Note: When the device is on a 2G (EDGE/GPRS) network, a data connection failure occurs if the phone is in use for a voice call while attempting a data connection. Simultaneous voice and data use is only supported if the device is on a 3G network. In 2G mode, a voice call takes precedence over data connections. Active data connections are placed in "park" mode automatically and the data is "retrieved" when the voice call ends.*

11. When the connection is complete, the network icon changes to: .


12. You can now send data over GSM.

### **Manual Network Selection (GSM/UTMS)**


You can select Automatic or Manual network selection. The Phone defaults to Automatic network selection.

1. When an active SIM card is inserted in the terminal, touch  > **Phone**  > **Menu** > **Options**.
2. Select the **Network** on the Horizontal Scroll bar.

- 
3. Under **Network selection**, select **Automatic** (the default selection) or **Manual**.

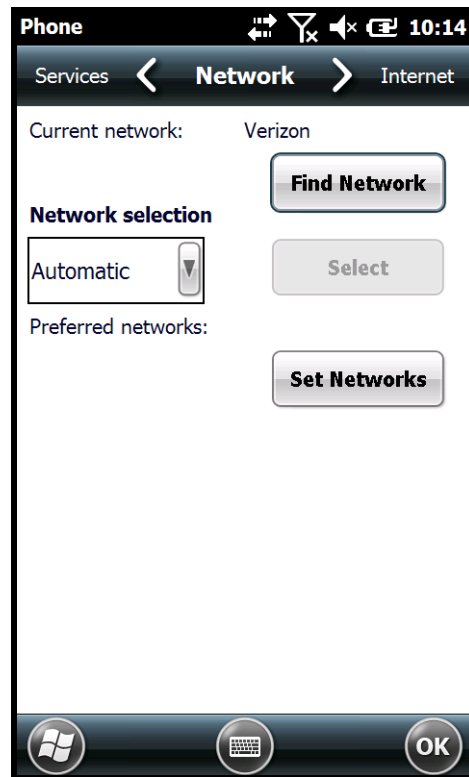

- a. If you select **Manual**, the Phone searches for available networks.  
b. Select a new network and touch **OK**.

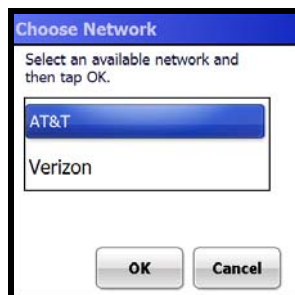

- c. The Phone registers on the new network and the Network screen appears.  
d. To switch to another network, touch the now active **Select** button to repeat the process.  
4. To switch back to automatic roaming, select **Automatic** under **Select networks**, then touch **OK**.






## Working with the Bluetooth Radio


### Enabling the Bluetooth Radio

You enable the Bluetooth radio in the [Dolphin Wireless Manager Window](#) (see page 7-5).

1. Touch  > **Settings**  > **Connections**  > **Dolphin Wireless Manager** .

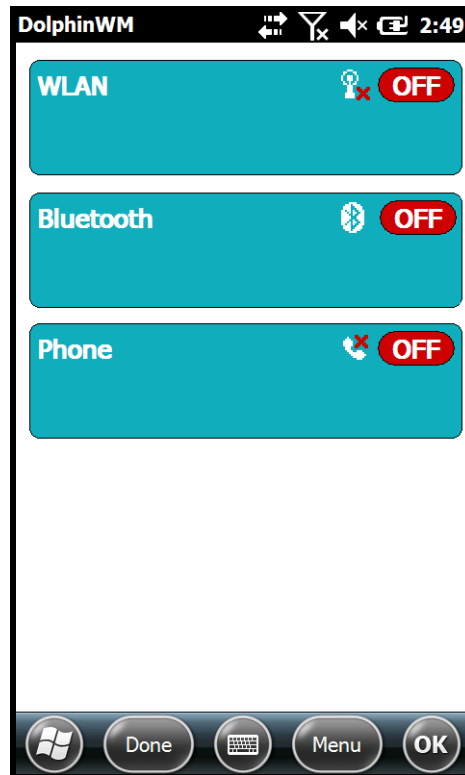

 2. Touch anywhere inside the Bluetooth rectangle to begin activation of the Bluetooth radio.



3. When the radio is activated (i.e., transmitting a signal), the **Off** button changes to **On**.



When the Bluetooth radio is transmitting a signal, additional text displays in the Bluetooth section providing information about the radio. “Visible” and “Not visible” indicates whether the Bluetooth radio is set to be discoverable or not discoverable by other Bluetooth devices. To make the terminal discoverable, [see page 9-6](#).

---

## Pairing and Trusted Devices

The terminal supports pairing. Pairing happens during the general connection setup. Paired devices are "trusted" devices. This means that there is unrestricted access to all services (including services that require authorization and authentication).

A connection can exclude pairing. A device that is connected to the terminal but not paired with it is considered an untrusted device. Content can still be passed to untrusted devices by requiring authorization with each attempt (for example, with the initialization of a file exchange).

## Connecting to Other Bluetooth Devices


To connect to other Bluetooth equipped devices, you need to perform a device discovery, select a discovered device, and then connect to the selected device. Pairing happens as part of the connection process.

1. Make sure the Bluetooth device is in range and set to be discoverable by other Bluetooth devices.
2. In the Dolphin Wireless Manager, touch **Menu** > **Bluetooth Settings**.

OR


Touch  > **Settings**  > **Bluetooth**  .

3. Touch **Add new device**. The terminal begins searching for discoverable Bluetooth devices.

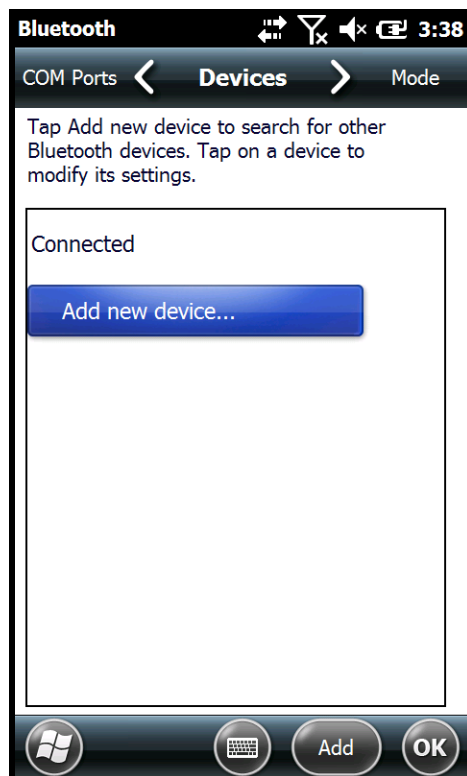

- 
4. Select a device from the list and touch **Next**.

The types of devices in the vicinity of the radio appear in the list of discovered devices.

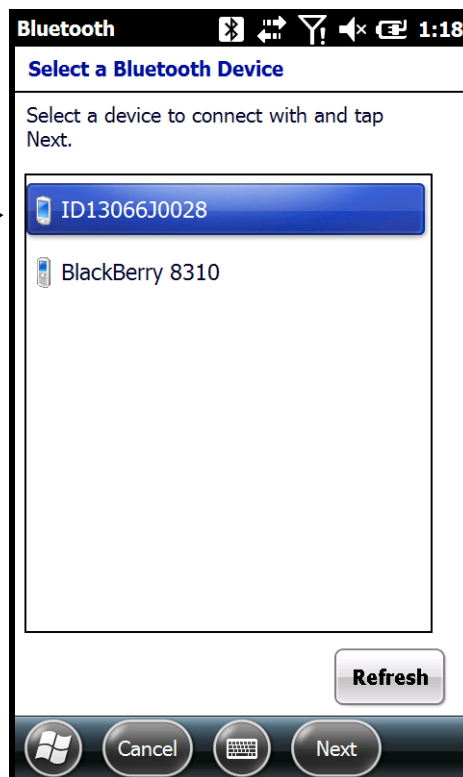

5. You are prompted to enter a passcode.

- If the device has a specific passcode, enter it in the **Passcode** field and touch **Next**.

When attempting to connect to a printer or headset with Bluetooth capabilities, the passcode may default to either 1111 or 0000. If there is no default, consult the device literature for the number.


- If the device does not have a specific passcode, you can enter one in the **Passcode** field and touch **Next** to create a passcode.

6. The Bluetooth radio tries to connect with the device.

7. If you created a passcode, you will be prompted by the other device to enter the same passcode. Enter the created passcode to establish a paired connection.

If you entered a device specific passcode, you should not have to do anything on the other device.

- When the connection is complete, a list of matching and supported services on the device appears. Only the services that are mutually supported on both devices appear in the Partnership Settings window.

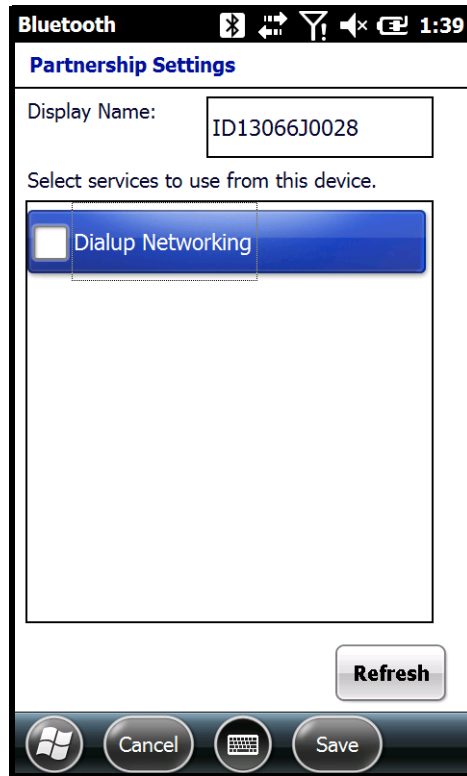

- Select the services you want to use and touch **Save**.

The services on the new devices have to be selected or the pairing won't include those services, even though the devices are paired. If services are not selected, you will be continually re-prompted for the passcode from the device.

- The device appears in the list on the main window.

*Note: If you are connecting to a printer or headset, complete any additional steps required by the device.*





- After the passcodes have been accepted on both sides, you have a trusted (paired) connection.


---

## Transferring Files using Beam File


Before attempting to transfer files, make sure the receiving Bluetooth device is in range, set to be discoverable by other devices, and set to receive incoming beams.

1. Touch  > **File Explorer**.
2. Navigate to the file you want to transfer.
3. Touch and hold on the file, then select **Beam File** on the popup menu.
4. The Bluetooth radio begins searching for devices. When a Bluetooth device is first found, it appears as an “Unknown device”. The  icon indicates that the device is a Bluetooth equipped device. As data is retrieved, the device IDs appear in the list.

During a search, Bluetooth equipped devices found within range appear on the screen.

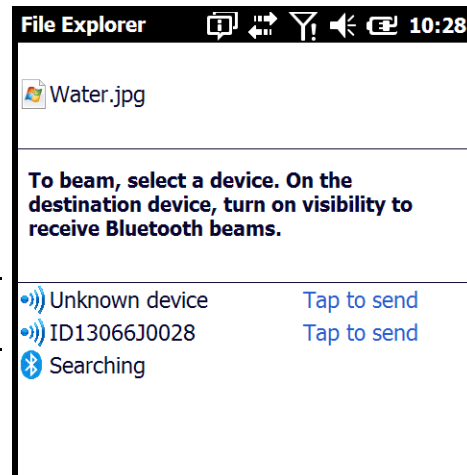

5. Touch a device on the list to begin sending the selected file.
6. The selected device reads “Pending” while the terminal tries to connect.

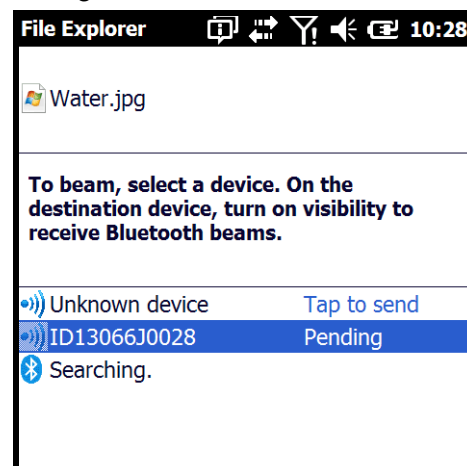

7. Once a connection is made and the file is being transferred, the selected device reads “Sending”.
8. The selected device reads “Done” when the transfer is complete.

---


## Making the Terminal Discoverable

By default, the Dolphin terminal is not discoverable, which means that the terminal will not be found by other Bluetooth devices.

1. To make the terminal discoverable, touch  > **Settings**  > **Bluetooth**  .



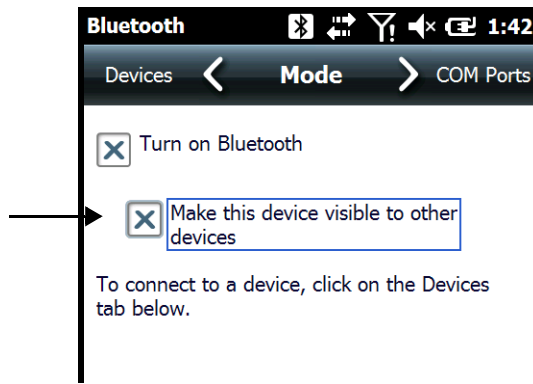

*Note: If you are in the Dolphin Wireless Manager, touch **Menu** > **Bluetooth Settings**.*

2. Touch **Mode** on the Horizontal scroll.
3. Select “Make this device visible to other devices” and touch **OK**.




## Enabling the Terminal to Receive Incoming Beams

By default, the Dolphin 60s terminal is not configured to receive incoming beams from other devices attempting file transfers via the Beam File command. Before initiating a file transfer from another device follow the steps below to enable Beam reception on your Dolphin terminal.

1. Touch  > **Settings**  > **Connections**  > **Beam**  .
2. Select “Receive all incoming beams.”
3. Touch **OK**.

## Selecting COM Ports

For more information on available COM ports, see [Dolphin 60s COM Port Assignment Table](#) on page 7-13.

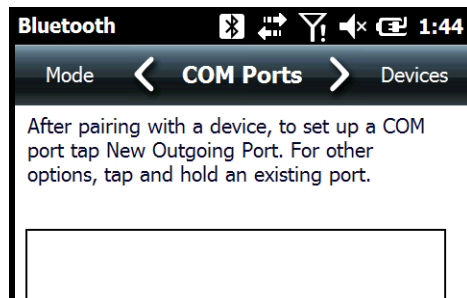

### Overview

The Dolphin 60s terminal contains an integrated GPS module that allows location tracking of workers and vehicles, providing better utilization of field assets. Optional mapping and navigation software provides turn-by-turn driving directions and location information.

### Assisted GPS Support

Assisted GPS (A-GPS) is turned on by default. The Dolphin 60s utilizes gpsOneXTRA Assistance™ Technology to improve time-to-first-fix (TTFF) positioning by using network resources for quicker satellite identification. The carrier agnostic feature downloads a file (approximately 40KB) containing ephemeris data from a Qualcomm® server approximately every 7 days.

*Note: A data connection is required and data transfer charges may apply depending on your carrier.*

### Powering the GPS Module

The GPS module powers on automatically when accessed by a software application and powers off automatically when that software application closes. You cannot manually power on and off the GPS module.

### Communication Port

There are two ways to access the GPS module: through the actual COM port (COM7) or the GPS Intermediate Driver. The method you use depends on the software application you are using. If the software application requires the actual COM Port, set the operating system to use COM7. If the software application requires the GPS Intermediate Driver, set the operating system to use the GPS Intermediate Driver.

### COM7

COM Port 7 can be set to the following baud rates:

- 4800
- 9600 (Default baud rate. Recommended for optimal performance.)
- 19200
- 38400

Other baud rates are not possible. The baud rate selected on COM7 is the actual baud rate with which the GPS communicates.

### GPS Intermediate Driver

When the first user of GPD1 opens the port, the GPS Intermediate Driver opens the COM7 port. The GPS Intermediate Driver allows multiple applications to open GPD1, and the GPS data is broadcast to all open ports.

When the GPSID driver is in use, the COM7 port is allocated to GPSID as READIWRITE (COM7 is still available for access mode of 0).

---

For more information about Microsoft's GPS Intermediate Driver, follow this link:  
<http://msdn.microsoft.com/en-us/library/ms850332.aspx>.

## ***GPS Demo***

The GPS Demo demonstrates the main functionality of the integrated GPS module. The GPS Demo uses COM7.

To see the GPS Demo, touch  > **Demos**  > **GPS Demo** .



## Dolphin 60s HomeBase Device (Model D60s-HB)

### Overview

The Dolphin 60s HomeBase (Model D60s-HB) is a charging and communication cradle that supports USB Hi-Speed 2.0v communication, which enables the terminal to interface with the majority of PC-based enterprise systems. The HomeBase also contains an auxiliary battery well that charges a spare Honeywell standard or extended battery.

The D60s-HB charger is designed for use with Dolphin 60s model terminals and battery part number 60s-BTEC (Li-ion 3.7 V, 12.358 watt hour), manufactured for Honeywell International Inc.



*We recommend use of Honeywell peripherals, power cables, and power adapters. Use of any non-Honeywell peripherals, cables, or power adapters may cause damage not covered by the warranty.*

### Unpacking the HomeBase

Open the shipping box and inspect the package to see that the following standard items are included:

- One Dolphin HomeBase, model D60s-HB
- One power supply (see [Power](#) on page 11-5)
- One power cord

These items are needed to operate the HomeBase. If any items are missing or anything appears to be damaged, contact your Customer Account Representative. Keep the original packaging in case you need to return the HomeBase for service or to store the HomeBase while not in use.

### Optional Equipment

A standard USB (Type A to B) cable is required when using the HomeBase for communication between the terminal and a host device.

### Charging Overview

The base provides power to the intelligent battery charging system in all Dolphin terminals that senses when a full charge has been achieved and switches to a trickle charge to maintain the full charge. The base completes a full charge of the main battery installed in the terminal seated in the terminal well in 6 hours for the extended battery. The base completes a full charge of the battery pack in the [Auxiliary Battery Well](#) (see page 11-3) in 6 hours for the extended battery.

*Note: Before attempting to use, charge, or replace the battery in the terminal, you should read the [Guidelines for Battery Pack Use and Disposal](#) on page 2-13.*



*We recommend use of Honeywell Li-ion battery packs. Use of any non-Honeywell battery may result in damage not covered by the warranty.*

### Communications

Reliable data communications at speeds of up to 480 Mbps can be transmitted by the base through the Hi-Speed USB port.

*Note: These bases cannot be physically connected to each other - sometimes referred to as “daisy-chained”.*

---

## Convenient Storage

The intelligent battery charging system makes this base a safe and convenient storage receptacle for your Dolphin terminal.


## Capacity

The base holds one terminal and features an auxiliary battery well behind the terminal well that can charge a battery pack independently of the terminal well. This means that one base can charge two battery packs: the one installed in the terminal and a spare.



*We recommend use of Honeywell peripherals, power cables, and power adapters. Use of any non-Honeywell peripherals, cables, or power adapters may cause damage not covered by the warranty.*

## Dimensions

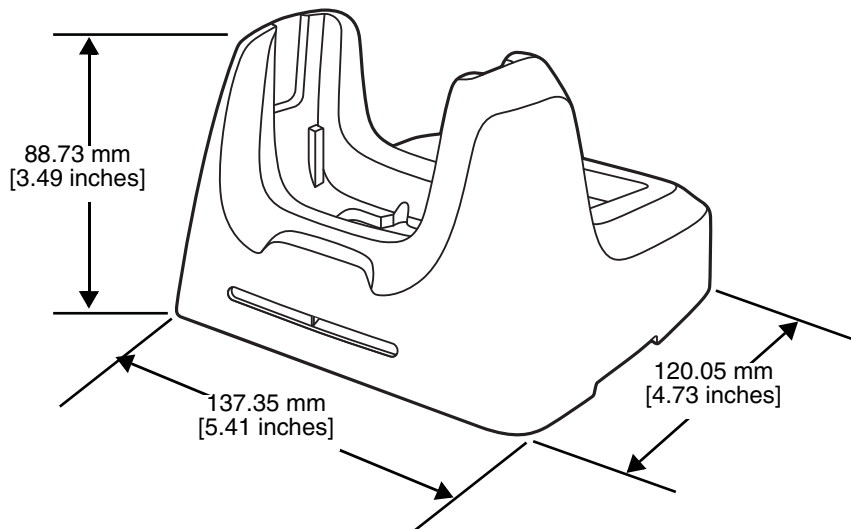


## Weight

HomeBase weight: 295g [0.65 lbs]

---

## Parts and Functions

### Front Panel

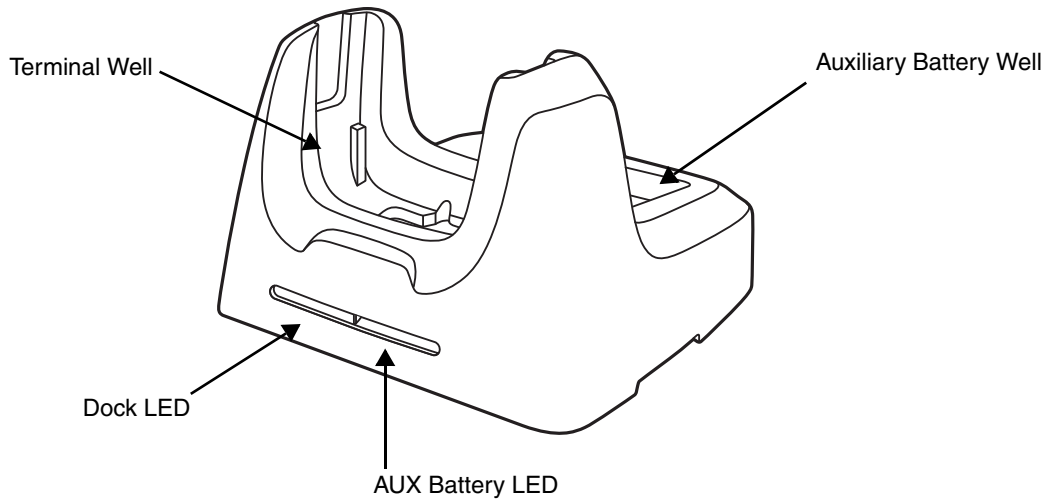

#### Terminal Well

Place the terminal in this well to communicate with a host device, power the terminal, and charge the installed battery pack. The base completely charges the main battery in a Dolphin terminal in 6 hours for the extended battery. If the host device is a workstation that uses ActiveSync or Windows Device Mobile, and the synchronization begins immediately.

#### Auxiliary Battery Well

See [Auxiliary Battery Well](#) on page 11-4.

#### AUX Battery LED

Indicates status of the battery charging in the auxiliary battery well; see [Back Panel](#) on page 11-4.

This color	means...
------------	----------

Orange	The auxiliary battery is charging.
--------	------------------------------------

Green	The auxiliary battery has completed charging and is ready for use.
-------	--

For information about charging a battery in the auxiliary battery well, see page 11-6.

#### Dock LED


Indicates if a terminal is docked properly in the base.

This color	means...
------------	----------

Green	The terminal is properly seated in the base.
-------	--

---

## Back Panel

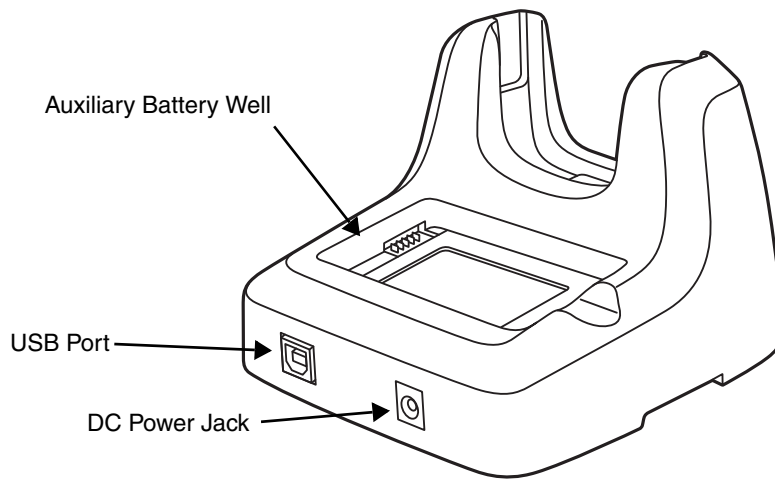

### Auxiliary Battery Well

The base enables you to charge an additional battery pack independently of the terminal well in 6 hours for the extended battery. This feature ensures that you can always have a fully-charged battery for your terminal. See [Charging a Spare Battery in the Auxiliary Battery Well](#) on page 11-6.

### USB Port

This USB port is USB v2.0 Hi-Speed (480 Mbps) compliant. Using a USB cable, you can connect the base to a host device, such as a workstation. USB communication occurs through Microsoft ActiveSync (v4.5 or higher) or Microsoft Windows Mobile Device Center (WMDC) depending on the host workstation's operating system. When the terminal is seated in the terminal well, it is connected to the host device via the base.

*Note: ActiveSync on your Dolphin terminal works with Windows Mobile Device Center on host workstations running Windows Vista or Windows 7 and with ActiveSync on host workstations running Windows XP. For detailed information on ActiveSync and WMDC visit Microsoft's Windows Mobile Web site.*


### DC Power Jack

See [Power](#) on page 11-5.

---


## Bottom Panel

For details on how to mount the HomeBase, see [Mounting the HomeBase](#) on page 11-7.

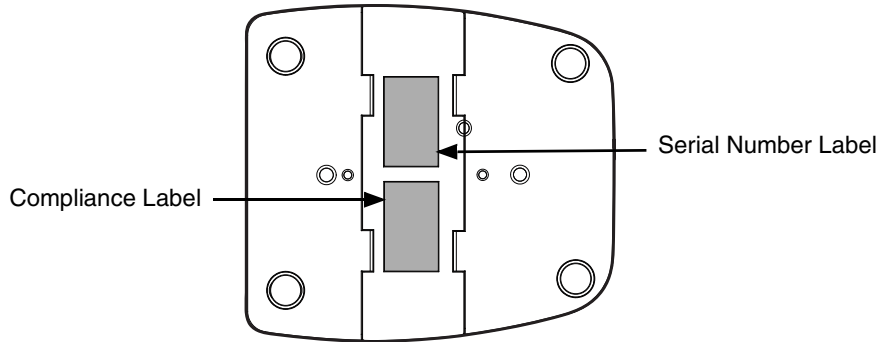


## Power

The base requires 12 Volts DC input for communications, battery charging, and power output to the terminal. The power adapter included with the base, converts the voltage from the AC power source to 12 Volts DC. **Use only a UL listed power supply, which has been qualified by Honeywell with output rated at 12VDC and 3 amps with the device.** The operating temperature range is 0° to 50°C (32° to 122°F) Honeywell recommends that you leave the base connected to its power source at all times, so that it is always ready to use.

 *We recommend use of Honeywell peripherals, power cables, and power adapters. Use of any non-Honeywell peripherals, cables, or power adapters may cause damage not covered by the warranty.*

## Connecting Power to the HomeBase

1. Plug the A/C power cord into the power adapter.
2. Plug the power cable into the power connector on the back of the HomeBase.
3. Plug the A/C power cord into a grounded power source.
4. The base is now powered.

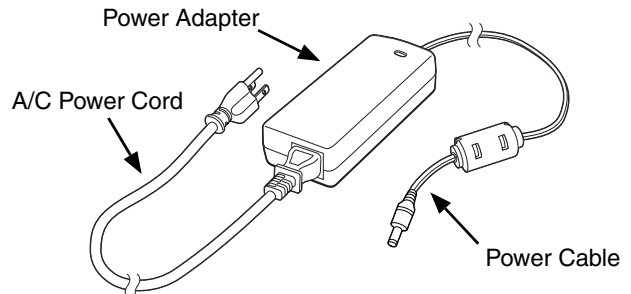


---


## Charging the Main Battery

The base provides power to the Dolphin terminal and allows the charging of the terminal's battery. The intelligent battery charging system incorporated into all Dolphin terminals prevents overcharging, which means that Dolphin terminals may be stored in the base indefinitely without damage to the terminals, battery, or the base. When the terminal is docked, the base completes a full charge in 6 hours for the extended battery.

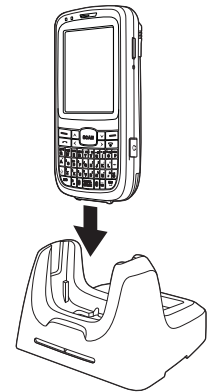

For more information about Honeywell battery packs and how to check battery power levels in your terminal, refer to [Power](#) (page 6-18) and [Battery](#) (page 2-10).




### To Power a Terminal and Charge its Main Battery

 *Ensure all components are dry prior to mating terminals/batteries with peripheral devices. Mating wet components may cause damage not covered by the warranty.*

1. Install the battery pack in the terminal; see [Install the Battery](#) on page 1-1.
2. Slide the terminal into the terminal well. The Dock LED illuminates green. Battery charging begins immediately if required by the Dolphin terminal.

*Note: When the terminal is docked, the Battery Icon changes from  to  indicating the terminal is running on external power. Battery charging occurs in the background. When the Dolphin is removed from the base, the battery icon indicates the charge level of the battery, see [Icons in the Title Bar](#) on page 1-4. For additional information on how to check the power levels of the battery, while the terminal is docked, see [Checking Battery Power](#) on page 2-14.*

 *We recommend use of Honeywell Li-Ion battery packs. Use of any non-Honeywell battery may result in damage not covered by the warranty.*


### Charging a Spare Battery in the Auxiliary Battery Well

The auxiliary battery well located on the back of the base charges a spare battery independently of the terminal well. The Aux Battery LED on the front panel indicates the status of the battery in this well. Charge time is 6 hours for the extended battery pack; see [Auxiliary Battery Well](#) on page 11-4.

1. Insert the battery at an angle.

*Note: Align the battery contacts with the contacts inside the auxiliary battery well.*

2. Snap the battery into place with a hinging motion. The Aux Battery LED lights orange during charging.
3. Use the AUX Battery LED to monitor the charging progress. The LED changes to green when the auxiliary battery has completed charging and is ready for use.

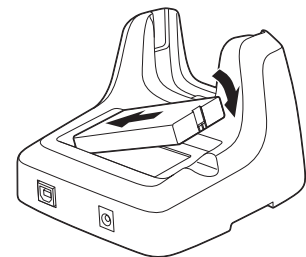

## Communication



Dolphin terminals support USB communications out of the box. The base also supports USB communications via the USB port located on the back. The base acts as a USB device by interfacing the USB signals of the Dolphin terminal to the USB of the host workstation. Using a standard USB cable, the base's USB interface allows the Dolphin terminal to communicate with a workstation.

---

## **Requirements**

- A base powered by a power cable and power adapter cable
- A standard USB (Type A to B) communication cable
- A work station running Windows 98 Second Edition, Windows Me, Windows 2000, Windows NT (4.0 SP6 or higher), Windows XP, Windows Vista, or Windows 7.
- ActiveSync (v4.5 or above) or Windows Mobile Device Center on the workstation

## **Setting Up and Connecting the Dolphin Terminal to the HomeBase**

1. Connect power to the HomeBase (see [Power](#) on page 11-5).
2. Plug the USB communication cable into the USB port on the back of the base.
3. Connect the other end of the USB cable to the host workstation.
4. Insert the Dolphin terminal into the terminal well of the base. The Dock LED illuminates green.
5. The Dolphin terminal activates and automatically opens ActiveSync to establish a connection.
6. The connection icon in the Dolphin's navigation bar changes from  to  it indicates a successful connection. The base can now transfer data between the terminal and the host device.

## **Mounting the HomeBase**

Set the base on a dry, stable surface, such as a desktop or workbench near an electrical outlet. Be sure to provide enough workspace with good lighting for the user to view and operate the Dolphin terminal while it is in the base. When choosing a mounting location, bear in mind that the location must allow users' easy access to the Auxiliary Battery Well and the back panel of the HomeBase where the USB port and the power jack are located.

### **Desk Mounting**

The DIN rail slot (7.5 X 35 mm) may be mounted on the bottom to allow for secure desk attachment of the unit if desired.


### **Hardware Required**

- 3/16 in. dia x 5/8 in. long pan head screw
- 1/2 in. OD x 7/32 in. ID x 3/64 in. thick
- 3/16 in. dia nut

### **Installing the DIN Rail**

1. Slide the DIN rail into the slot along the bottom panel of the base.

- 
2. Then, using the appropriate nuts and bolts, secure the DIN rail to the desk or flat surface.

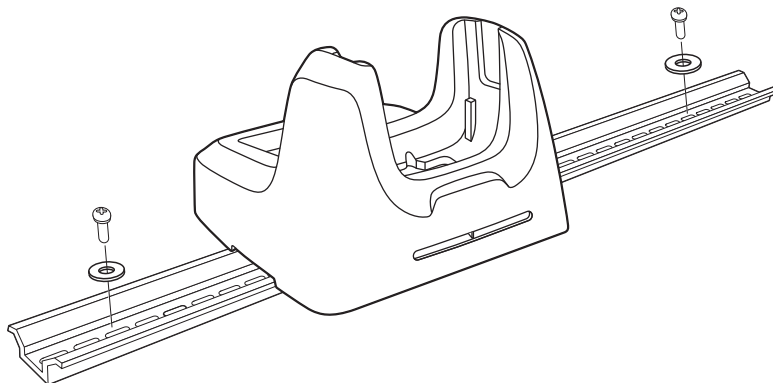




## Dolphin 60s Mobile Charger Devices

### Overview

The Dolphin Mobile Charger is designed specifically for in-premise and in-transit data collection applications. The 60s-MC features a cigarette lighter adapter. The 60s-DEXKIT features a cigarette lighter and DEX cable. The 60s-DB9KIT features a cigarette lighter and DB9 cable.


The 60s-MC, 60s-DEXKIT, and 60sDB9KIT chargers are designed for use with Dolphin 60s model terminals.

 We recommend use of Honeywell peripherals, power cables, and power adapters. Use of any non-Honeywell peripherals, cables, or power adapters may cause damage not covered by the warranty.


### Charging Overview

The charger provides power to the intelligent battery charging system in all terminals that senses when a full charge has been achieved and switches to a trickle charge to maintain the full charge. The charger completes a full charge of the main battery in 6 hours for the extended battery pack.

Note: Before attempting to use, charge, or replace the battery in the terminal, you should read the [Guidelines for Battery Pack Use and Disposal](#) on page 2-13.

 We recommend use of Honeywell Li-Ion battery packs. Use of any non-Honeywell battery may result in damage not covered by the warranty.


### Mobile Charger Components (60s-MC)

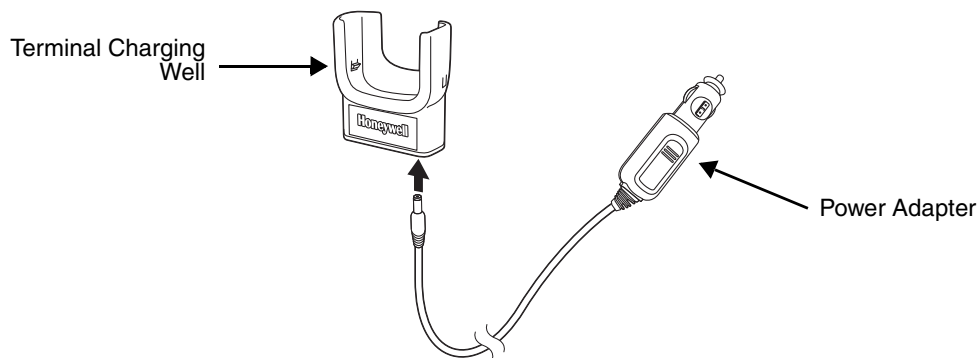

### Power Adapter

The mobile charger is provided with a power adapter cable that can be connected to a vehicle cigarette lighter outlet.

UL listed power supply  
 Input: 10V - 30VDC, 0.43A(30V) - 1.28A(10V)  
 Output: 4.75V - 5.25VDC, 0 - 2A


 Verify that the power source is always within the specified range and observe correct input voltage polarity. An improper input voltage range or reverse polarity could damage the power conversion circuitry.

---

## Terminal Charging Well

Place the terminal in this well to charge the battery.

## Mobile Charger with DEX Cable Components (60s-DEXKIT)

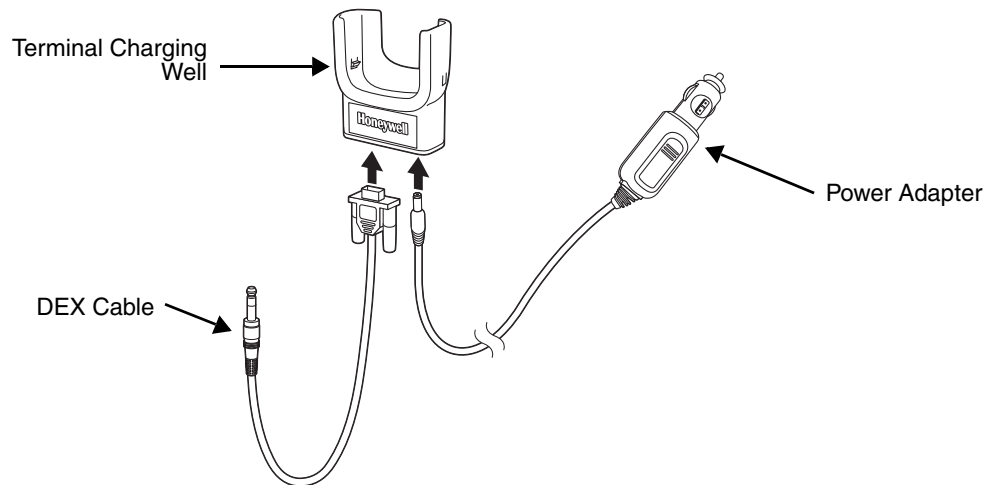


## DEX Cable

The mobile charger is provided with a DEX cable that can be connected to a vending machine.

## Power Adapter

The mobile charger is provided with a power adapter cable that can be connected to a vehicle cigarette lighter outlet.

UL listed power supply  
Input: 10V - 30VDC, 0.43A(30V) - 1.28A(10V)  
Output: 4.75V - 5.25VDC, 0 - 2A


 *Verify that the power source is always within the specified range and observe correct input voltage polarity. An improper input voltage range or reverse polarity could damage the power conversion circuitry.*

## Terminal Charging Well

Place the terminal in this well to charge the battery.

---

## Mobile Charger with DB9 Cable Components (60s-DB9KIT)

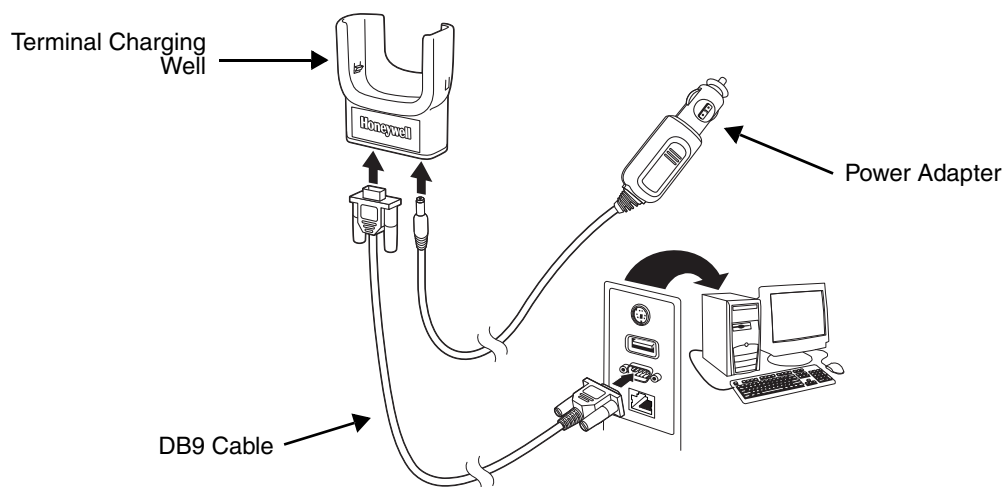


### DB9 Cable

The mobile charger is provided with a DB9 cable that can be connected to a computer RS232 port.

### Power Adapter

The mobile charger is provided with a power adapter cable that can be connected to a vehicle cigarette lighter outlet.

UL listed power supply  
Input: 10V - 30VDC, 0.43A(30V) - 1.28A(10V)  
Output: 4.75V - 5.25VDC, 0 - 2A

 *Verify that the power source is always within the specified range and observe correct input voltage polarity. An improper input voltage range or reverse polarity could damage the power conversion circuitry.*

### Terminal Charging Well

Place the terminal in this well to charge the battery.

## Charging the Main Battery

The mobile charger provides power to the Dolphin and allows charging of the main batteries in the terminal. The main battery charges in 6 hours for the extended battery. The intelligent battery charging system incorporated into all Dolphin terminals prevents overcharging, which means that terminal may be seated in the charger indefinitely without damage to the terminal, battery pack, or the charger.

For more information about Honeywell battery packs and how to check battery power levels in your terminal, refer to [Power](#) (page 6-18) and [Battery](#) (page 2-10).

---

## To Power a Terminal and Charge its Main Battery



Ensure all components are dry prior to mating terminals/batteries with peripheral devices. Mating wet components may cause damage not covered by the warranty.



We recommend use of Honeywell Li-Ion battery packs. Use of any non-Honeywell battery may result in damage not covered by the warranty.

1. Install the main battery in the terminal; see [Install the Battery](#) on page 1-1.
2. Install the Dolphin 60s into the terminal well.



3. To charge the Dolphin 60s, connect the power adapter to a vehicle cigarette lighter outlet.

## Dolphin 60s Terminal Agency Information

Dolphin 60s mobile computers meet or exceed the requirements of all applicable standards organizations for safe operation. The best way to ensure safe operation is to use the mobile computer according to the agency guidelines in this user guide and on the regulatory sheet shipped with the terminal. Read all guidelines before using your Dolphin terminal. To download product documentation for the Dolphin 60s mobile computer, go to [www.honeywellaidc.com](http://www.honeywellaidc.com).

This documentation is relevant for the following Dolphin models: 60sLU, 60sLE, 60sLP, and 60sL0.

Publicly downloadable certificates are available at [www.honeywellaidc.com/compliance](http://www.honeywellaidc.com/compliance).




**CAUTION** - Read the [Guidelines for Battery Pack Use and Disposal](#) on page 2-13 and all cautionary markings on the battery, charging peripheral, or device using the battery before attempting to install, use, or charge the battery. **Risk of fire and burns if improperly handled. Do not open, crush, heat above 60°C (140°F), or incinerate.**

### Label Locations

Back Panel of the terminal with the battery door and battery removed.

Compliance Labels and Marks

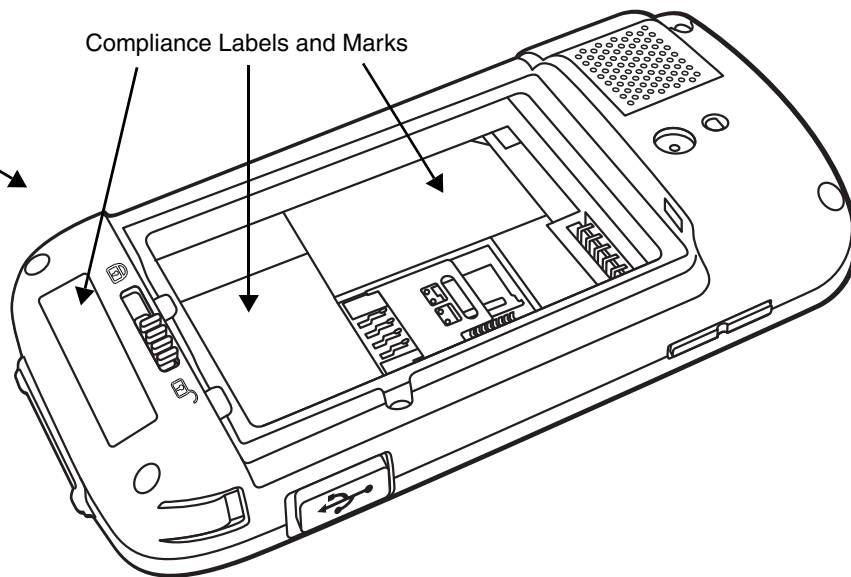

### Model Number, Serial Number and IMEI Labels

The model (item) number, serial number, and international mobile equipment identity (IMEI) number for the terminal are located on labels affixed to the bottom of the battery well.



---

---

## **Honeywell Scanning & Mobility**

9680 Old Bailes Road

Fort Mill, SC 29707

[www.honeywellaidc.com](http://www.honeywellaidc.com)