PROTON



Note: The interface of printer showed in picture may have some differences from the model your purchased. As for the actual interface, please refer to the product specifications





Print media loading





Ribbon loading



1.Insert blue ribbon roller into new ribbon.

2.Load ribbon left side first and then right side, fix it well.

3.Press the button to open ribbon holder unit as per picture	4.Insert blue ribbon roller into the empty roll for ribbon collecting after printed	5.Load the empty roll left side first, then right side.
6.Pull out ribbon and stick into the empty roll. Make sure ribbon is flat and smooth when touch print head.	7.Put ribbon holder back to its position as picture showing.	8.Carefully close top cover.





 $^{\ast}\mbox{If}$ you need more information about the product, please refer to the User's Manual in CD. "The printer specification, accessory, spare parts and program are subject to change without prior notice.

