SHENZHEN CHAINWAY INFORMATION TECHNOLOGY CO., LTD

C6000 User Manual

Statement

2013 by ShenZhen Chainway Information Technology Co., Ltd. All rights reserved.
No part of this publication may be reproduced or used in any form, or by any electrical or mechanical means, without permission written from Chainway. This includes electronic or mechanical means, such as photocopying, recording, or information storage and retrieval systems. The material in this manual is subject to change without notice.

The software is provided strictly on an “as is” basis. All software, including firmware, furnished to the user is on a licensed basis. Chainway grants to the user a non-transferable and non-exclusive license to use each software or firmware program delivered hereunder (licensed program). Except as noted below, such license may not be assigned, sublicensed, or otherwise transferred by the user without prior written consent of Chainway. No right to copy a licensed program in whole or in part is granted, except as permitted under copyright law. The user shall not modify, merge, or incorporate any form or portion of a licensed program with other program material, create a derivative work from a licensed program, or use a licensed program in a network without written permission from Chainway.
Chainway reserves the right to make changes to any software or product to improve reliability, function, or design.
Chainway does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.
No license is granted, either expressly or by implication, estoppel, or otherwise under any Chainway intellectual property rights. An implied license only exists for equipment, circuits, and subsystems contained in Chainway products.

Contents

Statement 2
Chapter 1 Brief Instruction 5
1.1 Brief Instruction 5
1.2 Precaution Before Using Battery 5
Chapter 2 Installation Guide 8
2.1 Appearance 8
2.2 Buttons 9
2.3 Micro SD、SIM、PSAM Card Installation 10
2.4 Battery Charging 10
2.5 Device Power on/off 11
Chapter 3 Call Function 12
3.1 Phone 12
3.2 Contacts 13
3.3 Messaging 14
Chapter 4 Barcode Reader 15
Chapter 5 RFID Reader 16
5.1 High Frequency 16
5.1.1 14443A 16
5.1.2 14443B 17
5.1.3 15693 18
5.2 NFC 19
Chapter 6 Other Functions 20
6.1 PING 20
6.2 Bluetooth 21
6.3 GPS 22

6.4 Volume Settings 23
6.5 Sensor 24
6.6 Keyboard 25
6.7 Network 25
Chapter 7 Device Specifications 26

Chapter 1 Brief Instruction

1.1 Brief Instruction

Chainway C6000 is a series of Android powered smart terminals, with data capture, data processing, wireless communication. It is with high-reliability & high-expansibility. Auto & Accurate data collection is achieved in various business fields via a complete solution of premium options, the flexible solution among options and operators is suited-up. You will find out with C6000, much easier deployment, reduced complexity, decreased maintenance, are the benefits for enterprises.

C6000 meets industrial level IP65 (IEC sealing), is sufficient to routine applications, eg, railway inspection, road parking toll, vehicle inspection, logistics express, power inspection, warehousing management, chain retail, etc. Whether the mobile operators are working indoor or outdoor, with Chainway C6000, your business is always &highly efficient on-line.

Meeting industrial standards, designed to support various of mobile solutions. With the build-in high performance Cortex-A7 1GHZ quad core processor technology, the operators need only one device to enjoy a convenient and easy job, C6000 will be the ideal choice for key-fact business in mobile solutions, for simplified task flow, enhanced work efficiency, for shortened time to customer response, more satisfied customer care service.

Chainway C6000 comes with world wide band 4G technology. Multi channels data and voice communication guarantees the real-time communication and data efficiency, C6000 brings you the best ROI.

1.2 Precaution Before Using Battery

- Do not leave batteries unused for extended periods of time, either in the product or in storage. When the battery has been unused for 6 months, check the charge status and charge or dispose of the battery as appropriate.
- The typical estimated life of a Lithium-Ion battery is about two to three years or 300 to 500 charge cycles, whichever occurs first. One charge cycle is a period of use from fully charged, to fully discharged, and fully recharged again. Use a two to three year life expectancy for batteries that do not run through complete charge cycles.
- Rechargeable Lithium-Ion batteries have a limited life and will gradually lose their capacity to hold a charge. This loss of capacity (aging) is irreversible. As the battery loses capacity, the length of time it will power the product (run time) decreases.
- Lithium-Ion batteries continue to slowly discharge (self-discharge) when not in use or while in storage. Routinely check the battery's charge status. The user manual typically includes information on how to check battery status, as well as battery charging instructions.
- Observe and note the run time that a new fully-charged battery provides for powering your product. Use the new battery run time as a basis to compare run times for older batteries. The run time of your battery will vary depending on the product's configuration and the applications that you run.
- Routinely check the battery's charge status.
- Carefully monitor batteries that are approaching the end of their estimated life.
- Consider replacing the battery with a new one if you note either of the following conditions:
- The battery run time drops below about 80% of the original run time.
- The battery charge time increases significantly.

- If a battery is stored or otherwise unused for an extended period, be sure to follow the storage instructions in this document. If you do not follow the instructions, and the battery has no charge remaining when you check it, consider it to be damaged. Do not attempt to recharge it or to use it. Replace it with a new battery.
- Always follow the charging instructions provided with your product. Refer to your product's user manual and/or online help for detailed information about charging its battery.
- Charge or discharge the battery to approximately 50% of capacity before storage.
- Charge the battery to approximately 50% of capacity at least once every six months.
- Remove the battery and store it separately from the product.
- Store the battery at temperatures between 5 °C and 20 °C (41 °F and 68 °F).

Chapter 2 Installation Guide

2.1 Appearance

The C6000 device has black and white appearance optional.

2.2 Buttons

Button	Function
Power Button	Press and hold to turn the device on or off.
Custom Function Button	Customize function by software
SCAN	Scan Button
X	Cancel Button
Num	Switch white keyboard function
Fn	Switch orange keyboard function
Setting Button	Right of the Fn Button
Enter	Enter Button

2.3 Micro SD、SIM、PSAM Card Installation

Detailed installation of Micro SD、SIM、PSAM Card steps are as follows:

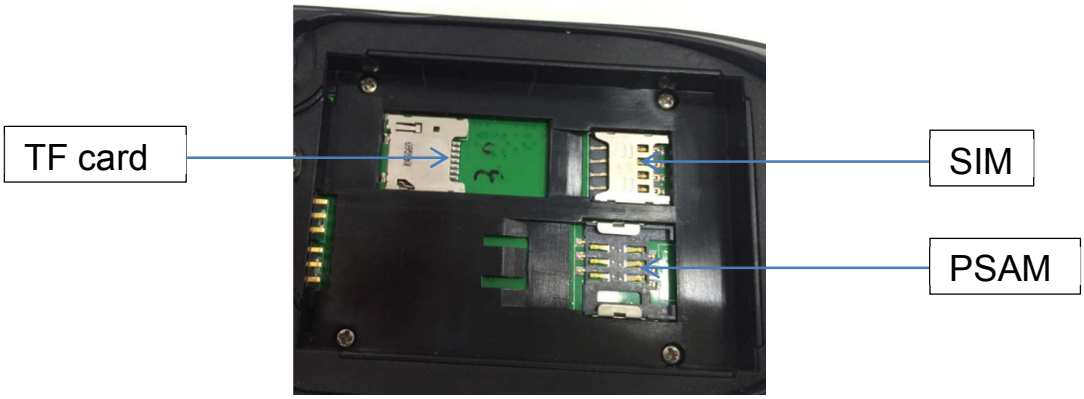

2.4 Battery Charging

Use the adapter to charge the battery via the USB connector of the snap-on. Don't use other brands of charger for device.

2.5 Device Power on/off

Press the ‘Power’ button on the top about 3s due to power on/off. And press it shortly to wake up.

Chapter 3 Call Function

3.1 Phone

Click this icon .
Click the number button to input the numbers.
Click the button to confirm and dial.
Click the to end the calling.

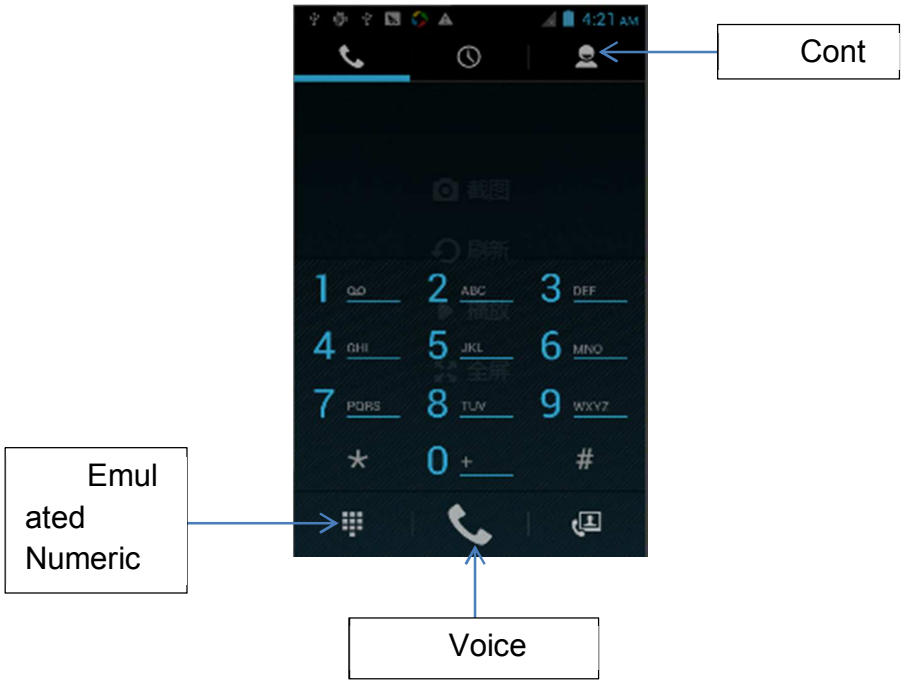

3.2 Contacts

Click ‘Contacts’ to open the contacts list.

Click to add the new contact.

Click to import/export or delete the contact list.

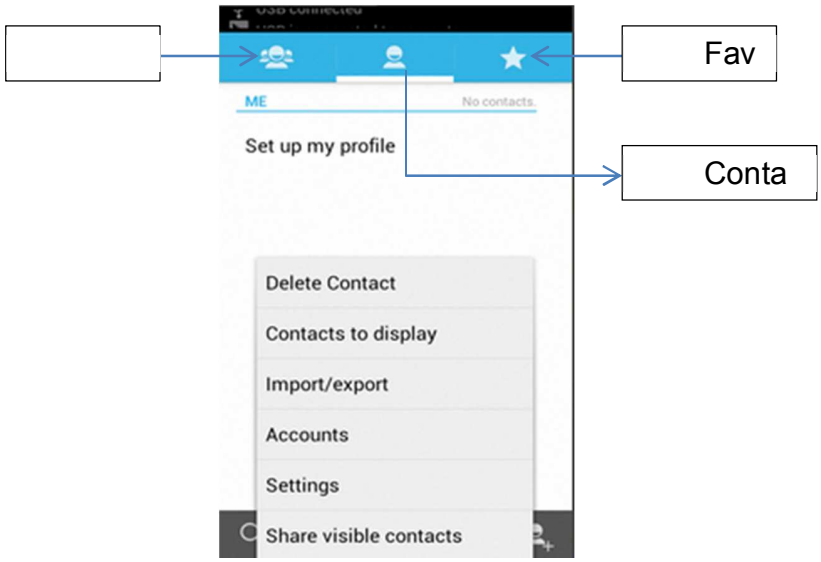

3.3 Messaging

Click to open the message list.

Click to input the content.

Click to send the message.

Click to add photos, videos.

Chapter 4 Barcode Reader

Open the Barcode Demo in APP Center and then press the ‘Scan’ button to start scanning.

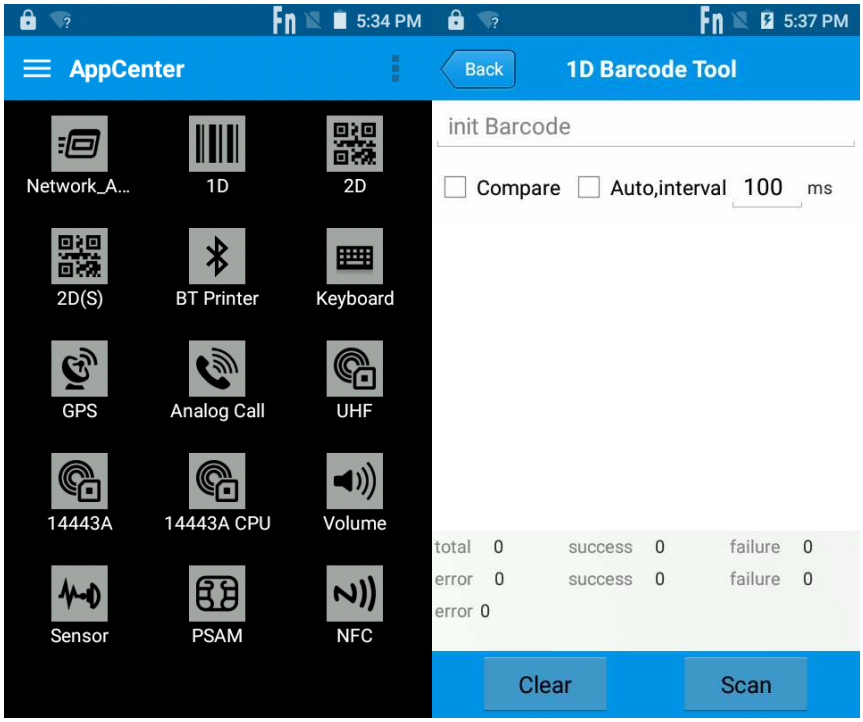

Note: Please scan the barcode correctly, otherwise the scanning might be failed.

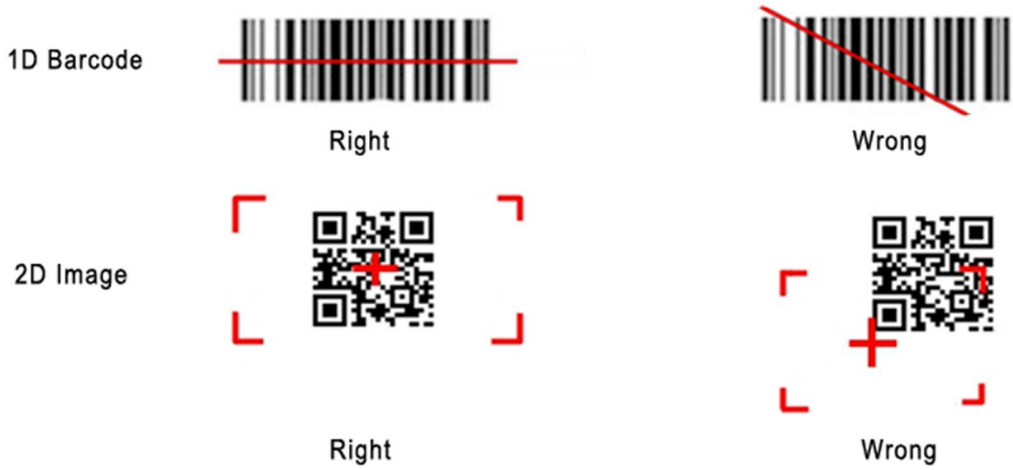

Chapter 5 RFID Reader

5.1 High Frequency

5.1.1 14443A

Open the 14443A demo within Appcenter, and press the ‘Scan’ button to start reading.
Mifare and Ultralight reading/writing are also supported.

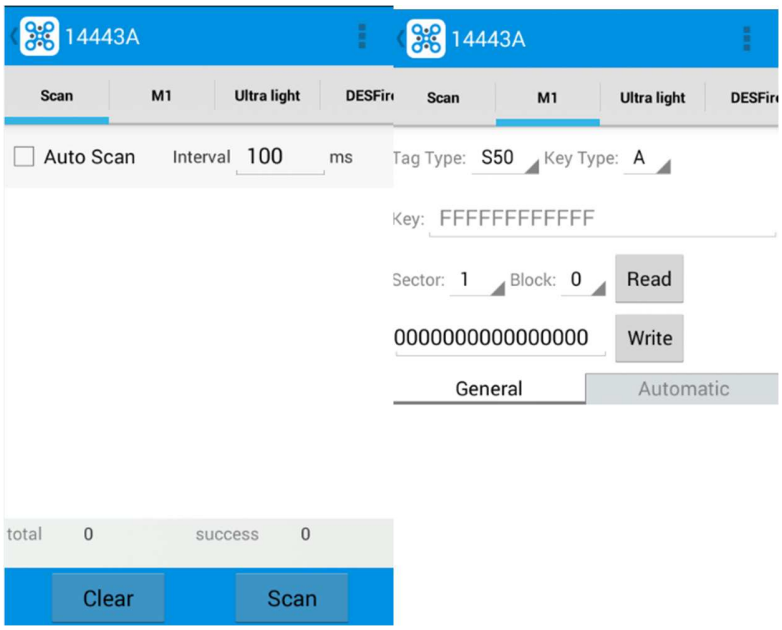

5.1.2 14443B

Open the 14443B demo within Appcenter, and gain UID of the card.

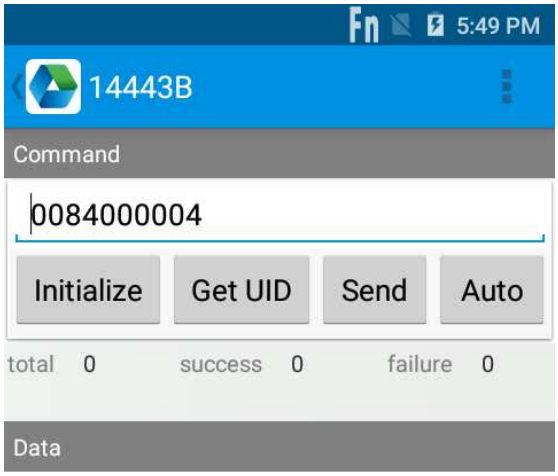

5.1.3 15693

Open the “15693” demo within Appcenter, and then reading and writing information of the tag.

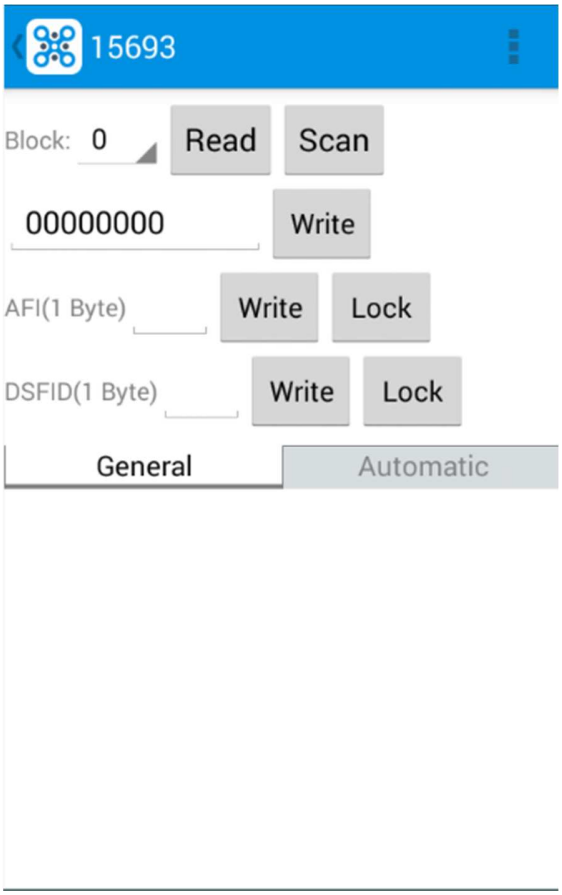

5.2 NFC

Open the “NFC” demo within Appcenter, and then reading and writing information of the tag.

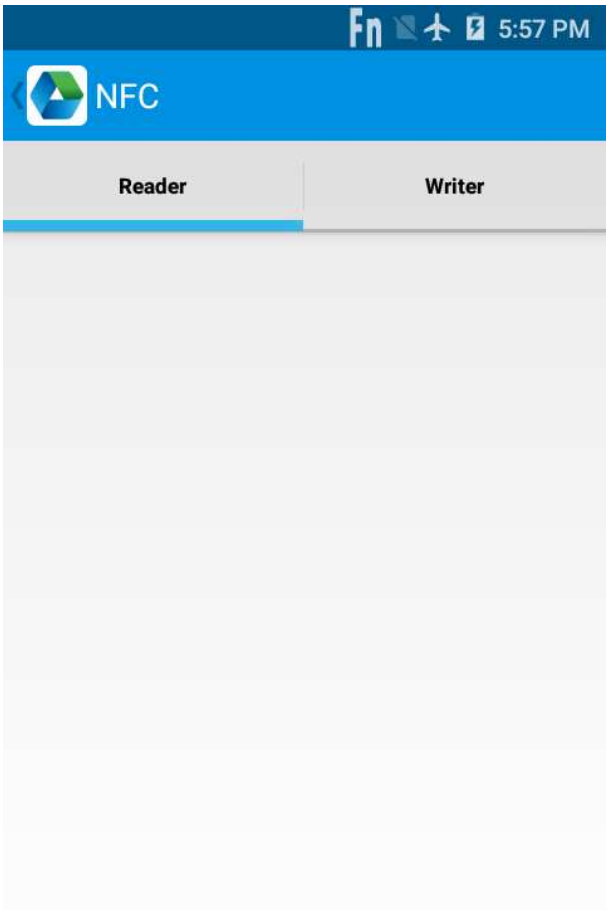

Chapter 6 Other Functions

6.1 PING

1. Open the Ping in Appcenter.
2. Set the Ping parameters and select the internal/external addresses.

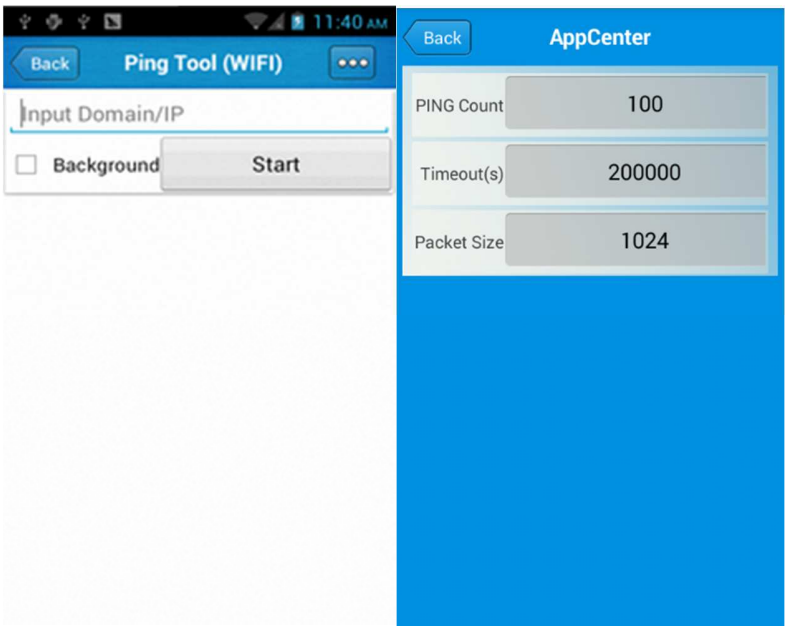

6.2 Bluetooth

1. Open the Bluetooth demo in Appcenter and turn on the Bluetooth.

2. Input the content or select the file, then scan the nearby Bluetooth printer and pair them.

3. Select the printer and click ‘Print’ to print the content.

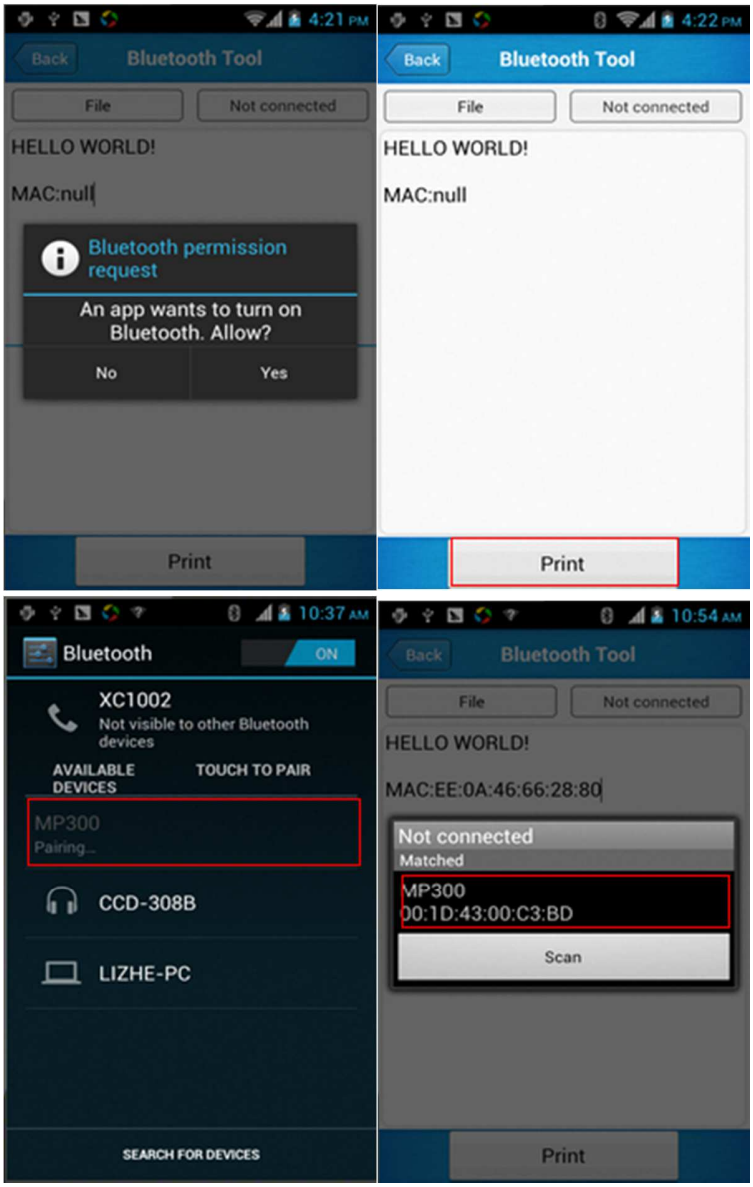

6.3 GPS

1. Open the GPS demo in Appcenter and turn on GPS module.

2. Set the GPS parameters and get the GPS data information.

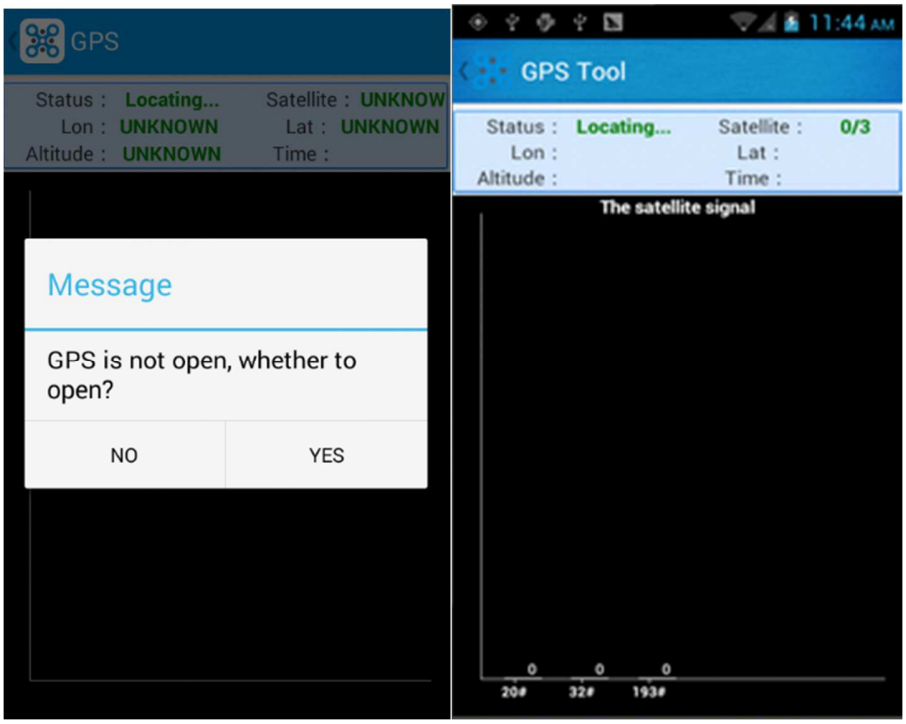

6.4 Volume Settings

1. Open the Volume Setting demo in Appcenter.
2. Set the volumes based on the requirements.

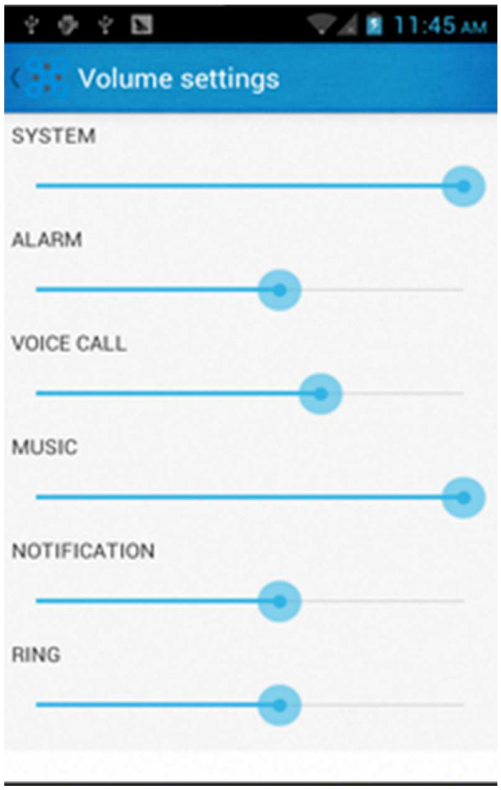

6.5 Sensor

1. Open the Sensor demo in Appcenter.
2. Test the sensor based on the requirements.

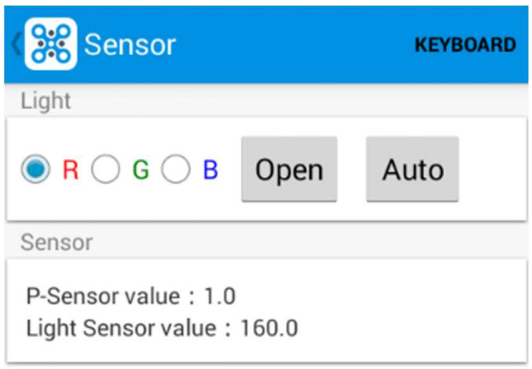

6.6 Keyboard

1. Open the Keyboard demo in Handset Appcenter.
2. Set and test the key values of the device.

6.7 Network

1. Open the Network demo in Appcenter.
2. Test the WIFI/Mobile signal based on the requirements.

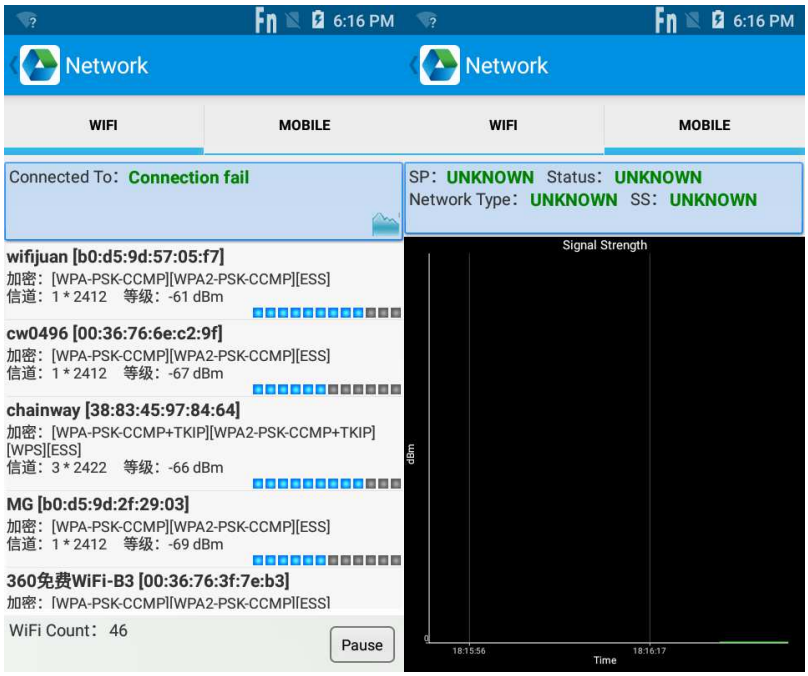

Chapter 7 Device Specifications

Physical Parameters

Dimensions	157.6mm*73.7mm*29mm
Weight	297g (includes main battery)
Screen	4in.WVGA (480*800) TFT-LCD, capacitive dual touch
Keyboard	numeric keypad, 3 side buttons
Battery	Main bat. (rechargeable li-ion polymer, 3.7V, 4000 mAh)
Expansion Slot	MicroSD/TF, maximum capacity of 32G
SIM Slot	1 PSAM, 1 SIM, 1 MicroSD
Audio	0.5W wat
Camera	OV 8M pixels, auto focus (optional)

Performance Parameters

CPU	Qualcomm 8909 1.3GHz quad core
OS	Android 5.1
Memory	1GB RAM, Build-in 8GB Flash
Interface	USB Micro-B,
Storage Card Type	TF card
Maximum Expansion Storage	32GB

Environmental Parameters

Operating Temperature	-10℃ to 50℃
Storage Temperature	-40℃ to 70℃
Humidity	5%RH-95%RH (non-condensing)
Dropping Survive	1.5m/3.9ft. drop, 6 sides, concrete floor under operating temp.
Sealing	IP65, IEC compliance

Wireless Communication

WWAN	EU: 2G: 850/900/1800/1900MHz 3G: 850/900/1900/2100MHz 4G: B1, B3, B5, B7, B8, B20, B40 US: 2G: 850/900/1800/1900MHz 3G: 850/900/1700/1900MHz 4G: B2, B4, B7, B12, B17 CN: 2G: 900/1800MHz 3G: 900/1900/2000/2100MHz 4G: B1, B3, B38, B39, B40, B41
WLAN	IEEE802.11 a/b/g/n, internal antenna
WPAN	Bluetooth v4.0

Data Collection

1D Barcode Scan Engine	1D barcode (Symbol SE955, laser, hardware decoding): UPC/EAN, Code128, Code39, Code93, Code11, Interleaved 2 of 5, Discrete 2 of 5, Chinese 2 of 5, Codabar, MSI, RSS, etc. 2D barcode (Symbol SE4500，COMS, software decoding)： Data Matrix, QR Code, Aztec Code, PDF417, US Planet, UK Postal, etc.
2D Barcode Scan Engine	2D CMOS laser scanner: Symbol SE4500 Sensor resolution: 750 (horizontal) * 480 (perpendicular) pixel (gray level) Roll tolerance: 360º Pitch tolerance: ±60º Skew tolerance: ±60º Ambient light: 9000ft.candles/96900 lux (lightless) Aiming LED (VLD): 655nm ± 10nm Illumination element: 650nm ± 5nm Field of view: 40º horizontal，25º perpendicular Barcode type: PDF417, MicroPDF417, Composite, RSS, TLC-39, Datamatrix, QR code, Micro QR code, Aztec, MaxiCode; Postal Codes: US PostNet, US Planet, UK Postal, Australian Postal, Japan Postal Dutch Postal (KIX),etc. Decode ranges: SR Focus Near Far 5 mil Code 39: 2.1 in./53 mm. 7.5 in./191 mm. 100% UPC/ENA: 1.6 in./41 mm. 15.5 in./394 mm. 6.7 mil PDF417: 3.4 in./86 mm. 7.1 in./180 mm.
RFID	HF 13.56MHz, ISO14443A/ISO15693 (optional).

Developing Environment

SDK	Chainway SDK
Programming Language	Java
Developing Tool	Eclipse/Android Studio